



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT ISL79CS. You'll find the answers to all your questions on the INDESIT ISL79CS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT ISL79CS
User guide INDESIT ISL79CS
Operating instructions INDESIT ISL79CS
Instructions for use INDESIT ISL79CS
Instruction manual INDESIT ISL79CS

Instruction booklet

TUMBLE DRYER

GB English, 1	I Italiano, 13	F Français, 25	Contents Installation, 2 Where to put your dryer Ventilation Door reversal instructions Water drain Electrical connection Before you start using your dryer Dryer description, 3 To open the door The features Control panel Start and programmes, 4-6 Choosing a programme Table of programmes The controls Laundry, 7-8 Sorting your laundry Wash care labels Special clothing items Drying times Warnings and Suggestions, 9 General safety Disposal Saving energy and respecting the environment Maintenance and Care, 10 Switching off the electricity Cleaning the filter after each cycle Empty the water container after each cycle Check the drum after each cycle Cleaning the condenser unit Cleaning the dryer Troubleshooting, 11 Service, 12 Spare parts	GB
D Deutsch, 37	E Español, 49	P Português, 61		
NL Nederlands, 73				
ISL79C ISL79CS				

! Keep this instruction booklet on hand in order to refer to it when necessary. Take it with you when you move, and should you sell this appliance or pass it on to another party, make sure that this booklet is supplied along with the dryer so that the new owner may be informed about warnings and suggestions on how the appliance works.
! Read these instructions carefully; the following pages contain important information on installation and suggestions on how the appliance works.



[You're reading an excerpt. Click here to read official INDESIT ISL79CS user guide](http://yourpdfguides.com/dref/2283112)
<http://yourpdfguides.com/dref/2283112>

Q Do not turn off the dryer when there are still warm items inside. Q Clean the filter after each use (see Maintenance). Q Empty the water container after each use (see Maintenance). @@Q Do not allow lint to collect around the dryer. Q Always buy original spare parts and accessories (see Service). ! @@@@Do not touch the appliance while barefoot or with wet hands or feet. unplug the machine by pulling on the plug , not the cord. Children must not be in proximity of the dryer when in use. After using the dryer, turn it off and unplug it.

@@@@@@Never use the dryer on carpeting where the pile height would prevent air from entering the dryer from the base. check to see if the dryer is empty before loading it. The back of the dryer could become very hot. Never touch it while in use. Do not use the dryer unless the filter, water container and condenser are securely in place (see Maintenance).

Do not use liquid fabric softeners in the dryer, add it to the final rinse of your wash. do not overload the dryer (see Laundry for maximum loads). Do not load items that are dripping wet. Tumble dry items only if they have been washed with detergent and water, rinsed and been through the spin cycle. It is a fire hazard to dry items that HAVE NOT been washed with water.

carefully check all instructions on clothing labels (see Laundry). Do not dry garments that have been treated with chemical products. Never dry articles that are contaminated with flammable substances (cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers and hair sprays), unless washed in hot water with an extra amount of detergent. Do not tumble dry rubber, rubber backed articles and clothes, pillows fitted with foam rubber pads, foam (latex foam), rubber, plastic, shower caps, waterproof textiles, nappy pants or liners, polythene or paper. As part of our continued commitment to helping the environment, we reserve the right to use quality recycled components to keep down customer costs and minimise material wastage.

Q Disposing of the packaging material: follow local regulations, so the packaging can be recycled. Q To minimise risk of injury to children, remove the door and plug - then cut off mains cable, flush with the appliance. @@@@Old appliances must be collected separately in order to optimise the recov flash contact the Service Centre (see Service). @@@@Empty water light is on and the water container is not full. Programme finishes and clothes are damper than expected.

If an automatic programme has not sensed the required final moisture in this time the dryer will complete the programme and stop. Check the above points and run the programme again, if the results are still damp, contact the Service Centre (see Service). Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons, could damage the machine and could invalidate the spare parts warranty. Call an authorised technician if you experience problems while using the machine. The spare parts have been designed exclusively for this appliance and not for other uses. Use the troubleshooting guide to see if you can solve the problem yourself (see Troubleshooting). If not, turn off the dryer and call the Service Centre closest to you. What to tell the Service Centre: name, address and post code. This information can be found on the data label inside the door of the machine. This appliance conforms to the following EC Directives: - 2006/95/EC (Low Voltage Equipment) - 89/336/EEC, 92/31/EEC and 93/68/EEC (Electromagnetic Compatibility) .



[You're reading an excerpt. Click here to read official INDESIT ISL79CS user guide](http://yourpdfguides.com/dref/2283112)
<http://yourpdfguides.com/dref/2283112>