



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWC 6125 S. You'll find the answers to all your questions on the INDESIT IWC 6125 S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWC 6125 S
User guide INDESIT IWC 6125 S
Operating instructions INDESIT IWC 6125 S
Instructions for use INDESIT IWC 6125 S
Instruction manual INDESIT IWC 6125 S

Instructions for use

WASHING MACHINE

GB

English, 1

IWC 6125 S

Contents

Installation, 2-3-4-5

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine and starting a wash cycle, 6-7

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 8

Table of wash cycles

Personalisation, 9

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Garments requiring special care
Load balancing system

Precautions and tips, 11

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13

Service and Guarantee, 14-15-16
Before calling for Assistance
Guarantee

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IWC 6125 S user guide](http://yourpdfguides.com/dref/3206487)
<http://yourpdfguides.com/dref/3206487>

Manual abstract:

2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure).

3. Make sure that the hose is not folded over or bent. 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. Packaging materials should not be used as toys for children. Levelling The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Never use second-hand hoses.

Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap.

Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. @@@@If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance.

Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches).

If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. @@@@ Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. @@ON/OFF button: switches the washing machine on and off.

WASH CYCLE knob: programmes the wash cycles. During the wash cycle, the knob does not move. @@@@The illuminated indicator light shows which phase is in progress. If the Delay Timer function has been set, the time remaining until the wash cycle starts will be indicated (see next page).

DOOR LOCKED indicator light: indicates whether the door may be opened or not (see next page). START/PAUSE button with indicator light: starts or temporarily interrupts the wash cycles. N.B. To pause the wash cycle in progress, press this button; the corresponding indicator light will flash orange, while the indicator light for the current wash cycle phase will remain lit in a fixed manner. If the indicator light is switched off, the DOOR LOCKED door may be opened.

To start the wash cycle from the point at which it was interrupted, press this button again. Standby mode This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after a few minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again. 6 Indicator lights The indicator lights provide important information. This is what they can tell you:

Delayed start If the DELAY TIMER function has been activated (see Personalisation), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash: Wash cycle phase indicator lights Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress. Wash Rinse Spin Drain End of wash cycle Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate.



[You're reading an excerpt. Click here to read official INDESIT IWC](http://yourpdfguides.com/dref/3206487)

[6125 S user guide](http://yourpdfguides.com/dref/3206487)

<http://yourpdfguides.com/dref/3206487>

If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If the selected function is not compatible with another function which has been selected previously, the indicator light corresponding to the first function selected will flash and only the second function will be activated; the indicator light corresponding to the enabled option will remain lit. Door locked indicator light When the indicator light is on, the porthole door is locked to prevent it from being opened; make sure the indicator light is off before opening the door (wait approximately 3 minutes). To open the door during a running wash cycle, press the START/PAUSE button; the door may be opened once the DOOR LOCKED indicator light turns off.

Fast flashing of the "programme phases" and DOOR LOCKED indicator lights indicate an anomaly (see Troubleshooting). GB As tiSpecial Shoes (wash cycle 13) is for washing sports shoes; for best results, do not wash more than 2 pairs simultaneously. 8 Personalisation Turn the TEMPERATURE knob to set the wash temperature (see Table of wash cycles). The temperature may be lowered, or even set to a cold wash. The washing machine will automatically prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle.

Setting the temperature GB Setting the spin speed Turn the SPIN SPEED knob to set the spin speed for the selected wash cycle. The maximum spin speeds available for each wash cycle are as follows: Wash cycles Maximum spin speed Cottons 1200 rpm Synthetics 800 rpm Wool 600 rpm Silk drain only. @@To activate the functions: 1. Press the button corresponding to the desired function; 2. @@@@ less time thereby saving water and electricity.

@@@@@The fifth time the button is pressed, the function will be disabled. N.B. @@@@3 Silk: use special wash cycle 7 to wash all silk garments. @@Curtains: fold curtains and place them in a pillow case or mesh bag. Use wash cycle 7. @@@@@@ Empty all garment pockets and check the buttons. @@6 kg Synthetic fabrics: max. 2,5 kg Delicate fabrics: max. 2 kg Wool: max.

1,5 kg Silk: max. @@@@@@remove the plug from the electrical socket. 2. @@3. @@@@@@ Do not pull on the power supply cable when unplugging the appliance from the electricity so on. @@ There is no power in the house. The washing machine door is not closed properly. The ON/OFF button has not been pressed. The START/PAUSE button has not been pressed. The water tap has not been opened.

A delayed start has been set (see Personalisation). The water inlet hose is not connected to the tap. The hose is bent. The water tap has not been opened. There is no water supply in the house.

The pressure is too low. @@ The free end of the hose is under water (see Installation). The wall drainage system is not fitted with a breather pipe. @@@@@@ The drain hose is bent (see Installation). The drainage duct is clogged.

@@ The washing machine is not level (see Installation). The washing machine is trapped between cabinets and walls (see Installation). The water inlet hose is not screwed on properly (see Installation). @@ The drain hose is not fixed properly (see Installation). @@@@@@There is too much foam. The detergent is not suitable for machine washing (it should display the text for washing machines or hand and machine wash, or the like). Too much detergent was used. 13 Service GB Before calling for Assistance: Check whether you can solve the problem alone (see Troubleshooting); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. Always request the assistance of authorised technicians. Have the following information to hand: the type of problem; the appliance model (Mod.

); the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. 14 Guarantee 12 Months Parts and Labour Guarantee Your appliance has the benefit of our manufacturers guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you. This guarantee is subject to the following conditions: The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property.

The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. @@@@@@To find the ideal plan for you please call our advice line on 08709 088 088 (ROI 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership.

Simply call our Indesit Service Hotline on 08709 066 066 (ROI 0818 313 413)for telephone assistance, or, where necessary, to arrange for an engineer to call. 15 195073981.00 10/2008 - Xerox Business Services GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08709 066 066 Republic of Ireland: 0818 313 413 www.

indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08709 077 077 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.



[You're reading an excerpt. Click here to read official INDESIT IWC 6125 S user guide](http://yourpdfguides.com/dref/3206487)
<http://yourpdfguides.com/dref/3206487>

Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance.

Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .



[You're reading an excerpt. Click here to read official INDESIT IWC](#)

[6125 S user guide](#)

<http://yourpdfguides.com/dref/3206487>