



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWC 7105. You'll find the answers to all your questions on the INDESIT IWC 7105 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWC 7105  
User guide INDESIT IWC 7105  
Operating instructions INDESIT IWC 7105  
Instructions for use INDESIT IWC 7105  
Instruction manual INDESIT IWC 7105

## Instructions for use

### WASHING MACHINE

<b>GB</b> English,1	<b>F</b> Français,13	<b>I</b> Italiano,25
<b>AR</b> العربية,37	<b>FA</b> فارسی,49	<b>ES</b> Español,61
<b>PT</b> Português,73		

IWC 7105

#### Contents

##### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

##### Description of the washing machine and starting a wash cycle, 4-5

Control panel  
Indicator lights  
Starting a wash cycle

##### Wash cycles, 6

Table of wash cycles

##### Personalisation, 7

Setting the temperature  
Setting the spin speed  
Functions

##### Detergents and laundry, 8

Detergent dispenser drawer  
Bleach cycle  
Preparing the laundry  
Garments requiring special care  
Load balancing system

##### Precautions and tips, 9

General safety  
Disposal  
Opening the porthole door manually

##### Care and maintenance, 10

Cutting off the water or electricity supply  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

##### Troubleshooting, 11

##### Service, 12



[You're reading an excerpt. Click here to read official INDESIT IWC 7105 user guide](http://yourpdfguides.com/dref/2712819)  
<http://yourpdfguides.com/dref/2712819>



empty all garment pockets and check the buttons. @@How much does your laundry weigh? @@@@@@@Silk: use special wash cycle 8 to wash all silk garments. @@@@Traditional bleach should be usedhelp to prevent leaks.

@@The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Wash it under running water; this operation should be repeated frequently. Unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; Always leave the porthole door ajar in order to prevent unpleasant odours from forming. 3. Clean the inside thoroughly; 4.

Screw the lid back on; 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Your washing machine could fail to work. @@The wash cycle does not start.

@@There is no power in the house. The pressure is too low. @@The drain hose is not fitted at a height between 65 and 100 cm from the floor (see Installation). the free end of the hose is under water (see Installation). The wall drainage system is not fitted with a breather pipe.

If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously.

@@@@@@The "option" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. The detergent is not suitable for machine washing (it should display the text for washing machines or hand and machine wash, or the like). Before calling for Assistance: Check whether you can solve the problem alone (see Troubleshooting); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. Have the following information to hand: the type of problem; the appliance model (Mod. ); the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. .



[You're reading an excerpt. Click here to read official INDESIT IWC 7105 user guide](http://yourpdfguides.com/dref/2712819)  
<http://yourpdfguides.com/dref/2712819>