



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWC6133. You'll find the answers to all your questions on the INDESIT IWC6133 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWC6133
User guide INDESIT IWC6133
Operating instructions INDESIT IWC6133
Instructions for use INDESIT IWC6133
Instruction manual INDESIT IWC6133

Instructions for use

WASHING MACHINE

GB

English, 1

IWC 6133

Contents

Installation, 2-3-4-5

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine and starting a wash cycle, 6-7

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 8

Table of wash cycles

Personalisation, 9

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Garments requiring special care
Load balancing system

Precautions and tips, 11

General safety
Disposal

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13

Service and Guarantee, 14-15-16

Before calling for Assistance
Guarantee

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IWC6133 user guide](http://yourpdfguides.com/dref/5066979)
<http://yourpdfguides.com/dref/5066979>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 3 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a $\frac{1}{4}$ gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent. 4.

Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. Packaging materials should not be used as toys for children. Levelling The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Never use second-hand hoses. Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2° . 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use.

Before using the appliance please read the instructions below. GB Where it connects to the waste water the waste water pipe pipe cut end off cut end or remove the spigot off spigot or remove the blanking cap blanking cap Where it connects The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater. Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc. , please ensure that either: the plug is replaced by a fused 13 ampere rewireable plug bearing the BSI mark of approval.

Or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-syphon ie.

continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above.

warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. 4 Technical data Model IWC 6133 width 59. 5 cm height 85 cm depth 52,5 cm from 1 to 6 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0.

5 bar) drum capacity 46 litres up to 1300 rotations per minute GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 1; temperature 60°C ; using a load of 6 kg.



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWC6133 user guide](#)

<http://yourpdfguides.com/dref/5066979>

This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/EC Low Voltage) 5 Description of the washing machine and starting a wash cycle GB Control panel WASH CYCLE PROGRESS/ DELAY TIMER indicator lights ON/OFF button FUNCTION buttons with indicator lights START/ PAUSE button with indicator light TEMPERATURE Detergent dispenser drawer WASH CYCLE knob knob DOOR LOCKED indicator light knob SPIN SPEED Detergent dispenser drawer: used to dispense detergents and washing additives (see **Personalisation**). During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions. The indicator light corresponding to the selected function will remain lit. TEMPERATURE knob: sets the temperature or the cold wash cycle (see **Personalisation**). SPIN SPEED knob: sets the spin speed or exclude the spin cycle completely (see **Personalisation**). WASH CYCLE PROGRESS/DELAY TIMER indicator lights: used to monitor the progress of the wash cycle. The illuminated indicator light shows which phase is in progress. If the Delay Timer function has been set, the time remaining until the wash cycle starts will be indicated (see next page).

DOOR LOCKED indicator light: indicates whether the door may be opened or not (see next page). START/PAUSE button with indicator light: starts or temporarily interrupts the wash cycles. To pause the wash cycle in progress, press this button; the corresponding indicator light will flash orange, while the indicator light for the current wash cycle phase will remain lit in a fixed manner. If the indicator light is switched off, the DOOR LOCKED door may be opened. To start the wash cycle from the point at which it was interrupted, press this button again.

Standby mode This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after a few minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again. 6 Indicator lights The indicator lights provide important information. This is what they can tell you: Delayed start If the DELAY TIMER function has been activated (see **Personalisation**), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash: Wash cycle phase indicator lights Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress. Wash Rinse Spin Drain End of wash cycle Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate.

If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated.

If the selected function is not compatible with another function which has been selected previously, the indicator light corresponding to the first function selected will flash and only the second function will be activated; the indicator light corresponding to the enabled option will remain lit. Door locked indicator light When the indicator light is on, the porthole door is locked to prevent it from being opened; make sure the indicator light is off before opening the door (wait approximately 3 minutes). To open the door during a running wash cycle, press the START/PAUSE button; the door may be opened once the DOOR LOCKED indicator light turns off. GB As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: The set programme will start once the selected time delay has expired. Starting a wash cycle 1. Switch the washing machine on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse. 2. Load the laundry and close the door.

3. assured out to the load quantity. **Personalisation** This function may not be used in conjunction with wash cycles 1, 6, 7, 8, 9, 10, 11, 12, 13, , , . Intensive Wash Because a greater quantity of water is used in the initial phase of the cycle, and because of the increased cycle duration, this function offers a high-performance wash. **Personalisation** This function may not be used in conjunction with wash cycles 6, 7, 8, 9, 10, 11, 12, 13, , , . **Personalisation** it is particularly useful for sensitive skin. **Personalisation** The fifth time the button is pressed, the function will be disabled. **Personalisation** This option is enabled with all programmes. **Personalisation** 3 Silk: use special wash cycle 7 to wash all silk garments. **Personalisation** use programme 8.

Personalisation compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow the grid. **Personalisation** Empty all garment pockets and check the buttons. **Personalisation** 1 kg How much does your laundry weigh? **Personalisation** The washing machine must only be used by adults, in accordance with the instructions provided in this manual. **Personalisation** Do not touch the machine when barefoot or with wet or damp hands or feet. **Personalisation** Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. **Personalisation** Do not open the detergent dispenser drawer while the machine is in operation. **Personalisation** Do not touch the drained water as it may reach extremely high temperatures. **Personalisation** Never force the porthole door.

This could damage the safety lock mechanism designed to prevent accidental opening. **Personalisation** If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. **Personalisation** Always keep children well away from the appliance while it is operating. **Personalisation** The door can become quite hot during the wash cycle. **Personalisation** If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. **Personalisation** Before loading laundry into the washing machine, make sure the drum is empty. Disposal **Personalisation** Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. **Personalisation** The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. 11 Care and maintenance GB Cutting off the water and electricity supplies **Personalisation** Turn off the water tap after every wash cycle.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5066979)

[IWC6133 user guide](http://yourpdfguides.com/dref/5066979)

<http://yourpdfguides.com/dref/5066979>

This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. Unplug the washing machine when cleaning it and during all maintenance work. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); Cleaning the washing machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water.

do not use solvents or abrasives. Cleaning the detergent dispenser drawer Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2. Unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; Caring for the door and drum of your appliance Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Screw the lid back on; 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

Before contacting the Technical Assistance Centre (see Assistance), make sure that the problem cannot be not solved easily using the following list. **gB Problem: The washing machine does not switch on. The wash cycle does not start. Possible causes / Solutions:** The appliance is not plugged into the socket fully, or is not making contact. There is no power in the house. The washing machine door is not closed properly. The ON/OFF button has not been pressed. The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set (see Personalisation).

The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The washing machine does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The washing machine continuously takes in and drains water. The drain hose is not fitted at a height between 65 and 100 cm from the floor (see Installation). The free end of the hose is under water (see Installation).

The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience. The wash cycle does not include draining: some wash cycles require the drain phase to be started manually.

The drum was not unlocked correctly during installation (see Installation). Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle.

the washing machine leaks. The "Functions" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. The detergent is not suitable for machine washing (it should display the text for washing machines or hand and machine wash , or the like). Too much detergent was used. **13 Service GB Before calling for Assistance:** Check whether you can solve the problem alone (see Troubleshooting); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. Always request the assistance of authorised technicians. Have the following information to hand: the type of problem; the appliance model (Mod.); the serial number (S/N). @ @ @ @ @ @ @ @ The appliance is used only on the electricity or gas supply printed on the rating plate.

The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. **GB The guarantee does not cover:** Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. replacement of any consumable item or accessory . These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. **THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.**

5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on 08448 24 24 24 (Republic of Ireland 01 230 0800). **Extended Guarantees** We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy.

To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland 01 230 0233). **Free Helpdesk Service** We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call.



[You're reading an excerpt. Click here to read official INDESIT IWC6133 user guide](http://yourpdfguides.com/dref/5066979)
<http://yourpdfguides.com/dref/5066979>

15 195074635. 01 03/2009 - Xerox Business Services GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer.

Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. Uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. To activate your free 5 year parts guarantee you must register your appliance with us. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 □Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. .



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWC6133 user guide](#)

<http://yourpdfguides.com/dref/5066979>