



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWD7145K. You'll find the answers to all your questions on the INDESIT IWD7145K in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWD7145K  
User guide INDESIT IWD7145K  
Operating instructions INDESIT IWD7145K  
Instructions for use INDESIT IWD7145K  
Instruction manual INDESIT IWD7145K

## Instructions for use

### WASHING MACHINE

**GB**  
English, 1

IWD 7145 K

#### Contents

**GB**

#### Installation, 2-3-4-5

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

#### Description of the washing machine and starting a wash cycle, 6-7

Control panel  
Indicator lights  
Starting a wash cycle

#### Wash cycles, 8

Table of wash cycles

#### Personalisation, 9

Setting the temperature  
Setting the spin speed  
Functions

#### Detergents and laundry, 10

Detergent dispenser drawer  
Bleach cycle  
Preparing the laundry  
Garments requiring special care  
Load balancing system

#### Precautions and tips, 11

General safety  
Disposal

#### Care and maintenance, 12

Cutting off the water or electricity supply  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

#### Troubleshooting, 13-14

#### Assistance, 15-16

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IWD7145K user guide](http://yourpdfguides.com/dref/4680513)  
<http://yourpdfguides.com/dref/4680513>

#### Manual abstract:

If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Unpacking and levelling Unpacking ! This is a separate part of the polystyrene base and should be removed with the base. Electric and water connections Connecting the water inlet hose ! **IMPORTANT** check when unpacking your machine. 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the 4 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet).

1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).

4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location. ! Packaging materials are not children's toys.

Levelling 3. Make sure there are no kinks or bends in the hose. ! The water pressure at the tap must be within the values indicated in the Technical details table (on the page 5). ! If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. ! Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; • the supply voltage is included within the values indicated on the Technical Data Plate fixed on the machine.

• the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB 65 - 100 cm

Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an undersink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. **WARNING - THIS APPLIANCE MUST BE EARTHED.** @ @ @ @ @ @ @ @ Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewireable plug bearing the BSI mark of approval.

or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater. ! We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches).

If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: • the socket is earthed and in compliance with the applicable law; • the socket is able to sustain the appliance's maximum power load indicated on the Technical Data Plate fixed on the machine; 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt regarding the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) GREEN & YELLOW 13 ampere fuse The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle 1. BROWN BLUE CROSS-BAR CORD GRIP Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. ! The washing machine should not be installed in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain and thunderstorms. ! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. ! The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected.

4 Technical data Model IWD 7145 K width 59.5 cm height 85 cm depth 53,5 cm from 1 to 7 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres up to 1400 rotations per minute GB Dimensions Capacity Electrical connections Water connection Spin speed Test Programmes according to 2010/1061 Programme 2: temperature 60°C and 40°C. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2002/96/EC - 2006/95/EC Low Voltage) 5 Description of the washing machine and starting a wash cycle GB Control panel DELAY TIMER button WASH CYCLE PROGRESS START/ PAUSE ON/OFF button DISPLAY FUNCTION buttons with indicator lights button with indicator light TEMPERATURE Detergent dispenser drawer WASH CYCLE knob knob DOOR LOCKED indicator light knob SPIN SPEED Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWD7145K user guide](#)

<http://yourpdfguides.com/dref/4680513>

ON/OFF button: switches the washing machine on and off. WASH CYCLE knob: programmes the wash cycles. During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions. The indicator light corresponding to the selected function will remain lit.

TEMPERATURE knob: sets the temperature or the cold wash cycle (see "Personalisation"). SPIN SPEED knob: sets the spin speed or exclude the spin cycle completely (see "Personalisation"). DISPLAY: used to view the duration of the various cycles available and the remaining time of a cycle in progress; if the DELAY TIMER option has been selected, the countdown to the start of the selected cycle will appear. @@@@The illuminated indicator light shows which phase is in progress. @@@@N.

B. @@@@If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If the selected function is not compatible with another function which has been selected previously, the indicator light corresponding to the first function selected will flash and only the second function will be activated; the indicator light corresponding to the enabled option will remain lit. Door locked indicator light When the indicator light is on, the porthole door is locked to prevent it from being opened; make sure the indicator light is off before opening the door (wait approximately 3 minutes). To open the door during a running wash cycle, press the START/PAUSE button; the door may be opened once the DOOR LOCKED indicator light turns off.

GB Starting a wash cycle 1. Switch the washing machine on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse. 2. Load the laundry and close washing sports shoes; for best results, do not wash more than 2 pairs simultaneously. 8 Personalisation Setting the temperature Turn the TEMPERATURE knob to set the wash temperature (see Table of wash cycles). The temperature may be lowered, or even set to a cold wash. The washing machine will automatically prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle. GB Setting the spin speed Turn the SPIN SPEED knob to set the spin speed for the selected wash cycle. The maximum spin speeds available for each wash cycle are as follows: Wash cycles Maximum spin speed Cottons 1400 rpm Synthetics 800 rpm Wool 800 rpm Silk drain only The spin speed may be lowered, or the spin cycle can be excluded altogether by selecting the symbol.

The washing machine will automatically prevent you from selecting a spin speed which is higher than the maximum speed set for each wash cycle. Functions The various wash functions available with this washing machine will help to achieve the desired results, every time. To activate the functions: 1. Press the button corresponding to the desired function; 2. the function is enabled when the corresponding indicator light is illuminated. Note: If the indicator light flashes rapidly, this signals that this particular function may not be selected in conjunction with the selected wash cycle. Delay timer To set a delayed start for the selected programme, press the corresponding button repetition should be repeated frequently. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. ! Never use second-hand hoses.

Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. ! Make sure the wash cycle has finished and unplug the appliance. To access the pre-chamber: 1.

using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); 12 Troubleshooting Your washing machine could fail to work. Before contacting the Technical Assistance Centre (see "Assistance"), make sure that the problem cannot be not solved easily using the following list. GB Problem: The machine does not switch on. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or not enough to make contact. • There is no power to the socket, or the fuse has blown in the mains plug.

• The door is not closed properly. • The ON/OFF button has not been pressed. • The START/PAUSE button has not been pressed. • The water tap has not been turned on to allow water to flow into the machine. • A delayed start has been set. • The water inlet hose is kinked. • The water inlet hose is not connected to the water supply. • The water pressure is too low. • The water tap has not been turned on to allow water to flow into the machine. • There is no water supply to the house.

• The inlet valve filter is blocked. • The START/PAUSE button has not been pressed. • The top of the drain hose is too low - It must be fitted at a height between 65 and 100 cm from the floor (see "Installation"). • The drain hose is connected incorrectly to the sink trap allowing water to run into the machine, the drain hose must be positioned higher than the bottom of the sink to prevent water flowing down the drain hose. • The end of the drain hose has been pushed too far down the standpipe, the 'U' bracket should be fitted 100 mm from the end of the drain hose. • The Pump filter is blocked. • The drain hose is kinked (see "Installation"). • New Installation - The blanking cap or spigot has not been removed if connected under a sink. • The drain hose or sink trap is blocked. @@@@• The machine is trapped between cabinets and/or walls.

@@@@This is a safety feature to prevent damage. @@ - Try the programme again using a different load. • The dispenser drawer is blocked with detergent and requires cleaning. • The water pressure is too high and requires turning down - turn down the tap on the water supply pipe slightly and try again. • The machine is tilting forwards - It must be level when in its final position.

• The fill hose is loose, check both the cabinet and tap ends. • The fill hose is tight but still leaks, if so replace the rubber washers, or the fill hose is missing the rubber washer. • The drain hose is not fixed in properly. • Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again If the problem persists contact the Technical Assistance Service.



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWD7145K user guide](#)

<http://yourpdfguides.com/dref/4680513>

•The machine requires a service wash.

Run a 90 degree wash cycle with detergent and no laundry. •The door will not open until the door lock indicator light goes out shortly after the program has finished. •The door seal has drainage holes at the bottom - This is normal. •The water level is correct if it can be seen at the bottom of the door. The machine leaks from the dispenser. The machine leaks (other than dispenser). The indicator lights on the console are flashing rapidly. The machine smells. The machine door cannot be opened. Door Seal damaged at the bottom.

The water level is too low when the machine is washing. There is too much foam. •The detergent is not suitable for machine washing (it should display the text 'for washing machines' or 'hand and machine wash' or the like). •Too much detergent was used - less detergent is required in soft water. •To comply with new energy saving regulations the machine is fitted with an automatic standby system. Press 'ON/OFF' button for 3 seconds to activate the machine, it can then either be switched off or a new programme selected. After completing the programme, or before starting a programme, the machine has turned itself off (no lights). General. •Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water Levels, Temperatures, Out of Balance loads, Wash time/progress). @@@@This guarantee is subject to the following conditions: - - - - - The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.

The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property.

The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: - - - Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic.

**THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.** @@@@There will be a charge for our engineer's time. @@@@Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 15 195092899.00 05/2011 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 [www.indesitservice.co](http://www.indesitservice.co).

uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 [www.indesitservice.co.uk](http://www.indesitservice.co.uk) Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 [www.indesitservice.co.uk](http://www.indesitservice.co.uk) Indesit Company UK Ltd.

Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWD7145K user guide](#)

<http://yourpdfguides.com/dref/4680513>