



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWDE 12. You'll find the answers to all your questions on the INDESIT IWDE 12 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWDE 12
User guide INDESIT IWDE 12
Operating instructions INDESIT IWDE 12
Instructions for use INDESIT IWDE 12
Instruction manual INDESIT IWDE 12

Instructions for use

WASHER-DRYER

GB

English,1

IWDE 12

Contents

GB

Installation, 2-3-4-5-6-7

Unpacking and levelling
Electric and water connections
The first wash cycle
Technical details
Instructions for the fitter

Washer-dryer description, 8-9

Control panel
Leds

Starting and Programmes, 10

Briefly, how to start a programme
Programme table

Personalisations, 11

Setting the temperature
Setting the drying cycle
Functions

Detergents and laundry, 12

Detergent dispenser
Preparing your laundry
Special items

Precautions and advice, 13

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 14

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 15

Service, 16-17-18
Before calling for Assistance

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IWDE 12 user guide](http://yourpdfguides.com/dref/3206501)

<http://yourpdfguides.com/dref/3206501>

Manual abstract:

2. Check whether the washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the 4 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washer-dryer needs to be moved to another location.

A 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). @ @ 2. @ @ @ @ 1. @ @ 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater. **WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained.

Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewirable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling.

Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use.

How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washer-dryer should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.

When the washer-dryer is installed, the mains socket must be within easy reach.

Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model IWDE 12 59.5 cm wide 81.5 cm high 54 cm deep from 1 to 5,5 kg for the wash programme; from 1 to 4 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres up to 1200 rpm Wash: programme 2; temperature 60°C; run with a load of 5,5 kg. Drying: first drying cycle performed with a 1 kg load, by selecting a drying time of 40 min; Second drying cycle performed with a 4 kg load and the DRYING knob on the setting. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to EN 50229 directive 5 GB Instructions for the fitter Mounting the wooden panel onto the door and inserting the machine into cabinets: In the case where the machine must be shipped for final installation after the wooden panel has been mounted, we suggest leaving it in its original packaging.



[You're reading an excerpt. Click here to read official INDESIT IWDE 12 user guide](http://yourpdfguides.com/dref/3206501)

<http://yourpdfguides.com/dref/3206501>

The packaging was designed to make it possible to mount the wooden panel onto the machine without removing it completely (see figures below). The wooden panel that covers the face of the machine must not be less than 18 mm in thickness and can be hinged on either the right or left. For the sake of practicality when using the machine, we recommend that the panel be hinged on the same side as the door for the machine itself - the left. Door Mounting Accessories (Fig. 1-2-3-4-5). N° 2 Hinge Supports Fig. 1 Fig. 2 N° 2 Hinges N° 1 Magnet Fig. 3 N° 1 Magnet plate Fig. 4 A B N° 1 Rubber plug Fig.

5 Fig. 4/B N° 1 Spacer - No. 6 type A self-threading screws, l=13 mm. - No. 2 type B metric, countersunk screws, l=25; for fastening the magnet plate to the cabinet.

C D - No. 4 type C metric screws, l=15 mm; for mounting the hinge supports to the cabinet. - No. 4 type D metric screws, l=7 mm; for mounting the hinges on the supports. Mounting the Parts onto the Face of the Machine.

- Mount the hinge supports onto the face of the machine, positioning the hole indicated by the arrow in fig. 1 towards the inside of the face and using the type C screws. @@- Place the spacer illustrated in fig. @@@@Mounding the Parts onto the Wooden Panel (Door). @@@@- Insert the rubber plug into the bottom hole. The panel is now ready to be mounted onto the machine. Mounting the Panel into the machine. Insert the nib of the hinge (indicated by the arrow in fig. @@Fasten the two hinges with the type D screws. Fastening the plinth guide.

@@8). @@9). This is how to assemble the plinth guide (fig. @@Inserting the machine into the Cabinet. - Push the machine into the opening, aligning it with the cabinets (fig. 6). - Regulate the adjustable feet to raise the machine to the appropriate height. - To adjust the position of t setting. Function buttons The FUNCTION BUTTONS also act like LEDs. When a function is selected, the corresponding button is illuminated.

If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Once the set delay is complete, the flashing LED will turn off and the programme set will start. ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality (see page 15).

9 Starting and Programmes Briefly: starting a programme GB 1. Switch the Washer-dryer on by pressing button . All the LEDs will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2. Load your laundry into the washer-dryer and shut the appliance door.

3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 11). 5. Set the drying cycle if necessary (see page 11). 6. Add the detergent and any fabric softener (see page 12). 7. Start he programme by pressing the START/RESET button.

To cancel it, keep the START/RESET button pressed for at least 2 seconds. 8. When the programme is finished, the ON-OFF/ DOOR LOCK Led will flash to indicate that the lly. @@@@@ - the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons. Do not exceed the weight limits stated below, which refer to the weight when dry: Sturdy fabrics: max 5,5 kg Synthetic fabrics: max 2,5 kg Delicate fabrics: max 2 kg Wool: max 1,5 kg How much does your laundry weigh? 1 1 1 1 sheet 400-500 g pillow case 150-200 g tablecloth 400-500 g bathrobe 900-1200 g towel 150-250 g 12 Precautions and advice The Washer-dryer was designed and built in compliance with the applicable international safety regulations. The following information is provided for your safety and should consequently be read carefully. stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB General safety This appliance has been designed for nonprofessional, household use and its functions must not be changed. This washer-dryer should only be used by adults and in accordance with the instructions provided in this manual. Never touch the washer-dryer when barefoot or with wet or damp hands or feet.

Do not pull on the power supply cable to unplug the appliance from the electricity socket. Pull the plug out yourself. Do not open the detergent dispenser while the appliance is in operation. Do not touch the drain water as it could reach very high temperatures. Never force the washer-dryer door: this could damage the safety lock mechanism designed to prevent any accidental openings.

In the event of a malfunction, do not under any circumstances touch internal parts in order to attempt repairs. Always keep children well away from the appliance while in operation. The appliance door tends to get quite hot during the wash cycle. Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. @@ During the drying phase, the door tends to get quite hot. @@trichlorethylene). Do not use the appliance to dry foam rubber or similar elastomers. @@@@ The pre-wash cycle is only necessary on extremely soiled garments. @@@@ In addition, avoid using fabric softener as much as possible.

@@@ If your laundry has to be dried in a tumble dryer, select a high spin speed. Having the least water possible in your laundry will save you time and energy in the drying process. Disposal Disposing of the packaging material: observe local regulations, so the packaging can be re-used. The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste 13 Care and maintenance GB Cutting off the water or electricity supply Turn off the water tap after every wash. This will limit the wear of your appliance's water system and also prevent leaks. Unplug your appliance when cleaning it and during all maintenance operations. 2. clean the interior thoroughly; 3. screw the lid back on. Checking the water inlet hose Check the water inlet hose at least once a year.

If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.



[You're reading an excerpt. Click here to read official INDESIT IWDE 12 user guide](http://yourpdfguides.com/dref/3206501)

<http://yourpdfguides.com/dref/3206501>

Cleaning your appliance The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Never use hoses that have already been used. Cleaning the detergent dispenser Remove the dispenser by raising it and pulling it out (see figure).

Wash it under running water; this operation should be repeated frequently. Caring for your appliance door and drum Always leave the appliance door ajar to prevent unpleasant odours from forming. Cleaning the pump The Washer-dryer is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber: 1. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; 14 Troubleshooting Your Washer-dryer could fail to work. @@ There has been a power failure. The appliance door is not shut properly. button has not been pressed. The The START/RESET button has not been pressed. The water tap is not turned on. A delayed start has been set (using the Delay Timer, see page 11). The water inlet hose is not connected to the tap.

The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient. @@ The free end of the hose is underwater (see page 3). The wall drainage system doesn't have a breather pipe. @@@@In order to avoid such an inconvenience, special anti-drain trap valves are available in shops. The programme does not foresee the draining: some programmes require enabling the draining manually (see page 10). The Easy iron function is enabled: to complete the programme, press the START/RESET button (see page 11). The drain hose is bent (see page 3).

The drain duct is clogged. The drum was not unblocked correctly during installation (see page 2). The Washer-dryer is not level (see page 2). @@ The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 14).

The drain hose is not secured properly (see page 3). @@If the problem persists, contact Assistance. @@ You used too much detergent. @@There has been a power failure. The appliance door is not shut properly.

A delayed start has been set (using the Delay Timer, see page 11). the DRYING knob is on the 0 setting. 15 The washer-dryer does not drain or spin. The washer-dryer vibrates too much during the spin cycle. The washer-dryer leaks. The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED. There is too much foam. The washer-dryer does not dry. Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 15); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen.

Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washer-dryer. 16 Guarantee 12 Months Parts and Labour Guarantee Your appliance has the benefit of our manufacturers guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you. This guarantee is subject to the following conditions: The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent.

Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory . These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters.

Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. Extended Guarantees We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08709 088 088 (ROI 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership.

Simply call our Indesit Service Hotline on 08709 066 066 (ROI 0818 313 413)for telephone assistance, or, where necessary, to arrange for an engineer to call. 17 GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08709 066 066 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08709 077 077 Republic of Ireland: 0818 313 413 www.indesitservice.co.

uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut.



[You're reading an excerpt. Click here to read official INDESIT IWDE 12 user guide](http://yourpdfguides.com/dref/3206501)
<http://yourpdfguides.com/dref/3206501>