



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWDE 7145. You'll find the answers to all your questions on the INDESIT IWDE 7145 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWDE 7145
User guide INDESIT IWDE 7145
Operating instructions INDESIT IWDE 7145
Instructions for use INDESIT IWDE 7145
Instruction manual INDESIT IWDE 7145

Instructions for use

WASHER-DRYER

GB
English, 1

IWDE 7145

Contents

Installation, 2-3-4-5

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the Washer-dryer, 6-7

Control panel
Display

How to run a wash cycle or a drying cycle, 8

Wash cycles and options, 9

Table of wash cycles
Wash options

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Special wash cycles
Load balancing system

Precautions and tips, 11

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning the Washer-dryer:
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13

Service and Guarantee, 14-15-16

Before calling for Assistance
Guarantee

GB

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IWDE 7145 user guide](http://yourpdfguides.com/dref/3206502)
<http://yourpdfguides.com/dref/3206502>

Manual abstract:

2. Make sure that the Washer-dryer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a $\frac{3}{4}$ gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the Washer-dryer by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure).

3. Make sure that the hose is not folded over or bent. 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the Washer-dryer needs to be moved to another location. Packaging materials should not be used as toys for children. Levelling The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Never use second-hand hoses.

Use the ones supplied with the machine. 1. Install the Washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2° . 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB Where it connects to the waste water the waste water pipe pipe cut end off cut end or remove the spigot off spigot or remove the blanking cap blanking cap Where it connects The drain hose may be connected to an under-sink trap.

Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater. **WARNING - THIS APPLIANCE MUST BE EARTHED.**

@@@ Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewirable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches).

If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. GREEN & YELLOW Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle.

BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. 4 Technical data Model IWDE 7145 width 59.5 cm height 85 cm depth 53,5 cm from 1 to 7 kg for the wash programme; from 1 to 5 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres up to 1400 rotations per minute Wash: programme 2; temperature 60°C ; using a load of 7 kg. Drying: first drying cycle performed with a 2 kg load, selecting drying level "A1" (IRON DRY); second drying cycle performed with a 5 kg load, selecting drying level "A4" (EXTRA DRY).

This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/EC (Low Voltage) GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 5 Description of the Washer-dryer GB Control panel ON/OFF button TEMPERATURE Button OPTION buttons with indicator lights START/PAUSE button with indicator light DISPLAY Detergent dispenser drawer WASH CYCLE knob SPIN SPEED Button DRYING Button Detergent dispenser drawer: used to dispense detergents and washing additives (see Detergents and laundry).



[You're reading an excerpt. Click here to read official INDESIT IWDE 7145 user guide](http://yourpdfguides.com/dref/3206502)
<http://yourpdfguides.com/dref/3206502>

ON/OFF button : press this briefly to switch the machine on or off. The START/PAUSE indicator light, which flashes slowly in a green colour shows that the machine is switched on. To switch off the Washer-dryer during the wash cycle, press and hold the button for approximately 2 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE knob: used to set the desired wash cycle (see "Table of wash cycles"). OPTION buttons with indicator light: used to select the available options. The indicator light corresponding to the selected option will remain lit. SPIN button : press to reduce or completely exclude the spin cycle - the value is indicated on the display. @@@@ is not illuminated, the door may be opened.

@@@@@ If the symbol lights up while the drying settings are being adjusted. The symbol lights up, the display will visualise the set "spin" value. If the Door locked symbol The lit symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door. symbol is CKED symbol will be on).

To change a wash cycle while it is in progress, pause the Washer-dryer using the START/PAUSE button (the START/PAUSE indicator light will flash slowly in an orange colour); then select the desired cycle and press the START/ PAUSE button again. To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED symbol is switched off the door may be opened. Press the START/ PAUSE button again to restart the wash cycle from the point at which it was interrupted. 8. THE END OF THE WASH CYCLE.

This will be indicated by the text "End" on the display; when the DOOR LOCKED symbol switches off the door may be opened. Open the door, unload the laundry and switch off the machine. begun, press and hold the button. The cycle will be stopped and the machine will switch off. If the selected option is not compatible with the If you wish to cancel a cycle which has already Wash cycles and options Table of wash cycles Wash cycles Description of the wash cycle Max. Max. temp. speed Drying (°C) (rpm) Detergents Wash Max. load (kg) Eco Time GB Cycle duration Fabric Normal softener Daily 1 White Cotton: extremely soiled whites. 1 White Cotton (1): heavily soiled whites and resistant colours.

1 White Cotton (2): heavily soiled whites and delicate colours. 2 Cotton: heavily soiled whites and resistant colours. 3 Coloured Cotton (3): lightly soiled whites and delicate colours. 4 Synthetics: heavily soiled resistant colours. 90° 60° 40° 60° 40° 50° 40° 30° 40° 30° 30° 30° 1400 1400 1400 1400 1400 800 600 0 800 600 600 600 111111111111 - 111111111111 - 111111111111 - 7 7 7 7 3 1,5 1 eratures. Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. Always keep children well away from the appliance while it is operating. The door can become quite hot during the wash cycle.

If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. Before loading laundry into the Washer-dryer, make sure the drum is empty. During the drying phase, the door tends to get quite hot. Do not use the appliance to dry clothes that have been washed with flammable solvents (e.

g. trichlorethylene). Do not use the appliance to dry foam rubber or similar elastomers. Make sure that the water tap is turned on during the drying cycles. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1.

remove the plug from the electrical socket. 2. make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. using a screwdriver, remove the cover panel on the lower front part of the Washer-dryer (see figure). 20 4. pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. Disposal Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected 5.

reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 11 Care and maintenance GB Cutting off the water and electricity supplies Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the Washer-dryer and help to prevent leaks. @@@@ 3. clean the inside thoroughly; 4. screw the lid back on; 5. @@@@ There is no power in the house. The Washer-dryer door is not closed properly. The ON/OFF button has not been pressed. The START/PAUSE button has not been pressed.

The water tap has not been opened. A delayed start has been set. The water inlet hose is not connected to the tap. The hose is bent. The water tap has not been opened.

There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The Washer-dryer does not take in water ("H2O" will flash on the display). The Washer-dryer continuously takes in and drains water.

The drain hose is not fitted at a height between 65 and 100 cm from the floor (see Installation). The free end of the hose is under water (see Installation). The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience. The wash cycle does not include draining: some wash cycles require the drain phase to be started manually. The Easy iron option has been activated: To complete the wash cycle, press the START/PAUSE button (see Wash cycles and options). The drain hose is bent (see Installation). The drainage duct is clogged.

The drum was not unlocked correctly during installation (see Installation). The Washer-dryer is not level (see Installation). The Washer-dryer is trapped between cabinets and walls (see Installation).



[You're reading an excerpt. Click here to read official INDESIT IWDE](#)

[7145 user guide](#)

<http://yourpdfguides.com/dref/3206502>

The water inlet hose is not screwed on properly (see Installation). The detergent dispenser drawer is blocked (for cleaning instructions, see Care and maintenance). The drain hose is not fixed properly (see Installation). The Washer-dryer does not drain or spin. The Washer-dryer vibrates a lot during the spin cycle. The Washer-dryer leaks. The "option" indicator lights and the Switch off the machine and unplug it, wait for approximately 1 minute "start/pause" indicator light flash and then switch it back on again.

and an error code appears on the If the problem persists, contact the Technical Assistance Service. display (e.g.: F-01, F-..). There is too much foam. The detergent is not suitable for machine washing (it should display the text for Washer-dryers or hand and machine wash, or the like). Too much detergent was used. The appliance is not plugged into the socket, or not enough to make contact.

There has been a power failure. The appliance door is not shut properly. A delayed start has been set. @@@@The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.

Replacement of any consumable item or accessory . These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. @@There will be a charge for our engineer's time. @@@@Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413)for telephone assistance, or, where necessary, to arrange for an engineer to call. 15 195074263.01 03/2009 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life.

UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us.

UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .



[You're reading an excerpt. Click here to read official INDESIT IWDE 7145 user guide](http://yourpdfguides.com/dref/3206502)
<http://yourpdfguides.com/dref/3206502>