



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWDE126. You'll find the answers to all your questions on the INDESIT IWDE126 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWDE126
User guide INDESIT IWDE126
Operating instructions INDESIT IWDE126
Instructions for use INDESIT IWDE126
Instruction manual INDESIT IWDE126

Instructions for use

WASHER-DRYER

GB

English,1

IWDE 126

! ⓘ This symbol reminds you to read this instruction manual.

GB

Contents

Installation, 2-3-4-5-6-7

Unpacking and levelling
Electric and water connections
The first wash cycle
Technical details
Instructions for the fitter

Washer-dryer description, 8-9

Control panel
Leds

Starting and Programmes, 10

Briefly: how to start a programme
Programme table

Personalisations, 11

Setting the temperature
Setting the drying cycle
Functions

Detergents and laundry, 12

Detergent dispenser
Preparing your laundry
Special items

Precautions and advice, 13

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 14

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 15-16

Assistance, 17-18

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT IWDE126 user guide](http://yourpdfguides.com/dref/5477779)
<http://yourpdfguides.com/dref/5477779>

Manual abstract:

2. Check whether the washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the 4 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). 1. Connect the supply pipe by screwing it to a cold water tab using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).

3. Make sure there are no kinks or bends in the hose. 4. Seal the gaps using the plastic plugs provided. 5.

@@@1. @@2. @@@@If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below.

GB Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater. **WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc.

, please ensure that either: the plug is replaced by a fused 13 ampere rewearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug:

Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-syphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle.

GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washer-dryer should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washer-dryer is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman.

4 Technical details Model IWDE 126 59.5 cm wide 81.5 cm high 54,5 cm deep from 1 to 6 kg for the wash programme; from 1 to 5 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres up to 1200 rpm Wash: programme 2; temperature 60°C; run with a load of 6 kg. Drying: first drying cycle performed with a 1 kg load, by selecting a drying time of 60 min; Second drying cycle performed with a 5 kg load and the DRYING knob on the setting. This appliance is compliant with the following European Community Directives: - 2004/108/CE (Electromagnetic Compatibility) - 2002/96/CE - 2006/95/CE (Low Voltage) Dimensions Capacity

Electric connections Water connections Spin speed Control programmes according to EN 50229 directive 5 GB Instructions for the fitter Mounting the wooden panel onto the door and inserting the machine into cabinets: In the case where the machine must be shipped for final installation after the wooden panel has been mounted, we suggest leaving it in its original packaging. The packaging was designed to make it possible to mount the wooden panel onto the machine without removing it completely (see figures below). The wooden panel that covers the face of the machine must not be less than 18 mm in thickness and can be hinged on either the right or left. For the sake of practicality when using the machine, we recommend that the panel be hinged on the same side as the door for the machine itself - the left.

Door Mounting Accessories (Fig. 1-2-3-4-5). N° 2 Hinge Supports Fig. 1 Fig. 2 N° 2 Hinges N° 1 Magnet Fig. 3 N° 1 Magnet plate Fig. 4 A B N° 1 Rubber plug Fig.



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWDE126 user guide](#)

<http://yourpdfguides.com/dref/5477779>

5 Fig. 4/B N° 4 Spacers - No. 6 type A self-threading screws, l = 13 mm.

- No. 2 type B metric, countersunk screws, l = 25; for fastening the magnet plate to the cabinet. C D - No. 4 type C metric screws, l = 15 mm; for mounting the hinge supports to the cabinet. - No.

4 type D metric screws, l = 7 mm; for mounting the hinges on the supports. Mounting the Parts onto the Face of the Machine. - Fit the hinge supports to the appliance front panel, positioning the hole marked with an arrow in fig. 1 so that it is on the inner side of the front panel. Fit a spacer (fig. 4/B) between the surfaces using type C screws. - Fit the magnet plate at the top of the opposite side, using type B screws to fix two spacers (fig. 4/B) between the plate and the surface. Tur Seite E 6 Using the Drilling Template. - To trace the positions of the holes on the left-hand side of the panel, align the drilling template to the top left side of the panel using the lines traced on the extremities as a reference. - To trace the positions of the holes on the right-hand side of the panel, align the drilling template to the top right side of the panel. - Use an appropriately sized router to mill the holes for the two hinges, the rubber plug and the magnet. Mounting the Parts onto the Wooden Panel (Door). - Insert the hinges into the holes (the movable part of the hinge must be positioned facing away from the panel) and fasten them with the 4 type A screws. - Insert the magnet into the top hole on the opposite side of the hinges and fasten it with the two type B screws.

- Insert the rubber plug into the bottom hole. The panel is now ready to be mounted onto the machine. Mounting the Panel into the machine. Insert the nib of the hinge (indicated by the arrow in fig. 2) into the hole for the hinge and push the panel towards the front of the machine. Fasten the two hinges with the type D screws. Fastening the plinth guide. If the machine is installed at the end of a set of modular cabinets, mount either one or both of the guides for the base molding (as shown in fig. 8). Adjust them for depth based on the position of the base molding, and, if necessary, fasten the base to the guides (fig.

9). This is how to assemble the plinth guide (fig. 8): Fasten angle P using screw R, insert plinth guide Q into the special slot and once it is in the desired position, lock it in place using angle P and screw R. Inserting the machine into the Cabinet. - Push the machine into the opening, aligning it with the cabinets (fig.

6). - Regulate the adjustable feet to raise the machine to the appropriate height. - To adjust the position of the wooden panel in both the vertical and horizontal directions, use the C and D screws, as shown in fig. 7. Important: close the lower part of the appliance front by ensuring that the plinth rests against the floor.

GB Fig. 8 Fig. 9 Accessories provide LEDs. When a function is selected, the corresponding button is illuminated. @@@@ Switch the Washer-dryer on by pressing button . @@2. Load your laundry into the washer-dryer and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4.

Set the wash temperature (see page 11). 5. Set the drying cycle if necessary (see page 11). 6. Add the detergent and any fabric softener (see page 12). 7. Start the programme by pressing the START/RESET button. @@8. @@ Take out your laundry and leave the 40 100 60 Terry towels Sheets, Shirts Pyjamas, socks, etc. Slips, tights, stockings, etc.

@@ Now follow the instructions provided for a dry only cycle. @@@@ @@@@ the function is enabled when the corresponding button is illuminated. @@ Comments Press the button repeatedly until the LED corresponding to the desired delay is turned on. The fifth time the button is pressed, the function will be disabled. N.

B.: Once you have pressed the Start/Reset button, the delay can only be decreased if you wish to modify it. When this function is set, programmes 4, 6 will end with the laundry left to soak (Anti-crease) and the Rinse cycle phase LED will flash. - to conclude the cycle, press the START/RESET button; - to run the draining cycle alone, set the knob to the relative symbol and press the START/RESET button. If you also want to run the drying cycle, this button is enabled only if combined with level (Iron).

Recommended when the appliance has a full load or with large quantities of detergent. 1, 2, 3, 4, 9, 10, 12, 13, Rinse cycle. All programmes except for 6, 7, 8 and draining. @@ Increases the efficiency of the rinse. @@@@ Wash them separately without exceeding half the appliance load. Use programme 6 which excludes the spin cycle automatically. @@@@ @@@@ - the colours: separate coloured garments from whites. □ Empty all pockets and check for loose buttons. @@@@ □ Do not use the appliance to dry foam rubber or similar elastomers. @@@@ @@@@ - Do not dry unwashed items in the tumble dryer.

@@@@@@@@@@@@@@@@ Pull the plug out yourself. @@@@@@ □ In the event of a malfunction, do not under any circumstances touch internal parts in order to attempt repairs. □ Always keep children well away from the appliance while in operation. □ The appliance door tends to get quite hot during the wash cycle. □ Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. □ Before loading your laundry into the washing machine, make sure the drum is empty. □ During the drying phase, the door tends to get quite hot. □ Do not use the appliance to dry clothes that have been washed with flammable solvents (e.g.

trichlorethylene). Disposal □ Disposing of the packaging material: observe local regulations, so the packaging can be re-used. □ The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. Saving energy and respecting the environment Environmentally-friendly technology If you only see a little water through your appliance door, this is because thanks to the latest Indesit technology, your washing machine only needs less than half the amount of water to get the best results: an objective reached to respect the environment. Saving on detergent, water, energy and time □ To avoid wasting resources, the Washer-dryer should be used with a full load. A full load instead of two half loads allows you to save up to 50% on energy. □ The pre-wash cycle is only necessary on extremely soiled garments.

Avoiding it will save on detergent, time, water and between 5 and 15% energy.



[You're reading an excerpt. Click here to read official INDESIT](#)

[IWDE126 user guide](#)

<http://yourpdfguides.com/dref/5477779>

□ Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. □ Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible.
@@@This is perfectly normal; 2. clean the interior thoroughly; 3. screw the lid back on. 14 Troubleshooting Your Washer-dryer could fail to work. Before calling for Assistance (see page 16), make sure the problem can't easily be solved by consulting the following list.

GB Problem The machine does not switch on. The wash cycle does not start. Possible causes/Solution: □ The appliance is not plugged into the socket fully, or not enough to make contact. □ There is no power to the socket, or the fuse has blown in the mains plug. □ □ □ □ The door is not closed properly. The 'ON/OFF' button has not been pressed. The 'START/RESET' button has not been pressed. The water tap has not been turned on to allow water to flow into the machine. A delayed start has been set. The machine does not dry.

The clothes are too hot when the drying cycle is finished. The machine does not fill with water or The first wash cycle stage indicator light flashes. □ Check the 2 sections above. □ The 'DRY' button has been pressed to exclude drying. □ A cooling-down period is always added to the end of each drying cycle. If the clothes appear too hot to handle leave the door open to allow to cool further before removing from the machine. □ □ □ □ □ The water inlet hose is kinked. The water inlet hose is not connected to the water supply. The water pressure is too low. The water tap has not been turned on to allow water to flow into the machine.

There is no water supply to the house. The inlet valve filter is blocked. The 'START/RESET' button has not been pressed. The machine continuously fills with water and continually drains away or Water left in the dru or Stuck on wash. □ The top of the drain hose is too low - It must be fitted at a height between 65 and 100 cm from the floor. □ The drain hose is connected incorrectly to the sink trap allowing water to run into the machine, the drain hose must be positioned higher than the bottom of the sink to prevent water flowing down the drain hose. □ The end of the drain hose has been pushed too far down the standpipe, the 'U' bracket should be fitted 100 mm from the end of the drain hose. □ The Pump filter is blocked. □ The □ Easy iron □ function is enabled: to complete the programme, press the START/RESET button (see page 11). □ The drain hose is kinked.

□ New Installation - The blanking cap or spigot has not been removed if connected under a sink. □ The drain hose or sink trap is blocked. □ Programme times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance. This will increase the programme times accordingly (see 'The machine wont spin properly' below) - (Most Common Cause!). □ The feet have not been adjusted, enabling the machine to rock. □ New Installation - Either the Transit Bolts including the plastic spacers, or the Polystyrene Packaging have not been removed when installing the machine. □ The machine is trapped between cabinets and/or walls. □ The load is in a slight out of balance condition and machine is spinning, but at a lower speed. The machine does not drain or spin. The programme takes too long.

The machine vibrates a lot during the spin cycle. 15 GB The machine is noisy. The machine wont spin properly. □ There will always be some motor, pump and drum noise during spin. □ Out of Balance detected when attempting to go into a spin cycle - If this happens the machine will continue to try to repeat the distribution of the load required before the machine will go into higher spin speeds - This will increase the programme time accordingly.

This is a safety feature to prevent damage. Out of Balance can be caused by washing a single heavy item (eg duvet, quilt, etc). - Try the programme again using a different load. □ The dispenser drawer is blocked with detergent and requires cleaning. □ The water pressure is too high and requires turning down - turn down the tap on the water supply pipe slightly and try again.

□ The machine is tilting forwards - It must be level when in its final position. □ The fill hose is loose, check both the cabinet and tap ends. □ The fill hose is tight but still leaks, if so replace the rubber washers, or the fill hose is missing the rubber washer. □ The drain hose is not fixed in properly. □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again If the problem persists contact the Technical Assistance Service. □ The machine requires a service wash. Run a 90 degree wash cycle with detergent and no laundry. @@ □ The door seal has drainage holes at the bottom - This is normal. @@ The machine smells. The machine door cannot be opened.

Door Seal damaged at the bottom. The water level is too low when the machine is washing. There is too much foam. @@@ □ To comply with new energy saving regulations the machine is fitted with an automatic standby system. Press 'ON/OFF' button for 3 seconds to activate the machine, it can then either be switched off or a new programme selected. □ Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water Levels, Temperatures, Out of Balance loads, Wash time/progress). Normally, if your machine successfully completes the cycle, there is unlikely to be anything wrong! Remember, you will be charged for a service call for problems caused by incorrect installation, as listed above. @@@@ □ The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.

Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory .

These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5477779)

[IWDE126 user guide](http://yourpdfguides.com/dref/5477779)

<http://yourpdfguides.com/dref/5477779>

5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers.

There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on 08448 24 24 24 (Republic of Ireland 01 230 0800). Extended Guarantees We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 17 GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk

co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk.

uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 18 19 195082478.01 04/2010 - Xerox Fabriano GB 20 .



[You're reading an excerpt. Click here to read official INDESIT IWDE126 user guide](#)
<http://yourpdfguides.com/dref/5477779>