



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWE 7145. You'll find the answers to all your questions on the INDESIT IWE 7145 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT IWE 7145**  
**User guide INDESIT IWE 7145**  
**Operating instructions INDESIT IWE 7145**  
**Instructions for use INDESIT IWE 7145**  
**Instruction manual INDESIT IWE 7145**

## Instructions for use

WASHING MACHINE



English, 1

IWE 7145

### Contents



#### Installation, 2-3-4-5

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

#### Description of the washing machine, 6-7

Control panel  
Display

#### Running a wash cycle, 8

Wash cycles and options, 9  
Table of wash cycles  
Wash options

#### Detergents and laundry, 10

Detergent dispenser drawer  
Preparing the laundry  
Special wash cycles  
Load balancing system

#### Precautions and tips, 11

General safety  
Disposal  
Opening the porthole door manually

#### Care and maintenance, 12

Cutting off the water or electricity supply  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

#### Troubleshooting, 13

Service and Guarantee, 14-15-16  
Before calling for Assistance  
Guarantee

 INDESIT

7



[You're reading an excerpt. Click here to read official INDESIT IWE 7145 user guide](http://yourpdfguides.com/dref/3206504)  
<http://yourpdfguides.com/dref/3206504>

### Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

4. Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 2.

Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent. ! Packaging materials should not be used as toys for children. Levelling ! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand hoses. ! Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; · the supply voltage is included within the values indicated on the Technical details table (see page 5); · the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use.

@@@If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewirable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater. ! We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: · the socket is earthed and in compliance with the applicable law; · the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle.

GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP ! The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. ! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. ! The power supply cable must only be replaced by an authorised serviceman. 4 Technical data Model IWE 7145 width 59.5 cm height 85 cm depth 53,5 cm from 1 to 7 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres up to 1400 rotations per minute GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 1; temperature 60°C; using a load of 7 kg. This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/EC (Low Voltage) 5 Description of the washing machine GB Control panel ON/OFF button TEMPERATURE Button OPTION buttons with indicator lights START/PAUSE button with indicator light DISPLAY Detergent dispenser drawer WASH CYCLE knob SPIN SPEED Button DELAYED START Button Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").



[You're reading an excerpt. Click here to read official INDESIT IWE 7145 user guide](http://yourpdfguides.com/dref/3206504)

<http://yourpdfguides.com/dref/3206504>

ON/OFF button : press this briefly to switch the machine on or off. The START/PAUSE indicator light, which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 2 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE knob: used to set the desired wash cycle (see "Table of wash cycles"). @@@@The delay time will be shown on the display. @@@@is not illuminated, the door may be If the symbol opened. @@@@Pressing the relative button, the machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle. The "programme phases" relative to the selected programme and the "programme phase" of the running programme appear in section B: Wash Rinse Spin Drain The icons corresponding to "temperature", "Programmed start" and "spin" to bottom: symbol lights up, the display will visualise the set "temperature" value. If the symbol lights up.

When a "delayed start" has been set, the symbol lights up, the display will visualise the set "spin" value. If the appear in section C from top Door locked symbol The lit symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door. symbol is To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED switched off the door may be opened. 7 Running a wash cycle GB 1.

SWITCH THE MACHINE ON. Pressily soiled resistant colours. 90° 60° 40° 60° 40° 50° 40° 30° 40° 30° 60° 30° 30° 30° 30° - 1400 1400 1400 1400 1400 800 600 0 800 800 1400 400 600 600 600 1400 1400 0 7 7 7 7 3 1,5 1 3 1,5 3,5 2 3 3 Max. 2 pairs 3,5 3,5 2 The duration of the wash cycles can be checked on the display. Special 5 Wool: for wool, cashmere, etc.

6 Silk/Curtains: for garments in silk and viscose, lingerie. 7 Jeans - Express 15': to refresh lightly soiled garments quickly (not suitable for wool, silk and clothes which require washing by hand). 9 Flash Cotton 10 Outwear 8 - Sport 11 Sport Intensive 12 Sport Light 13 Special Shoes Partial wash cycles - Rinse Spin Drain - - 7 7 7 The information contained in the table is intended as a guide only. For all Test Institutes: 1) Test wash cycle in compliance with regulation EN 60456: set wash cycle 1 with a temperature of 60°C. 2) Long wash cycle for cottons: set wash cycle 1 with a temperature of 40°C. 3) Short wash cycle for cottons: set wash cycle 3 with a temperature of 40°C. Wash options Selecting this option enables you to suitably adjust drum rotation, temperature and water to a reduced load of lightly soiled cotton and synthetic fabrics (refer to the "Programme " enables you to wash in less time thereby table"). " saving water and electricity. We suggest using a liquid detergent suitably measured out to the lovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. 4. pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 11 Care and maintenance GB Cutting off the water and electricity supplies · Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. · Unplug the washing machine when cleaning it and during all maintenance work. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part.

! Make sure the wash cycle has finished and unplug the appliance. To access the pre-chamber: Cleaning the washing machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. 1. using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); Cleaning the detergent dispenser drawer Remove the dispenser by raising it and pulling it out (see figure).

@@@3. clean the inside thoroughly; 4. screw the lid back on; 5. @@@@. There is no power in the house. @@The ON/OFF button has not been pressed.

The START/PAUSE button has not been pressed. The water tap has not been opened. A delayed start has been set (see "Running a wash cycle"). The water inlet hose is not connected to the tap. The hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low.

@@@. The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service.

If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience. · The wash cycle does not include draining:

some wash cycles require the drain phase to be started manually. · The "Easy iron" option has been activated: To complete the wash cycle, press the START/PAUSE button (see "Wash cycles and options"). · The drain hose is bent (see "Installation"). · The drainage duct is clogged. · The drum was not unlocked correctly during installation (see "Installation"). · The washing machine is not level (see "Installation"). · The washing machine is trapped between cabinets and walls (see "Installation"). · The water inlet hose is not screwed on properly (see "Installation").

· The detergent dispenser drawer is blocked (for cleaning instructions, see "Care and maintenance"). · The drain hose is not fixed properly (see "Installation"). The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle.



[You're reading an excerpt. Click here to read official INDESIT IWE](#)

[7145 user guide](#)

<http://yourpdfguides.com/dref/3206504>

*The washing machine leaks.*

*The "option" indicator lights and the . Switch off the machine and unplug it, wait for approximately 1 minute "start/pause" indicator light flash and then switch it back on again. and an error code appears on the If the problem persists, contact the Technical Assistance Service. display (e.g.: F-01, F-.). There is too much foam. · The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). · Too much detergent was used. 13 Service GB Before calling for Assistance: · Check whether you can solve the problem alone (see "Troubleshooting"); · Restart the programme to check whether the problem has been solved; · If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! @@@@The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent.*

*Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory . These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee.*

*@@There will be a charge for our engineer's time. @@@@Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership.*

*Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 15 195074154.02 04/2009 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.*

*indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.*

*co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way,*

*Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance.*

*Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .*



[You're reading an excerpt. Click here to read official INDESIT IWE](http://yourpdfguides.com/dref/3206504)

[7145 user guide](http://yourpdfguides.com/dref/3206504)

<http://yourpdfguides.com/dref/3206504>