



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT IWUC 41051C. You'll find the answers to all your questions on the INDESIT IWUC 41051C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT IWUC 41051C
User guide INDESIT IWUC 41051C
Operating instructions INDESIT IWUC 41051C
Instructions for use INDESIT IWUC 41051C
Instruction manual INDESIT IWUC 41051C

Instructions for use

WASHING MACHINE



English, 1



Česky, 13



Français, 25



Български, 37



Italiano, 49



Українська, 61

IWUC 41051

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Care and maintenance, 4

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Precautions and tips, 5

General safety
Disposal

Description of the washing machine and starting a wash cycle, 6-7

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 8

Table of wash cycles

Personalisation, 9

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Comments requiring special care
Load balancing system

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official INDESIT IWUC 41051C user guide](http://yourpdfguides.com/dref/5516355)
<http://yourpdfguides.com/dref/5516355>

Manual abstract:

If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine. unpacking and levelling
Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the A corresponding spacer, located on the rear part of the appliance (see figure). b 4. Close off the holes using the plastic plugs provided.

5. Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. ! Packaging materials should not be used as toys for children. ! Every time the machine needs to be tilted or moved, the screws, the rubber washer and the spacer should be re-fitted at points A and B, in order to ensure the internal components remain intact. Remember to remove these elements afterwards.

levelling 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the electricity and water supplies Connecting the water inlet hose 1.

Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas A threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). ! @@ Use the ones supplied with the machine. @@The cable should not be bent or compressed. ! @@ warning! @@GB 65 - 100 cm alternatively, rest it on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure).

The free end of the hose should not be underwater. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle 2. Technical data Model Dimensions Capacity Electrical connections IWUC 41051 width 59,5 cm height 85 cm depth 33 cm from 1 to 4 kg please refer to the technical data plate fixed to the machine ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Before

plugging the appliance into the electricity socket, make sure that: •the socket is earthed and complies with all applicable laws; •the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); •the power supply voltage falls within the values indicated in the Technical data table (see opposite); •the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must be within easy reach. Maximum pressure

Water connec- 1 MPa (10 bar) minimum pressure tion 0. 05 MPa (0.

5 bar) drum capacity 27 litres up to 1000 rotations per Spin speed minute Test wash cycles in Programme 2: accordance Cotton standard 60°C. with directives Programme 3: 1061/2010 and Cotton standard 40°C. 1015/2010 This appliance conforms to the following EC Directives: - 2004/108/CE (Electromagnetic Compatibility) - 2012/19/EU - 2006/95/EC Low Voltage) 3 Care and maintenance GB Cutting off the water and electricity supplies •Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. □ Unplug the washing machine when cleaning it and during all maintenance work.

2. @@@@ do not use solvents or abrasives. @@@@Screw the lid back on; 5. @@@@! Make sure the wash cycle has finished and unplug the appliance. to access the prechamber: 1.

Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); 4 Precautions and tips ! This washing machine was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB General safety •This appliance was designed for domestic use only. □ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. □ Do not touch the machine when barefoot or with wet or damp hands or feet. □ Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull.

□ Do not open the detergent dispenser drawer while the machine is in operation. □ Do not touch the drained water as it may reach extremely high temperatures. •Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. □ If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. □ Always keep children well away from the appliance while it is operating. □ The door can become quite hot during the wash cycle. □ If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. □ Before loading laundry into the washing machine, make sure the drum is empty.

Disposal •Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. □ The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



[You're reading an excerpt. Click here to read official INDESIT IWUC 41051C user guide](http://yourpdfguides.com/dref/5516355)
<http://yourpdfguides.com/dref/5516355>

During the wash cycle, the knob does not move. The illuminated indicator light shows which phase is in progress.

The actual washing temperature may differ from the indicated value.

It lasts just 20 minutes and therefore saves both time and energy. It can be used to wash different types of fabrics together (except for wool and silk), with a maximum load of 1.5 kg. 8 Personalisation Setting the temperature Turn the TEMPERATURE knob to set the wash temperature (see Table of wash cycles). The temperature may be lowered, or even set to a cold wash.

The washing machine will automatically prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle. !

Exception: if the 2 programme is selected, the temperature can be increased up to a value of 90°C. GB Setting the spin speed Turn the SPIN SPEED knob to set the spin speed for the selected wash cycle. The maximum spin speeds available for each wash cycle are as follows: Wash cycles Maximum spin speed Cottons 1000 rpm Synthetics 800 rpm Wool 800 rpm Silk drain only The spin speed may be lowered, or the spin cycle can be excluded altogether by selecting the symbol. The washing machine will automatically prevent you from selecting a spin speed which is higher than the maximum speed set for each wash cycle. Functions The various wash functions available with this washing machine will help to achieve the desired results, every time. to activate the functions:

1. Press the button corresponding to the desired function; 2. The function is enabled when the corresponding indicator light is illuminated. Note: If the indicator light flashes rapidly, this signals that this particular function may not be selected in conjunction with the selected wash cycle.

Selecting this option enables you to suitably adjust drum rotation, temperature and water to a reduced load of lightly soiled cotton and synthetic fabrics (refer to the "Table of wash cycles"). Instead, intensified wash action and water optimisation ensure great wash results in the same average time of a standard cycle. For the best washing results we recommend the usage of a liquid det manually. The drum was not unlocked correctly during installation (see "Installation"). Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The washing machine does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The washing machine continuously takes in and drains water. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle.

the washing machine leaks. The "Functions" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). Too much detergent was used.

11 Service GB Before calling for Assistance: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door.



[You're reading an excerpt. Click here to read official INDESIT IWUC](#)

[41051C user guide](#)

<http://yourpdfguides.com/dref/5516355>