



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT PWC 8128 W. You'll find the answers to all your questions on the INDESIT PWC 8128 W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT PWC 8128 W
User guide INDESIT PWC 8128 W
Operating instructions INDESIT PWC 8128 W
Instructions for use INDESIT PWC 8128 W
Instruction manual INDESIT PWC 8128 W

Instructions for use

WASHING MACHINE

GB

English, 1

PWC 8128 W

Contents

GB

Installation, 2-3-4-5

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine and starting a wash cycle, 6-7

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 8

Table of wash cycles

Personalisation, 9

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Garments requiring special care
Load balancing system

Precautions and tips, 11

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13

Service and Guarantee, 14-15-16

Before calling for Assistance
Guarantee

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT PWC 8128 W user guide](http://yourpdfguides.com/dref/3206564)
<http://yourpdfguides.com/dref/3206564>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. ! Packaging materials should not be used as toys for children. Levelling ! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand hoses. ! Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; · the supply voltage is included within the values indicated on the Technical details table (see page 5); · the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use.

@@@If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere re-wearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater. ! We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: · the socket is earthed and in compliance with the applicable law; · the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE BROWN GREEN & YELLOW NEUTRAL (N) LIVE (L) EARTH (E) The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle.

Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. GREEN & YELLOW 13 ampere fuse BROWN BLUE CROSS-BAR CORD GRIP ! The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.

! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. ! The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected. 4 Technical data Model PWC 8128 W width 59.5 cm height 85 cm depth 62 cm from 1 to 8 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 62 litres up to 1200 rotations per minute GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation

EN 60456 programme 1; temperature 60°C; using a load of 8 kg. This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2006/95/EC (Low Voltage) - 2002/96/EC 5 Description of the washing machine and starting a wash cycle GB Control panel WASH CYCLE PROGRESS indicator lights FUNCTION ON/OFF button INDICATOR LIGHTS buttons with indicator lights WASH CYCLE Detergent dispenser drawer knob TEMPERATURE button with indicator light START/ PAUSE indicator light DOOR LOCKED button button SPIN DELAY TIMER button Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").



[You're reading an excerpt. Click here to read official INDESIT PWC](http://yourpdfguides.com/dref/3206564)

[8128 W user guide](http://yourpdfguides.com/dref/3206564)

<http://yourpdfguides.com/dref/3206564>

ON/OFF button: switches the washing machine on and off. WASH CYCLE knob: programmes the wash cycles. During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions. The indicator light corresponding to the selected function will remain lit. TEMPERATURE button: sets the temperature or the cold wash cycle (see "Personalisation"). SPIN button: sets the spin speed or exclude the spin cycle completely (see "Personalisation"). DELAY TIMER button: delays the start of the wash cycle by up to 9 hours. @@@@! @@The illuminated indicator light shows which phase is in progress. @@@@N.

B. @@@@This is what they can tell you: Delayed start If the DELAY TIMER function has been activated (see "Personalisation"), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash: Wash Rinse Spin Drain End of wash cycle END GB As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate. If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If the selected function is not compatible with another function which has been selected previously, the indicator light corresponding to the first function selected will flash and only the second function will be activated; the indicator light corresponding to the enabled option will remain lit. Note: if the SMART function is active, all other non-compatible functions cannot be activated.

Door locked indicator light When the indicator light is on, the porthole door is locked to prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle. GB Setting the spin speed Press the SPIN SPEED button to set the spin speed for the selected wash cycle. The maximum spin speeds available for each wash cycle are as follows: Wash cycles Maximum spin speed Cottons 1200 rpm Synthetics 800 rpm Wool 600 rpm Silk drain only The spin speed may be lowered, or the spin cycle can be excluded altogether by selecting the symbol . The washing machine will automatically prevent you from selecting a spin speed which is higher than the maximum speed set for each wash cycle. Functions The various wash functions available with this washing machine will help to achieve the desired results, every time.

To activate the functions: 1. Press the button corresponding to the desired function; 2. the function is enabled when the corresponding indicator light is illuminated. Note: If the indicator light flashes rapidly, this signals that this particular function may not be selected in conjunction with the selected wash cycle. The option optimises washing to suit the quantity of laundry loaded into the machine, thereby reducing the overall button to select the type of wash wash cycle duration while minimising water and energy consumption. Press the cycle desired: Intense: vigorous wash cycle for garments with a heavy soil level. Perform: standard wash cycle for garments with a normal soil level. Fast: quick wash cycle for garments with a light soil level. ! This may only be used in conjunction with wash cycle the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. 5.

reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Disposal · Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. · The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. 11 Care and maintenance

GB Cutting off the water and electricity supplies · Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. · Unplug the washing machine when cleaning it and during all maintenance work. 2. unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; Cleaning the washing machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. 3. clean the inside thoroughly; 4.

screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the detergent dispenser drawer 1 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. Checking the water inlet hose Check the inlet hose at least once a year.

@@@@@. There is no power in the house. @@The ON/OFF button has not been pressed. The START/PAUSE button has not been pressed. The water tap has not been opened. A delayed start has been set (see "Personalisation"). The water inlet hose is not connected to the tap. The hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low.

@@@. The wall drainage system is not fitted with a breather pipe. @@If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience. · The wash cycle does not include draining: some wash cycles require the drain phase to be started manually. · The "Easy iron" function is enabled: to complete the wash cycle, press the START/PAUSE button ("Personalisation"). · The drain hose is bent (see "Installation"). · The drainage duct is clogged. · The "Spin Speed" is in position. · The drum was not unlocked correctly during installation (see "Installation"). · The washing machine is not level (see "Installation").

· The washing machine is trapped between cabinets and walls (see "Installation"). · The water inlet hose is not screwed on properly (see "Installation").



[You're reading an excerpt. Click here to read official INDESIT PWC 8128 W user guide](http://yourpdfguides.com/dref/3206564)
<http://yourpdfguides.com/dref/3206564>

· The detergent dispenser drawer is blocked (for cleaning instructions, see "Care and maintenance"). · The drain hose is not fixed properly (see "Installation"). · Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. The washing machine leaks. The "Functions" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. · The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). · Too much detergent was used. 13 Service GB Before calling for Assistance: · Check whether you can solve the problem alone (see "Troubleshooting"); · Restart the programme to check whether the problem has been solved; · If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! @@@@The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland.

The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory . These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. @@There will be a charge for our engineer's time. @@@@Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. GB 15 195075240. 03 07/2009 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.

uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership.

To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .



[You're reading an excerpt. Click here to read official INDESIT PWC 8128 W user guide](http://yourpdfguides.com/dref/3206564)
<http://yourpdfguides.com/dref/3206564>