



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT PWE91672W. You'll find the answers to all your questions on the INDESIT PWE91672W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT PWE91672W
User guide INDESIT PWE91672W
Operating instructions INDESIT PWE91672W
Instructions for use INDESIT PWE91672W
Instruction manual INDESIT PWE91672W

Instructions for use

WASHING MACHINE

GB

English, 1

PWE 91672 W

GB

Contents

Installation, 2-3-4-5

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine, 6-7

Control panel
Display

Running a wash cycle, 8

Wash cycles and options, 9
Table of programmes and wash cycles
Wash options

Detergents and laundry, 10

Detergent dispenser drawer
Preparing the laundry
Special wash cycles

Precautions and advice, 11

General safety
Disposal

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13-14

Assistance, 15-16

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT PWE91672W user guide](http://yourpdfguides.com/dref/5489104)
<http://yourpdfguides.com/dref/5489104>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 1. @@@@Close off the holes using the plastic plugs provided. 5.

@@@@Packaging materials should not be used as toys for children. Levelling 3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical details table (see page 5). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician.

! Never use second-hand hoses. ! Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2.

If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; • the supply voltage is included within the values indicated on the Technical Data Plate fixed on the machine; • the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below.

WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug.

Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewireable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live GB Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater. !

We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: • the socket is earthed and in compliance with the applicable law; • the socket is able to sustain the appliance's maximum power load indicated on the Technical Data Plate fixed on the machine; 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt regarding the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE BROWN GREEN & YELLOW NEUTRAL (N) LIVE (L) EARTH (E) The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme. GREEN & YELLOW 13 ampere fuse BROWN BLUE CROSS-BAR CORD GRIP Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. ! The washing machine should not be installed in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain and thunderstorms.

! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. ! The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected. 4 Technical data Model PWE 91672 W width 59.5 cm height 85 cm depth 60 cm from 1 to 9 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 62 litres up to 1600 rotations per minute GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 1; temperature 60°C; using a load of 9 kg. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 5 Description of the washing machine GB Control panel OPTION ON/OFF button TEMPERATURE button buttons and indicator lights DOOR LOCKED indicator light DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN DELAY TIMER button button button and indicator light START/PAUSE Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").

! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. ! The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected. 4 Technical data Model PWE 91672 W width 59.5 cm height 85 cm depth 60 cm from 1 to 9 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 62 litres up to 1600 rotations per minute GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 1; temperature 60°C; using a load of 9 kg. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 5 Description of the washing machine GB Control panel OPTION ON/OFF button TEMPERATURE button buttons and indicator lights DOOR LOCKED indicator light DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN DELAY TIMER button button button and indicator light START/PAUSE Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").

! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. ! The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected. 4 Technical data Model PWE 91672 W width 59.5 cm height 85 cm depth 60 cm from 1 to 9 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 62 litres up to 1600 rotations per minute GB Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 1; temperature 60°C; using a load of 9 kg. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 5 Description of the washing machine GB Control panel OPTION ON/OFF button TEMPERATURE button buttons and indicator lights DOOR LOCKED indicator light DISPLAY Detergent dispenser drawer WASH CYCLE SELECTOR KNOB SPIN DELAY TIMER button button button and indicator light START/PAUSE Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5489104)

[PWE91672W user guide](http://yourpdfguides.com/dref/5489104)

<http://yourpdfguides.com/dref/5489104>

ON/OFF button: press this briefly to switch the machine on or off. The **START/PAUSE** indicator light which flashes slowly in a blue colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. **WASH CYCLE SELECTOR KNOB:** used to set the desired wash cycle (see "Table of programmes and wash cycles"). **OPTION** buttons and indicator lights: press to select the available options. The indicator light corresponding to the selected option will remain lit. **SPIN** button: press to reduce or completely exclude the spin cycle; the value appears on the display. **TEMPERATURE** button: press to reduce or completely exclude the temperature; the value appears on the display. **DELAY TIMER** button: press to set a delayed start for the selected wash cycle; the delay period appears on the display.

START/PAUSE button and indicator light: when the blue indicator light flashes slowly, press the button to start a wash cycle. Once the cycle has begun the indicator light will remain lit in a fixed manner. To pause the wash cycle, press the button again; the indicator light will flash in an amber colour. If the symbol is not illuminated, the door may be opened (wait approximately 3 minutes). To start the wash cycle from the point at which it was interrupted, press the button again.

DOOR LOCKED indicator light: The lit symbol indicates that the door is locked. The "speed." To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. ! If the selected option is not compatible with the set wash cycle, the indicator light will flash and the option will not be activated. ! If the selected option is not compatible with a previously selected one, the indicator light 8 Wash cycles and options Table of programmes and wash cycles Description of the wash cycle Daily Programmes 1 1 1 2 3 4 5 6 7 8 9 10 11 12 13 White Cotton: extremely soiled whites.

White Cotton (1): heavily soiled whites and resistant colours. White Cotton (2): heavily soiled whites and delicate colours. Cotton: heavily soiled whites and resistant colours. Coloured Cotton (3): lightly soiled whites and delicate colours. Cotton: lightly soiled whites and delicate colours. Synthetics: lightly soiled resistant colours. Jeans Shirts MixCool 30': to refresh lightly soiled garments quickly (not suitable for wool, silk and clothes which require washing by hand).

Special Wool: for wool, cashmere, etc. Delicates: for garments in silk and viscose, lingerie. Duvet: for down-stuffed garments Outwear Sport Shoes Partial Rinse Spin Drain 1600 1600 0 9 9 9 90° 60° 40° 60° 40° 30° 40° 40°&tal opening.

• If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. • Always keep children well away from the appliance while it is operating. • The door can become quite hot during the wash cycle. • If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. • Before loading laundry into the washing machine, make sure the drum is empty. Disposal • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. • The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. 11 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. • Unplug the washing machine when cleaning it and during all maintenance work. To access the pre-chamber: 1. take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 1 2 3 Cleaning the washing machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Cleaning the detergent dispenser drawer 1 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. 2.

unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal; 2 3. clean the inside thoroughly; 4. screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the prechamber which protects the pump, situated in its bottom part.

! Never use second-hand hoses. ! Make sure the wash cycle has finished and unplug the appliance. 12 Troubleshooting Your washing machine could occasionally fail to work. • The door is not closed properly. • The ON/OFF button has not been pressed. • The START/PAUSE button has not been pressed. • A delayed start has been set. • The water inlet hose is kinked. • The water inlet hose is not connected to the water supply. • The water pressure is too low.

• There is no water supply to the house. • The inlet valve filter is blocked. • The START/PAUSE button has not been pressed. • The Pump filter is blocked. • The drain hose is kinked (see "Installation").

• The drain hose or sink trap is blocked. • The Spin Speed is set to "OFF". • If the 'DELICATES' or 'OUTWEAR' programs are selected, at the end of the program it requires the drain phase to be started.



[You're reading an excerpt. Click here to read official INDESIT
PWE91672W user guide
http://yourpdfguides.com/dref/5489104](http://yourpdfguides.com/dref/5489104)

@@ • Programme times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance. This will increase the programme times accordingly (see 'The machine wont spin properly' below).

• The display time is for guidance only - it is not a precise time to finish and may vary. The machine does not fill with water or 'H2O' flashes in the display. The machine continuously fills with water and continually drains away or Water left in the drum or Stuck on wash. The machine does not drain or spin - (error lights flashing). The machine does spin The machine does not drain or spin - 'EASY IRON' & 'START/PAUSE' indicator lights flash. The programme takes too long. The Display sticks at one 'time to end' for more than 1 Minute or the Display changes the estimated 'Time to End' during the programme. The machine vibrates a lot during the spin cycle. • The feet have not been adjusted, enabling the machine to rock. • New Installation - Either the Transit Bolts including the plastic spacers, or the Polystyrene Packaging have not been removed when installing the machine.

• The machine is trapped between cabinets and/or walls. • The load is in a slight out of balance condition and machine is spinning, but at a lower speed. 13 GB The machine is noisy. The machine wont spin properly. • There will always be some motor, pump and drum noise during spin. • Out of Balance detected when attempting to go into a spin cycle - If this happens the machine will continue to try to repeat the distribution of the load required before the machine will go into higher spin speeds - This will increase the programme time accordingly. This is a safety feature to prevent damage. Out of Balance can be caused by washing a single heavy item (eg duvet, quilt, etc). - Try the programme again using a different load. • The dispenser drawer is blocked with detergent and requires cleaning.

• The water pressure is too high and requires turning down - turn down the tap on the water supply pipe slightly and try again. • The machine is tilting forwards - It must be level when in its final position. • The fill hose is loose, check both the cabinet and tap ends. • The fill hose is tight but still leaks, if so replace the rubber washers, or the fill hose is missing the rubber washer. • The drain hose is not fixed in properly.

• Switch off the machine and unplug it, wait for approximately 1 minute and then switch back on again. If the problem persists contact Technical Assistance Centre. • The machine requires a service wash. Run a 90 degree wash cycle with detergent and no laundry. • The door will not open until the door lock indicator light goes out shortly after the program has finished.

• If there is no power to the machine you need to perform the manual unlocking procedure. • The door seal has drainage holes at the bottom - This is normal. • The water level is correct if it can be seen at the bottom of the door. The machine leaks from the dispenser. The machine leaks (other than dispenser). The option lights and the START/ PAUSE indicator light are flash rapidly and an error code appears on the display (eg F-01, F-..). The machine smells. The machine door cannot be opened.

Door Seal damaged at the bottom. The water level is too low when the machine is washing. @@@@Note the machine will need the language resetting.

@@@ • To comply with new energy saving regulations the machine is fitted with an automatic standby system. Press 'ON/OFF' button for 3 seconds to activate the machine, it can then either be switched off or a new programme selected. After completing the programme, or before starting a programme, the machine has turned itself off (no lights). General. • Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water Levels, Temperatures, Out of Balance loads, Wash time/progress). Normally, if your machine successfully completes the cycle, there is unlikely to be anything wrong! Remember, you will be charged for a service call for problems caused by incorrect installation, as listed above. @@@@The appliance is used only on the electricity or gas supply printed on the rating plate.

The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland.

GB The guarantee does not cover: - - - Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.

5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on 08448 24 24 24 (Republic of Ireland 01 230 0800). Extended Guarantees We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 15 195088123.02 03/2011 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer.

Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life.



[You're reading an excerpt. Click here to read official INDESIT](#)

[PWE91672W user guide](#)

<http://yourpdfguides.com/dref/5489104>

UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us.

UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co.uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .



[You're reading an excerpt. Click here to read official INDESIT](#)

[PWE91672W user guide](#)

<http://yourpdfguides.com/dref/5489104>