



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT W 104 T. You'll find the answers to all your questions on the INDESIT W 104 T in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT W 104 T**  
**User guide INDESIT W 104 T**  
**Operating instructions INDESIT W 104 T**  
**Instructions for use INDESIT W 104 T**  
**Instruction manual INDESIT W 104 T**

## W 104 T

Wasmachine  
**Instructies voor het installeren en gebruik**  
Machine à laver  
**Instruction pour l'installation et l'emploi**  
Washing machine  
**Instructions for installation and use**  
Waschvollautomat  
**Installations- und Bedienungsanleitungen**

 **INDESIT**



[You're reading an excerpt. Click here to read official INDESIT W 104 T user guide](http://yourpdfguides.com/dref/958316)  
<http://yourpdfguides.com/dref/958316>

### Manual abstract:

@@@Never use pipes that have already been used. 3. @@@With the necessary upkeep, it will wash for years and years to come. What goes in your washing machine and how to start it (p. A correct distribution of your laundry is vital to the successful outcome of the wash and the life of the washing machine. Learn all the tips and secrets to dividing your linen: colour, type of fabric. Before calling a technician, read these pages: immediate solutions may be found for a number of problems. If the problem persists, call your local Indesit customer services who will be pleased to help. Any failure will be repaired, as soon as possible. The symbols on the labels of your garments are easy to understand and equally important for the success of your wash.

The guide includes simple instructions to help you choose the right temperature, wash cycles and ironing methods. Herein are the technical features of your washing machine: model type number, electric and water specifications, size, capacity, speed of the spin cycle and compliance with Italian and European regulations. Years back, our grandmothers were the ones who gave us good advice - and in those days synthetic fibres did not exist: washing was easy. Today, your washing machine offers you helpful advice allowing you to wash wool even better than an expert laundress would by hand. Safety for you and your family (p.

38) Here you will find the necessary safety guidelines, and it is important for you to read this section carefully. How to use the detergent dispenser. It has only a few essential buttons to help you choose any type of wash cycle, ranging from the most energetic, capable of cleaning a mechanic's overalls, to the most delicate for wool. Familiarising yourself with it will help you get the best out of your wash while helping your washing machine last longer. Herein is an easy table to help you choose the right programme, temperature, detergents and possible additives.

Choose the right programme and you will get better results with your wash while saving time, water and energy, day after day. M What goes in your washer?

Before washing, you can do a great deal to ensure better results. Divide your garments according to fabric and colour. Read the labels, follow their guidelines. before washing. @@@@The table on page 31 shows all meanings behind these symbols. Their recommendations are important to achieve better wash results. @@After installing your new washing machine, start a wash cycle by setting programme "I" at 90 degrees. Starting your washing machine in the right way is important for the quality of your wash, to help prevent future problems and enhance life expectancy of your appliance. Once you have loaded your washing machine and added the detergent together with any fabric conditioner, always check that: 1.

Choose the desired programme The programme is selected according to the type of garments that need to be washed. to choose a programme , refer to the table on page 30. Turn knob A until the selected programme is aligned with the mark on the knob, turn knob B to the desired temperature settings, if necessary use buttons D, E, F and lastly, press on/off button G (I position). For more delicate garments: protect underwear, tights and stockings and delicate items by placing them in a canvas pouch Then turn the washing machine off by pressing on-off button G (O position). You can now open the washing machine door safely. After having removed the freshly cleaned washing, leave the door open to allow air circulation inside the drum. Always disconnect electricity at the socket and turn off the water supply. Remember that, in the event of a power failure, or should the washing machine switch itself off, the programme chosen will remain in its memory. How to eliminate the most common stains ink and biro Dab with a wad of cotton soaked in methyl alcohol or alcohol at 90°. Tar Dab with fresh butter, rub in turpentine then wash immediately.

Wax Scrape away, then run a hot iron between two sheets of absorbent paper. Then rub in cotton with turpentine or methyl alcohol. Chewing gum Rub in nail polish remover and wipe with a clean rag. Mold Cotton and white linen should be placed in a solution of 5 parts water, one bleach and a spoon of vinegar, then washed immediately. For other white fabrics, use hydrogen peroxide at 10 volumes and wash immediately.

Nail polish Place a sheet of absorbent paper on the side of the stain, wet it with nail polish remover, shifting the garment as the sheet gradually changes colour. Here I'm in command Making the right choice is important. Programme selector knob Use this knob to select the wash programme. turn this knob clockwise only. To select a programme, you should turn the knob so that the symbol/number of the desired programme is in line with the pointer on the knob. now press on/off button G (position I) , pilot lamp H will start flashing. After 5", the setting will be accepted, pilot lamp H will stop flashing (staying lit) and the wash cycle will begin. @@@@ 30. @@@@Turning the appliance off does not cancel the selected programme. @@@@The programme can be completed by turning knob A one notch. @@ Slow spin Use this button to reduce the spinning speed from 1000 to 500 rpm for the cotton and linen programmes and from 850 to 500 rpm for the synthetic fabrics programmes. We recommend that you use this function only with small laundry loads, dosing the detergent proportionally. The door block lamp The safety lamp indicates that the washing machine door is locked to prevent it from being opened accidentally. To avoid any damages to lock mechanism, you must wait for the lamp to extinguish, before attempting to open the door which takes around three minutes. What are you washing today? Type of fabric and degree of soil Programme Temperature Detergent knob knob for prewash Detergent for wash Fabric softener Length of the cycle (minutes) Description of wash cycle COTTON Exceptionally soiled whites (sheets, tablecloths, etc.

Wash cycle at 60°C, rinse cycles, antcrease or delicate spin cycle Wash cycle at 40°C, rinse cycles, antcrease or delicate spin cycle Wash cycle at 30°C, rinse cycles and delicate spin cycle Rinse cycles, anti-crease or delicate spin cycl Rinse cycles with automatic introduction of softener, anti-crease or delicate spin cycle Draining and delicate spin cycle Important: to cancel the wash programme you have just set, select one of the symbols (Stop/Reset) and wait for at least 5 seconds. The data found in the table is purely indicative, and can vary according to the quantity and type of washing, the water system temperature and the room temperature. Daily wash Your washer has a programme available for the washing of lightly soiled garments in a short amount of time. By setting programme 7 at a temperature of 30°C, you can wash different types of fabrics together (except for wool and silk), with a maximum load of 3 kg. This programmes allows you to save on both time and energy as it only lasts around 30 minutes.



[You're reading an excerpt. Click here to read official INDESIT W 104](#)

[T user guide](#)

<http://yourpdfguides.com/dref/958316>

Learn the meaning of these symbols and you will get better results, your garments will last longer resulting in an improved wash. all over Europe , garment labels contain messages expressed in small yet important symbols. Understanding them is very important if you want to get better results and treat your garments the way they deserve to be treated. These symbols are divided in five different categories and shapes: washing , bleaching , ironing , dry cleaning and drying . Turn shirts inside out to get better results and make them last longer.

Always empty pockets of their contents. Look at the label: it will always give you useful advice. When loading your washing, try to have a mixture of large to small items. Make sure you select the right temperature! Consult and learn the symbols in this table: they will help you obtain a better wash, treat your clothes properly, and get a better performance out of your washing machine. Wash at 95°C Bleaching only in cold water Hot iron at max 200°C Dry clean with any solvent Machine dryable Wash at 60°C Medium hot ironing at max 150°C Dry clean only with perchloride, benzine av.

, pure alcohol, R111 and R113 Do not machine dry Wash at 40°C Iron at max 110°C Dry clean with av. Do not dry clean Dry on clothes hanger Never use your washing machine to wash. Do not wash coloured linen with whites. watch the weight! For best results, do not exceed the weight limits stated below (figures show weight of dry garments): - Resistant fabrics: 5 kg maximum - Synthetic fabrics: 2. 5 kg maximum - Delicate fabrics: 2 kg maximum - Pure new wool: 1 kg maximum How much does it weigh? @@Printed T-shirts and sweatshirts should always be ironed inside out.

dungaree alert. @@@@ holidays: unplug the appliance. @@@@ quilted coats and anorak. @@Do not load more than 2-3 kg and never load 5 kg. Repeat rinse once or twice using the gentle spin. trainers. @@Do not wash trainers with whites. @@@@There could be work in progress in your building or street. @@ is the rubber hose kinked? @@Make sure it is not squashed or kinked. It must be installed at a height ranging from 60 to 100 cm.

is the end of the hose immersed in water? Does the wall drainage system have a breather pipe? @@@@To solve this problem, a special valve must be installed. @@Make sure the drain hose is not squashed or kinked. Is there space between the machine and adjacent units? @@A few cm of space should therefore be left around it. @@@@Is the correct amount being used? @@@@The levelling of the appliance should be checked periodically. Adjust the feet and check them with a level. @@@@ if in doubt , contact a qualified techni more accurate information as to the type of water in your system, call the local water works or a local plumber). @@@@ Never exaggerate with doses. normal detergents already contain delimiting agents. Only if the water is particularly hard, that is, rich in lime content, do we recommend the use of a specific product at every wash. A periodical wash cycle with a dose of a delimiting product, without detergents or washing, may prove useful.

Never use too much detergent or additives because this could cause an excess amount of foam, scaling and possible damage to the component parts of your washing machine. Do not forget to empty all pockets: small objects can cause damage to your washer. When in need, check the pump and the rubber hose. The washer comes equipped with a self-cleaning pump that does not require any cleaning or maintenance. Small objects may accidentally fall into the pump: coins, hair clips, loose buttons and other small items.

To avoid possible damage, they are withheld in an accessible pre-chamber, situated at the lower end of the pump. Attention: Before attempting to examine this pre-chamber, first ensure that the machine has finished its programme and is empty. unplug the machine , as with any maintenance. To gain access gently ease down the top of the plinth panel situated at the base of the machine, with a screwdriver etc, to release it. Then ease the top edge forward to allow it to be lifted clear (Fig.

1). @@Release the cover by turning anticlockwise (Fig. @@If you see any cracks, replace it immediately. @@@@ 1. The machine should not be installed in an outdoor environment, not even when a roof shelters the area, because it may be very dangerous to leave it exposed to rain and thunderstorms. 2. It must only be used by adults and exclusively for washing clothes following the instructions provided in this manual. 3. Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.

4. Before loading the washing machine, make sure the drum is empty. 5. Never touch the washing machine when barefoot or with wet or damp hands or feet.

6. Never use extensions or multiple plugs, which are particularly dangerous in humid environments. The power supply cable must never be bent or dangerously compressed. I only want an authorised specialised technician with original Indesit spare parts! Your washer has been built in compliance with the strictest international safety regulations. To protect you and all your family. 8.

@@ 9. @@@@Allow a few minutes at the end of the program for the lock to release. 10. In case of malfunctioning, first close the water tap and unplug the appliance from the wall socket; do not under any circumstances touch internal parts in order to attempt repairs. Never open the detergent dispenser while the appliance is functioning; do not use hand wash detergent because the abundance of foam could damage its internal parts.

How to change the power supply cable The washing machine power supply cable is special and can be purchased exclusively from authorised Technical Service Centres. to replace the cable: 1. Make sure that the machine is switched off and unplugged. 2. Remove the covering lid by unscrewing the two screws I, and then pull it towards you [fig.

4] noting as to their position (Blue=N wire; Brown=L wire) leaving the earth wire until last . : letters L, N and the symbol are indicated on the radio interference suppressor. 4. Remove the upper part of the cable slightly from the back panel of the appliance, pull the power supply cable upwards and take it out [fig. To put the covering lid back on, rest it on the washing machine [fig. 6] and let it slide forwards until the hooks situated on the front slide into the special slots formed into the control panel and tighten the screws back on. Leader for young Europe .



[You're reading an excerpt. Click here to read official INDESIT W 104](#)

[T user guide](#)

<http://yourpdfguides.com/dref/958316>