



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WD 11. You'll find the answers to all your questions on the INDESIT WD 11 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WD 11
User guide INDESIT WD 11
Operating instructions INDESIT WD 11
Instructions for use INDESIT WD 11
Instruction manual INDESIT WD 11

Washer-dryer

Instructions for installation and use
WD 11

 **INDESIT**



[You're reading an excerpt. Click here to read official INDESIT WD 11 user guide](http://yourpdfguides.com/dref/3206774)
<http://yourpdfguides.com/dref/3206774>

Manual abstract:

@@Always check: 1. That the electric system conforms to regulations; 2. That the inlet and draining pipes are connected correctly. Never use pipes that have already been used. 3. @@That the drum's fixing screws have been removed from the back of the washer-dryer; 2. 3. 4. What goes in your washer-dryer and how to start it (p. 2) 8.

How to dry (p. 5) A few handy tips to get the best drying cycle from your appliance. A correct distribution of your laundry is vital to the successful outcome of the wash and the life of the washer-dryer. Learn all the tips and secrets to dividing your linen: colour, type of fabric. 9.

Care and maintenance (p. 13) With just a bit of care, it will repay you with loyalty and devotion. @@@@Problems and solutions (p. @@If the problem persists, call your local Indesit customer services who will be pleased to help. Any failure will be repaired, as soon as possible.

Useful tips to avoid mistakes (p. 7) Years back, our grandmothers were the ones who gave us good advice - and in those days synthetic fibres did not exist: washing was easy. Today, your washer-dryer offers you helpful advice allowing you to wash wool even better than an expert laundress would by hand. 11.

Technical characteristics (p. 10) 5. 6. The detergent dispenser (p. 8) Herein are the technical features of your washer-dryer: model type number, electric and water specifications, size, capacity, speed of the spin cycle and compliance with Italian and European regulations. How to use the detergent dispenser.

12. Safety for you and your family (p. 14) Here you will find the necessary safety guidelines, and it is important for you to read this section carefully.

Understanding the control panel (p. 3) Washer-dryer's control panel is very simple. It has only a few essential buttons to help you choose any type of wash cycle, ranging from the most energetic, capable of cleaning a mechanic's overalls, to the most delicate for wool. Familiarising yourself with it will help you get the best out of your wash while helping your washer-dryer last longer. It's easy. 13. Indesit stays with you after your purchase (p.

15) Indesit supports its products after their purchase by offering you a range of special services, professional assistance, spare parts and quality accessories.

7. Guide to the wash programmes (p. 4) Herein is an easy table to help you choose the right programme, temperature, detergents and possible additives.

Choose the right programme and you will get better results with your wash while saving time, water and energy, day after day.

1 Instructions for installation and use M What goes in your washer-dryer? Before washing, you can do a great deal to ensure better results. Divide your garments according to fabric and colour. Read the labels, follow their guidelines. Before washing. Divide your washing according to the type of fabric and colour fastness.

Empty all pockets (coins, paper, money and small objects) and ensure all loose buttons are repaired or removed prior to loading. Dividing your garments according to fabric and colour, is very important for good results The labels say it all. Always look at the labels: they tell you everything about your garment and how to wash it in the best possible way. The table on page 6 shows all meanings behind these symbols. Their recommendations are important to achieve better wash results. Big and small happily together. This washer-dryer has a special electronic control device for even distribution: before the spin cycle starts, this device allows the garments to position themselves, to minimise noise and vibrations during the spin cycle. Starting the washer-dryer After installing your new washer-dryer, start a wash cycle by setting programme "1" at 90 degrees. Starting your washer-dryer in the right way is important for the quality of your wash, to help prevent future problems and enhance life expectancy of your appliance. Once you have loaded your washer-dryer and added the detergent together with any fabric conditioner, always check that: 1.

The door is closed correctly. 2. The plug is secured in the socket. 3. The water supply is turned on. 4. Selector knob A is positioned on one of the symbols (Stop/ Reset). Choose the desired programme The programme is selected according to the type of garments that need to be washed. To choose a programme, refer to the table on page 4. Turn knob A until the selected programme is aligned with the mark on the knob, turn knob B to the desired temperature settings, check that knob C is in the desired position, if necessary use buttons E, F, G and lastly, press on/off button H (I position).

For more delicate garments: protect underwear, tights and stockings and delicate items by placing them in a canvas pouch At the end of the wash cycle... Lamp I will flash quickly for a few seconds, then it will begin flashing more slowly. Then turn the washer-dryer off by pressing on-off button H (O position). You can now open the washer-dryer door safely. After having removed the freshly cleaned washing, leave the door open to allow air circulation inside the drum. Always disconnect electricity at the socket and turn off the water supply. Remember that, in the event of a power failure, or should the washer-dryer switch itself off, the programme chosen will remain in its memory. How to eliminate the most common stains Ink and biro Dab with a wad of cotton soaked in methyl alcohol or alcohol at 90°.

Tar Dab with fresh butter, rub in turpentine then wash immediately. Wax Scrape away, then run a hot iron between two sheets of absorbent paper. Then rub in cotton with turpentine or methyl alcohol. Chewing gum Rub in nail polish remover and wipe with a clean rag. Mold Cotton and white linen should be placed in a solution of 5 parts water, one bleach and a spoon of vinegar, then washed immediately. For other white fabrics, use hydrogen peroxide at 10 volumes and wash immediately. Lipstick Dab with ether on wool or cotton. Use trichloroethylene for silk. Nail polish Place a sheet of absorbent paper on the side of the stain, wet it with nail polish remover, shifting the garment as the sheet gradually changes colour. Grass Dab with a wad of cotton soaked in methyl alcohol.

Instructions for installation and use 2 Understanding the control panel Here I'm in command Making the right choice is important. And it's easy. E F G I L D H C B A Programme selector knob Use this knob to select the wash programme. Turn this knob clockwise only. To select a programme, you should turn the knob so that the symbol/number of the desired programme is in line with the pointer on the knob. Now press on/off button H (position I), pilot lamp I will start flashing. After 5", the setting will be accepted, pilot lamp I will stop flashing (staying lit) and the wash cycle will begin. Should you wish to interrupt the programme in progress or set a new one, select one of the symbols (Stop/Reset) and wait 5" : when the cancellation has been accepted, pilot lamp I flashes, and you can then turn the appliance off.



[You're reading an excerpt. Click here to read official INDESIT WD](#)

[11 user guide](#)

<http://yourpdfguides.com/dref/3206774>

After the wash cycle has been set and accepted by the washing machine, turning the knob will have no effect (except for when it is on position Stop/Reset).
Temperature control knob It is used to set the wash temperature in the recommended programme table on pag.

4. It also allows you to reduce the temperature recommended for the selected programme, and even to set a cold wash cycle (). Detergent dispenser It is divided into three compartments: 1. Detergent for pre-wash; 2. Detergent for the main cycle wash; 3.

Fabric conditioner. Extra Economy Reduces water consumption during the rinse cycles. We recommend that you use this function only with small laundry loads, dosing the detergent proportionally. Drying cycle knob Use this knob to select the desired drying cycle. Two options are available: A - Based on time: From 40 minutes to 150.

B - Based on the damp level of the dry clothes: Iron :use this slightly damp setting for clothes that you intend to iron to reduce effort and save energy in the drying cycle. Wardrobe : use this setting when you want dry clothes that can be stored after hanging for a short while. Extra dry : use this setting when you want very dry clothes. A cooling stage is foreseen at the end of the drying cycle. Anti-crease This button allows you to interrupt a programme (on symbol) keeping the washing soaking in water before the spin cycle. It is a very useful button in particular because it can be used for delicates and synthetics. It is only to be used with wash programmes for synthetic fabrics, silk and curtains when it is impossible for you to take the washing out immediately. Before opening the washing machine door, finish the wash cycle as follows: Silk and curtains: press button E and the machine will drain the water. @ @N.B.

: With Daily wash, this function is not performed. @ @ @ @ It flashes quickly when the door should not be opened. @ @ @ @ Understanding them is very important if you want to get better results and treat your garments the way secret. @ @ @ @ @ @ @ @ @ @ @ @ One last secret: when washing with cold water, always reduce the amount of detergent you use: it dissolves less easily in cold water than in hot water, so part of it would be wasted. In compartment 1: Detergent for pre-washing (powder) In compartment 2: Detergent for washing (powder or liquid) 1 2 3 In compartment 3: Additives (softeners, perfumes, etc.) The detergent dispenser can be removed and cleaned: pull it outwards, as indicated in the figure. Then leave it under running water for a few minutes.

Cutting costs efficiently A guide to environmentally friendly and economic use of your appliance. MAXIMISE THE LOAD SIZE Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. SAVE up to 50% energy by washing a full load instead of 2 half loads. DO YOU NEED TO PRE-WASH? For heavily soiled laundry only! @ @ IS A HOT WASH REQUIRED? @ @ SAVE up to 50% energy by using a 60°C wash programme. BEFORE USING A DRYING PROGRAMME ... @ @ Before calling for assistance, always check these points.

@ @ It could have been moved whilst cleaning. Is there electricity in the house? @ @ Or maybe due to a general failure in your entire area. Is the washer-dryer door closed properly? @ @ Is the On/Off button pressed? If it is, then a programmed start has been set. @ @ Is the water supply turned on? @ @ off, select one of the symbols stop/reset , then switch it back on. @ @ @ @ @ @ This will eliminate the possibility of leakage.

Always leave the appliance door ajar to avoid bad odours. Clean the appliance's exteriors gently. @ @ Even during maintenance, the appliance should always be unplugged. Use solvents and aggressive abrasives. @ @ Neglect the detergent dispenser. @ @ Go on holiday without thinking about her. @ @ Is there a water shortage ? There could be work in progress in your building or street. Is there sufficient water pressure? The autoclave may be malfunctioning. Is the tap filter clean? @ @ Is the rubber hose kinked? @ @ @ @ It must be installed at a height ranging from 60 to 100 cm. Is the end of the hose immersed in water? Does the wall drainage system have a breather pipe? @ @ @ @ @ @ The tract of the drain hose must be as straight as possible.

Make sure the drain hose is not squashed or kinked. Is the washer-dryer's drain duct clogged? Is there an extension of the drain hose? @ @ If it is not a built-in model, the washer-dryer will oscillate a bit during the spin cycle. A few cm of space should therefore be left around it. The washer-dryer does not drain or spin. Does the selected programme incorporates water draining? Some programmes stop at the end of the wash cycles and draining will have to be selected manually. Is the "Anti-crease" function -where provided enabled? This function requires manual selection for draining. Is the drain pump clogged? To check it, turn off the water supply, unplug the washerdryer and follow the instructions on page 13, or call for technical assistance. Too much foam. Is the detergent appropriate for machine washing? Check whether the definition on its label reads "for machine wash" or "hand and machine wash", or any other similar wording. The washer-dryer leaks.

Is the metal ring of the inlet hose properly attached? Turn off the water supply, unplug the appliance and try tightening its attachment without forcing it. Is the detergent dispenser obstructed? Remove and wash it under tap water. Is the drain hose well attached? Turn off the water supply, unplug the appliance and try tightening its attachment. Excessive vibration during the spin cycle. Have all transit screws been removed during installation? See the following page on installation procedures.

Has the washer-dryer been levelled correctly? The levelling of the appliance should be checked periodically. Adjust the feet and check them with a level. Is the correct amount being used? An excessive amount of detergent, besides producing too much foam, does not guarantee a more effective wash, and causes scaling in the internal parts of the appliance. The washer-dryer does not dry. Check whether: the plug has been correctly inserted into the socket; there is electricity in your home; the appliance door has been shut properly; a delayed start (if available) has not been selected; programme knob A has been set to position (Stop/Reset); the drying cycle knob C has been set to position 0.

Always get assistance from authorised technicians and always insist on original spare parts. Technical characteristics Model Dimensions WD 11 width 59,5 cm height 85 cm depth 53,5 cm from 1 to 5 kg for the wash programme; from 1 to 2,5 kg for the drying programme voltage 230/240 Volt 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0,05 MPa (0,5 bar) drum capacity 46 litre up to 1100 rpm wash: programme 3 , temperature 60°C. Carried out with 5 kg load; drying: run with a load of 2.5 kg and knob C set to position . This appliance conforms with the following E.



[You're reading an excerpt. Click here to read official INDESIT WD](#)

[11 user guide](#)

<http://yourpdfguides.com/dref/3206774>

E.C. directives: - 73/23/EEC of 19/02/73 (Low Voltage) and subsequent modifications - 89/336/EEC of 03/05/89 (Electromagnetic Compatibility) and subsequent modifications The washer-dryer doesn't dry properly. Check whether: the end of the drain hose is underwater; the drain pump is obstructed; the advice given on the maximum loads has been taken; the water tap has been turned on. If, despite all checks, the washerdryer fails to function and the problem persists, call your nearest authorised Customer Service Centre, providing the following information: - the nature of malfunction - the model type no.

(Mod.) - the serial number (S/N) This information can be found on the data plate situated at the back of the washer-dryer.

Capacity Electrical connections Water connections Spinning speed Control programs in compliance with IEC regulation 456 Instructions for installation and use 10 Installation and removal When the new washer-dryer arrives Whether new or just transported to a new house, installation is extremely important for the correct functioning of your washer-dryer. After removing the appliance from its packaging, check that it is intact. If in doubt, contact a qualified technician immediately. The inside of the machine is supported, for transportation, by four screws on the back panel. Connection to the water mains Both hot and cold water supplies are preferable and they should be between 34.

5kN/m²(51lb/in²) and 1034.2kN/m²(150lb/in²) pressure. The hose having the red end fitting should be encountered between the hot supply and the threaded connection adjacent to the letter H on the rear of the machine. The hose having the white end fittings should be connected between the cold supply and the threaded connection adjacent to the letter C on the rear of the machine. Remember to insert a sealing washer at each connection to ensure watertight joints. Do not overtighten the connections by using tools -hand tight is sufficient to prevent leaks. It is generally more convenient to have these supplies away from the sink taps. @@@@Before using the appliance please read the instructions below. WARNING - THIS APPLIANCE MUST BE EARTHED.

@@@@@@@@@@@@@A. @@@@@@Should you move house then these should be replaced to support the inside of the machine to prevent damage when transporting the machine. Warning! The company denies all liability if and when these norms are not respected. Plastic bags, expanded styrofoam, nails and other packaging parts are not children's toys, and are potentially dangerous. Water pipe inlet at the top right. Fig.

A 11 Instructions for installation and use Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a nonrewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere re-wearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to or terminal marked E or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board.

If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL(N) BROWN LIVE (L) GREEN&YELLOW EARTH(E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP Instructions for installation and use 12 Easy Care and Maintenance Treat your machine well and it will provide many years of trouble free service Your washer-dryer is a reliable companion in life and on the job.

It is just as important for you to keep it in shape. Your washer-dryer is designed to provide reliable service over many years.

A few simple steps will help to prolong its life and avoid problems. It is advisable, to turn off water taps when the machine is not to be used, this protects the hoses, etc. If the water in your area is too hard, use a deliming product (water is hard if it often leaves whitish stains around taps or drains, especially of bath tubs. For more accurate information as to the type of water in your system, call the local water works or a local plumber). Pockets must always be emptied removing even pins, badges and any other hard object.

The washer-dryer exterior should be cleaned with a rag dipped in lukewarm water and soap. It is important to wash the detergent dispenser regularly. To prevent dried washing powder from accumulating, place the dispenser under running water for a few minutes. Never exaggerate with doses. Normal detergents already contain deliming agents. Only if the water is particularly hard, that is, rich in lime content, do we recommend the use of a specific product at every wash. A periodical wash cycle with a dose of a deliming product, without detergents or washing, may prove useful. @@@@@@Unplug the machine, as with any maintenance. To gain access gently ease down the top of the plinth panel situated at the base of the machine, with a screwdriver etc, to release it. Then ease the top edge forward to allow it to be lifted clear (Fig.

1). Place a shallow dish or tray below the cover of the pre-chamber to catch the small amount of water present. Release the cover by turning anticlockwise (Fig. 2). Ensure that the cover is securely replaced. Re-fit the plinth cover by inserting the hooks on its lower edge into the slots and ease the top edge back into position. Fig. 1 Fig. 2 The water inlet hose Check the rubber hose at least once a year. If you see any cracks, replace it immediately.

When you use your washer-dryer, water pressure is very strong and a cracked tube could easily split open.



[You're reading an excerpt. Click here to read official INDESIT WD](http://yourpdfguides.com/dref/3206774)

[11 user guide](http://yourpdfguides.com/dref/3206774)

<http://yourpdfguides.com/dref/3206774>

13 Instructions for installation and use Important for the safe use of your washer-dryer Your safety and that of your family Read these instructions and all the information in this manual carefully: they are an important source, not only of numerous useful tips, but also of vital information on safety, use and maintenance. 1. @@2. @@3.

@@Never try to do this alone, because the appliance is very heavy. 4. Before loading the washerdryer, make sure the drum is empty. 5. @@6. Never use extensions or multiple plugs, which are particularly dangerous in humid environments. The power supply cable must never be bent or dangerously compressed. 7. Never open the detergent dispenser while the appliance is functioning; do not use hand wash detergent because the abundance of foam could damage its internal parts. 8. Never pull on the supply cable or the washer-dryer to disconnect it from the wall socket: it is extremely dangerous. 9. While the appliance is functioning, do not touch the drain water as it could reach very high temperatures. The appliance door, during wash cycles, tends to become hot; ensure Your washer-dryer has been built in compliance with the strictest international safety regulations. To protect you and all your family.

that children do no touch it. Never force the washerdryer door because this could damage the safety lock which prevents accidental opening when the machine is working. Allow a few minutes at the end of the program for the lock to release. 10. In case of malfunctioning, first close the water tap and unplug the appliance from the wall socket; do not under any circumstances touch internal parts in order to attempt repairs. 11. If you interrupt a Wash Programme before its end, then the water and clothes may be hot. The water level may also be above the door, see instruction for draining the machine before you open the door and handle with caution . 12. During the Tumble Drying programme and at its end, the clothes and drum of the machine may be hot, handle with caution and do not touch the drum.

I only want an authorised specialised technician with original Indesit spare parts! How to change the power supply cable The power supply cable must only be replaced by one of our authorised Service Engineers. Instructions for installation and use 14 Stay in touch THANK YOU for choosing an Indesit appliance.

We are confident you have made a good choice and that your new appliance will give many years of excellent service. And we're there when you need us.

Register your purchase now This will confirm your entitlement to enter our quarterly prize draw where you have the possibility to recover the cost of your purchase.

Simply complete and return the Registration Form supplied with the appliance documents, using the FREEPOST envelope supplied. Or call the Registration Hotline on 0870 010 4305. We're as close to you as your telephone For direct access to Genuine Indesit Spare Parts and Accessories, call 0870 558 5850 and speak to our skilled staff who can help you to identify and purchase the item you require. For a Rapid Response to a problem with your appliance, call 0870 607 0805. We're open from Monday to Saturday (8am - 5.

30pm weekdays, 9am - 5pm Saturday). We have our own department of highly trained Indesit service staff. For most calls, our Service Engineer can fix the problem on the first visit. Please have the following details to hand when you ring us: The nature of the problem, the Model Number and the Serial Number.

These numbers can be found on the appliance and on the portion of the Registration Card which you retain. 15 Instructions for installation and use Instructions for installation and use 16 17 Instructions for installation and use Instructions for installation and use 18 Merloni Elettrodomestici Viale Aristide Merloni 47 60044 Fabriano Italy Tel +39 0732 6611 Fax +39 0732 662501 www.merloni.com Leader for young Europe 10/2002 - 195029445.05 - XEROX BUSINESS SERVICES - DOCUTECH .



[You're reading an excerpt. Click here to read official INDESIT WD](#)

[11 user guide](#)

<http://yourpdfguides.com/dref/3206774>