



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WD12X. You'll find the answers to all your questions on the INDESIT WD12X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WD12X
User guide INDESIT WD12X
Operating instructions INDESIT WD12X
Instructions for use INDESIT WD12X
Instruction manual INDESIT WD12X

Washing machine

Instructions for installation and use
WD 12 X

 **INDESIT**



[You're reading an excerpt. Click here to read official INDESIT WD12X user guide](http://yourpdfguides.com/dref/5067019)
<http://yourpdfguides.com/dref/5067019>

Manual abstract:

@@Always check: 1. That the electric system conforms to regulations; 2. That the inlet and draining pipes are connected correctly. Never use pipes that have already been used. 3. @@That the drum's fixing screws have been removed from the back of the washer-dryer; 2. 3. 4. What goes in your washer-dryer and how to start it (p. 2) 8.

How to dry (p. 5) A few handy tips to get the best drying cycle from your appliance. A correct distribution of your laundry is vital to the successful outcome of the wash and the life of the washer-dryer. Learn all the tips and secrets to dividing your linen: colour, type of fabric. 9.

Care and maintenance (p. 15) With just a bit of care, it will repay you with loyalty and devotion. With the necessary upkeep, it will wash for years and years to come. Guide to understanding labels (p. 6) The symbols on the labels of your garments are easy to understand and equally important for the success of your wash.

The guide includes simple instructions to help you choose the right temperature, wash cycles and ironing methods. 10. Problems and solutions (p. 9 and 10) Before calling a technician, read these pages: immediate solutions may be found for a number of problems. If the problem persists, call your local Indesit customer services who will be pleased to help. Any failure will be repaired, as soon as possible. Useful tips to avoid mistakes (p. 7) Years back, our grandmothers were the ones who gave us good advice - and in those days synthetic fibres did not exist: washing was easy. Today, your washer-dryer offers you helpful advice allowing you to wash wool even better than an expert laundress would by hand. 11.

Technical characteristics (p. 10) 5. 6. The detergent dispenser (p. 8) Herein are the technical features of your washer-dryer: model type number, electric and water specifications, size, capacity, speed of the spin cycle and compliance with Italian and European regulations. How to use the detergent dispenser and the bleach compartment. 12. Safety for you and your family (p. 16) Here you will find the necessary safety guidelines, and it is important for you to read this section carefully. Understanding the control panel (p.

3) Washer-dryer's control panel is very simple. It has only a few essential buttons to help you choose any type of wash cycle, ranging from the most energetic, capable of cleaning a mechanic's overalls, to the most delicate for wool. Familiarising yourself with it will help you get the best out of your wash while helping your washer-dryer last longer. It's easy. 13.

Indesit stays with you after your purchase (p. 17) Indesit supports its products after their purchase by offering you a range of special services, professional assistance, spare parts and quality accessories. 7. Guide to the wash programmes (p. 4) Herein is an easy table to help you choose the right programme, temperature, detergents and possible additives.

Choose the right programme and you will get better results with your wash while saving time, water and energy, day after day. 1 Instructions for installation and use M What goes in your washer-dryer? Before washing, you can do a great deal to ensure better results. Divide your garments according to fabric and colour. Read the labels, follow their guidelines. Before washing. Divide your washing according to the type of fabric and colour fastness. Empty all pockets (coins, paper, money and small objects) and ensure all loose buttons are repaired or removed prior to loading. Dividing your garments according to fabric and colour, is very important for good results The labels say it all. Always look at the labels: they tell you everything about your garment and how to wash it in the best possible way. The table on page 6 shows all meanings behind these symbols.

Their recommendations are important to achieve better wash results. Big and small happily together. This washer-dryer has a special electronic control device for even distribution: before the spin cycle starts, this device allows the garments to position themselves, to minimise noise and vibrations during the spin cycle. Starting the washer-dryer After installing your new washer-dryer, start a wash cycle by setting programme "1" at 90 degrees. Starting your washer-dryer in the right way is important for the quality of your wash, to help prevent future problems and enhance life expectancy of your appliance. Once you have loaded your washer-dryer and added the detergent together with any fabric conditioner, always check that: 1. The door is closed correctly. 2. The plug is secured in the socket. 3.

The water supply is turned on. 4. Selector knob A is positioned on one of the symbols (Stop/ Reset). Choose the desired programme The programme is selected according to the type of garments that need to be washed. To choose a programme, refer to the table on page 4.

Turn knob A until the selected programme is aligned with the mark on the knob, turn knob B to the desired temperature settings, check that knob C is in the desired position, if necessary use buttons E, F, G and lastly, press on/off button H (I position). For more delicate garments: protect underwear, tights and stockings and delicate items by placing them in a canvas pouch At the end of the wash cycle... Lamp I will flash quickly for a few seconds, then it will begin flashing more slowly.

Then turn the washer-dryer off by pressing on-off button H (O position). You can now open the washer-dryer door safely. After having removed the freshly cleaned washing, leave the door open to allow air circulation inside the drum. Always disconnect electricity at the socket and turn off the water supply.

Remember that, in the event of a power failure, or should the washer-dryer switch itself off, the programme chosen will remain in its memory. How to eliminate the most common stains Ink and biro Dab with a wad of cotton soaked in methyl alcohol or alcohol at 90°. Tar Dab with fresh butter, rub in turpentine then wash immediately. Wax Scrape away, then run a hot iron between two sheets of absorbent paper. Then rub in cotton with turpentine or methyl alcohol. Chewing gum Rub in nail polish remover and wipe with a clean rag.

Mold Cotton and white linen should be placed in a solution of 5 parts water, one bleach and a spoon of vinegar, then washed immediately. For other white fabrics, use hydrogen peroxide at 10 volumes and wash immediately. Lipstick Dab with ether on wool or cotton. Use trichloroethylene for silk. Nail polish Place a sheet of absorbent paper on the side of the stain, wet it with nail polish remover, shifting the garment as the sheet gradually changes colour. Grass Dab with a wad of cotton soaked in methyl alcohol. Instructions for installation and use 2 Understanding the control panel Here I'm in command Making the right choice is important. And it's easy. E F G H I L D C The washer-dryer is equipped with an extra compartment 4 (provided as an accessory) for the bleach, to be inserted in compartment 1. B A Programme selector knob Use this knob to select the wash programme.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5067019)

[WD12X user guide](http://yourpdfguides.com/dref/5067019)

<http://yourpdfguides.com/dref/5067019>

Turn this knob clockwise only. To select a programme, you should turn the knob so that the symbol/number of the desired programme is in line with the pointer on the knob. Now press on/off button H (position I), pilot lamp I will start flashing. After 5", the setting will be accepted, pilot lamp I will stop flashing (staying lit) and the wash cycle will begin. Should you wish to interrupt the programme in progress or set a new one, select one of the symbols (Stop/Reset) and wait 5" : when the cancellation has been accepted, pilot lamp I flashes, and you can then turn the appliance off.

After the wash cycle has been set and accepted by the washerdryer, turning the knob will have no effect (except for when it is on position Stop/Reset).
Temperature control knob It is used to set the wash temperature in the recommended programme table on pag. 4. It also allows you to reduce the temperature recommended for the selected programme, and even to set a cold wash cycle ().
Drying cycle knob Use this knob to select the desired drying cycle.

Two options are available: A - Based on time: From 40 minutes to 150. B - Based on the damp level of the dry clothes: Iron :slightly damp clothes, easy to iron. Wardrobe : dry clothes to put away. Extra dry : very dry clothes, recommended for towelling and bathrobes. A cooling stage is foreseen at the end of the drying cycle. Easy iron This function allows your washing to come out of the machine without creases, making it much easier to iron. You can use it with programmes 3-4 (Cotton), 5-6-7 (Synthetics) and 9-10 (Delicates). Press this button in programmes 5-6-7-9-10 and the wash cycle will come to a stop on symbol . You can complete it by pressing button E again. Notes: - this function should not be used when button G (stain removal) has been pressed.

- If you also want to run the drying cycle, this button is enabled only if combined with level (Iron). Slow spin Use this button to reduce the spinning speed from 1200 to 600 rpm for the cotton and linen programmes and from 850 to 600 rpm for the synthetic fabrics programmes. On-off When button H is pressed, the washer-dryer is switched on, when it is not the machine is switched off. Turning the appliance off does not cancel the selected programme. On-off lamp / door locked Lamp I flashes slowly when the appliance is switched on and awaiting instructions and at the end of a cycle, indicating that the door can be opened. It flashes quickly when the door should not be opened. A steady light means the appliance has accepted the selected programme. Drying cycle lamp When this lamp is on, it means that knob C has been set on a drying cycle and at the end of the wash cycle, the appliance will run the selected tumble drying cycle.

Detergent dispenser It is divided into 3 compartments: 1. Detergent for pre-wash; 2.

Detergent for the main cycle wash; 3. Fabric conditioner. MAX 4 1 2 3 The detergent dispenser with the additional bleach compartment is here. Stain removal (see page 8) Thanks to this command, the washer-dryer will carry out a more intensive wash that optimises the effectiveness of the liquid additives, thus allowing more resistant stains to be removed. When you press the stain removal button, you cannot activate the pre-wash.

3 Instructions for installation and use What are you washing today? A programme for all seasons Type of fabric and degree of soil Programme Temperature Detergent knob knob for wash Fabric softener Stain rem. button/ Bleach Length of the cycle (minutes) Description of wash cycle COTTON Exceptionally soiled whites (sheets, tablecloths, etc.) Exceptionally soiled whites (sheets, tablecloths, etc.) Heavily soiled whites and fast colours Slightly soiled whites and delicate colours (shirts, jumpers, etc.) Rinse cycles/bleach Spin cycle Drying cycle for cotton fabrics Stop/Reset SYNTHETICS Heavily soiled fast colour synthetics (baby linen, etc.)

) Heavily soiled fast colour synthetics (baby linen, etc.) Delicate colour synthetics (all types of slightly soiled garments) Rinse cycles/bleach Fabric softener Spin cycle Drying cycle for synthetic fabrics Stop/Reset DELICATES Wool, hand wash Particularly delicate garments and fabrics (curtains, silk, viscose, etc.) Rinse cycles Spin cycle Draining Stop/Reset Interrupts/ Cancels the selected programme Interrupts/ Cancels the selected programme 1 2 3 4 90°C 90°C 60°C 40°C x x x x x x x x x x Del./Trad. Del./Trad. Del./Trad. Del./Trad.

165 145 130 95 Warm prewash, wash cycle at 90°C, rinse cycles, intermediate and final spin cycles Wash cycle at 90°C, rinse cycles, intermediate and final spin cycles Wash cycle at 60°C, rinse cycles, intermediate and final spin cycles Wash cycle at 40°C, rinse cycles, intermediate and final spin cycles Rinse cycles, intermediate and final spin cycles Draining and final spin cycle 5 6 7 8 60°C 50°C 40°C 30°C x x x x x x x x x x Delicate Delicate Delicate 100 95 70 30 Wash cycle at 60°C, rinse cycles, anti-crease or delicate spin cycle Wash cycle at 50°C, rinse cycles, anti-crease or delicate spin cycle Wash cycle at 40°C, rinse cycles, anti-crease or delicate spin cycle Wash cycle and use Understanding labels Learn the meaning of these symbols and you will get better results, your garments will last longer resulting in an improved wash. All over Europe, garment labels contain messages expressed in small yet important symbols. Understanding them is very important if you want to get better results and treat your garments the way they deserve to be treated. These symbols are divided in five different categories and , bleaching shapes: washing , ironing , dry cleaning and drying . Useful tips Turn shirts inside out to get better results and make them last longer. Always empty pockets of their contents. Look at the label: it will always give you useful advice. When loading your washing, try to have a mixture of large to small items. Make sure you select the right temperature! Consult and learn the symbols in this table: they will help you obtain a better wash, treat your clothes properly, and get a better performance out of your washer-dryer. Wash Strong action Delicate action Bleaching Ironing Dry cleaning High Temp.

Drying Low Temperat. cl Wash at 95°C Bleaching only in cold water Hot iron at max 200°C A Dry clean with any solvent Machine dryable P Wash at 60°C Medium hot ironing at max 150°C Dry clean only with perchloride, benzine av., pure alcohol, R111 and R113 Do not machine dry Do not bleach F Wash at 40°C Iron at max 110°C Dry clean with av. benzine, pure alcohol and R113 Spread to dry Wash at 30°C Not ironable Do not dry clean Hang to dry without spin drying Hand wash Not washable in water Dry on clothes hanger Instructions for installation and use 6 Useful tips Never use your washerdryer to wash.. . torn, fraying or non-hemmed linen. If it is absolutely necessary, place it in a bag for protection.



[You're reading an excerpt. Click here to read official INDESIT](#)

[WD12X user guide](#)

<http://yourpdfguides.com/dref/5067019>

Do not wash coloured linen with whites. Watch the weight! For best results, do not exceed the weight limits stated below (figures show weight of dry garments): - Resistant fabrics: 5,5 kg maximum - Synthetic fabrics: 2.

5 kg maximum - Delicate fabrics: 2 kg maximum - Pure new wool: 1 kg maximum How much does it weigh? 1 sheet 400-500 gr. 1 pillow case 150-200 gr. 1 tablecloth 400-500 gr. 1 bathrobe 900-1,200 gr. 1 towel 150-250 gr. Coloured T-shirts, printed ones and shirts last longer if turned inside out before washing. Printed T-shirts and sweatshirts should always be ironed inside out. Dungaree alert. Very popular "salopette" type overalls have straps with hooks that can damage the drum of your washer-dryer or other garments during the wash. To minimise the risk, place hooks in the pocket and fasten with safety pins.

Holidays: unplug the appliance. It is recommended that you should unplug the machine from the socket and turn off the water supply. Leave the door ajar to allow air circulation to the drum and the door gasket area. This will prevent unpleasant odours. WOOL CYCLE For best results, we recommend you use a specific detergent, taking care not to wash more than 1 kg of laundry. How to wash almost anything Curtains. Curtains tend to crease a great deal. A useful tip to reduce creasing: fold the curtains and place them in a pillow case or mesh bag. Do not load anything else inside the appliance, this will ensure that the overall weight does not exceed the half load. Remember to use the specific programme 10 which automatically excludes the spin cycle.

Quilted coats and anorak. You can wash quilted coats and wind-cheaters, too, if they are padded with goose or duck down. Do not load more than 2-3 kg and never load 5,5 kg. Repeat rinse once or twice using the gentle spin. Trainers.

Once you have removed mud and dirt from trainers, you can even wash them with jeans or any other tough garments. Do not wash trainers with whites. 7 Instructions for installation and use It's important for a good wash Useful tips about the detergent dispenser The first secret is the easiest: the detergent dispenser is opened by pull it outwards. MAX In compartment 1: Detergent for pre-washing (powder) 4 You must follow the dosage recommendations provided by the manufacturers when adding detergent or fabric conditioner. Doses will vary according to the wash load, the water hardness and how soiled the washing is.

Experience will help you select the right dosage almost automatically: it will become your secret. Before adding detergent for prewashing in compartment 1, make sure that the extra compartment for bleach 4 has not been inserted. Ensure no overfilling when adding fabric conditioner in compartment 3. The washer-dryer automatically adds the softener to the wash in each programme. Liquid detergent is poured into compartment 2 just a few seconds before starting the wash cycle. Remember that liquid detergent is only designed for wash cycles of up to 60 degrees on non pre-wash items. Special containers are sold with liquid or powder detergents for placing inside the washer-dryer drum, these are positioned according to the instructions found in the detergent box Never use hand wash detergent, because it may form too much foam, which could damage the washer-dryer. Detergents that are specifically formulated for both hand and machine wash are an exception. One last secret: when washing with cold water, always reduce the amount of detergent you use: it dissolves less easily in cold water than in hot water, so part of it would be wasted. In compartment 2: Detergent for washing (powder or liquid) 1 2 3 In compartment 3: Additives (softeners, perfumes, etc.

) In compartment 4: Bleach and delicate bleach. Bleach cycle and stain removal button If bleaching is necessary, the extra case 4 (provided) must be inserted into compartment 1 of the detergent dispenser. When pouring in the bleach, be careful not to exceed the "max" level indicated on the central pivot (see illustration). The use of the additional bleach container excludes the possibility of using the pre-wash cycle. Traditional bleach can only be used on sturdy white fabrics, whereas delicate bleach can be used for coloured fabrics, synthetics and for wool. MAX MAX 1 2 The detergent dispenser can be removed and cleaned: pull it outwards, as indicated in the figure. Then leave it under running water for a few minutes. Cutting costs efficiently A guide to environmentally friendly and economic use of your appliance. MAXIMISE THE LOAD SIZE Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. SAVE up to 50% energy by washing a full load instead of 2 half loads.

DO YOU NEED TO PRE-WASH? For heavily soiled laundry only! SAVE detergent, time, water and between 5 to 15% energy consumption by NOT selecting Prewash for slight to normally soiled laundry. IS A HOT WASH REQUIRED? Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash programme. SAVE up to 50% energy by using a 60°C wash programme. BEFORE USING A DRYING PROGRAMME ..

. SAVE energy and time by selecting the highest suitable spin speed to reduce the water content in laundry before using a drying programme. You cannot bleach with the "Silk" programme and with the "special programmes" (see page 4). Use the stain removal button every time you want to bleach. Should you want to do it separately you must pour the bleach into the additional container 4, press button G (stain removal), start the washer-dryer, then select one of the symbols according to the type of fabric.

When you bleach during a normal wash cycle, pour the detergent and any additives in the special compartments, press button G (stain removal), set the programme you desire and turn the washer-dryer on. Instructions for installation and use 8 Troubleshooting Before calling, read the following In most cases, when your washer-dryer fails to work, the problems arising can be easily solved without having to call for a technician. Before calling for assistance, always check these points. The washer-dryer fails to start. Is the plug correctly inserted into the socket? It could have been moved whilst cleaning. Is there electricity in the house? A circuit breaker may have switched off as a result of too many electrical appliances working at the same time. Or maybe due to a general failure in your entire area. Is the washer-dryer door closed properly? For safety reasons, the washer-dryer cannot work if the door is open or not shut properly. Is the On/Off button pressed? If it is, then a programmed start has been set. Is the programmed start knob, in the correct position for those models concerned? Is the water supply turned on? For safety reasons, if the washer-dryer does not load water, it cannot start a wash cycle.

off, select one of the symbols stop/reset, then switch it back on. If the knob continues to turn, call for assistance because it is showing an anomaly.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5067019)

[WD12X user guide](http://yourpdfguides.com/dref/5067019)

<http://yourpdfguides.com/dref/5067019>

But where did all the water go? Simple: with the new Indesit technology, you need less than half of it, to get good results on twice as much! This is why you cannot see the water through the door: because there is little, very little of it, to respect the environment yet without renouncing maximum cleanliness. And, on top of that, you are also saving electricity. The washer-dryer fails to fill with water. **RIGHT** Turn off the water supply after use. This will eliminate the possibility of leakage. Always leave the appliance door ajar to avoid bad odours. Clean the appliance's exteriors gently. To clean the exteriors and the rubber parts of the appliance, always use a soft cloth dipped in warm and soapy water.

WRONG Leave the washer-dryer plugged in while cleaning. Even during maintenance, the appliance should always be unplugged. Use solvents and aggressive abrasives. @Neglect the detergent dispenser. @Go on holiday without thinking about her.

@Is there a water shortage? There could be work in progress in your building or street. Is there sufficient water pressure? The autoclave may be malfunctioning. Is the tap filter clean? @Is the rubber hose kinked? @@@It must be installed at a height ranging from 60 to 100 cm. Is the end of the hose immersed in water? Does the wall drainage system have a breather pipe? @@@@@Is there an extension of the drain hose? @@@@@@Is the "Easy iron" function -where provided - enabled? This function requires manual selection for draining. Is the drain hose kinked? The tract of the drain hose must be as straight as possible.

@@@@@See the following page on installation procedures. Has the washer-dryer been levelled correctly? The levelling of the appliance should be checked periodically. Adjust the feet and check them with a level. Is the metal ring of the inlet hose properly attached? @Is the detergent dispenser obstructed? Remove and wash it under tap water. Is the drain hose well attached? @@@@@@ (Mod.) - the serial number (S/N).

...) This information can be found on the data plate situated at the back of the washer-dryer. Capacity Electrical connections Water connections Spinning speed Control programs in compliance with IEC regulation 456 Instructions for installation and use 10 Installation and removal When the new washer-dryer arrives Whether new or just transported to a new house, installation is extremely important for the correct functioning of your washer-dryer. After removing the appliance from its packaging, check that it is intact. If in doubt, contact a qualified technician immediately. The inside of the machine is supported, for transportation, by four screws on the back panel. Connection to the water mains Both hot and cold water supplies are preferable and they should be between 34.5kN/m² (51lb/in²) and 1034.

2kN/m² (150lb/in²) pressure. The hose having the red end fitting should be encountered between the hot supply and the threaded connection adjacent to the letter H on the rear of the machine. The hose having the white end fittings should be connected between the cold supply and the threaded connection adjacent to the letter C on the rear of the machine. Remember to insert a sealing washer at each connection to ensure watertight joints. Do not overtighten the connections by using tools -hand tight is sufficient to prevent leaks.

It is generally more convenient to have these supplies away from the sink taps. Where no suitable hot water supply is available or it does not meet these requirements, both inlet hoses may be connected to a cold supply by using two taps etc., or a «T» junction on the plumbing however, use of cold water only will increase programme times. Note: the maximum temperature should not exceed 70°C (158°F). Connecting the drain hose The drain hose (hooked pipe) is secured to the rear of the machine by support clips and may be routed to right or left as required.

Electric connection Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. **WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Before using the washing machine, remove the screws, remove the spacers together with the rubber tubes attached to them (keeping all the parts) and use the plastic plugs provided to fill in the holes. Important: Use the cap (provided) to close the 3 holes which housed the stop pin, situated in the right-hand part of the lower back of the washing machine.

Levelling The washing machine must be levelled appropriately in order to guarantee its correct functioning. To level the appliance, the front feet must be adjusted; the angle of inclination, measured according to the worktop, must not exceed 2°. When placed on carpet, make sure the ventilation is not reduced. The hook to be used in case the drain hose ends at a height below 60 cm. The drain hose should be placed in a stand pipe with a minimum internal diameter of 38 mm (1½ inches) or it can be positioned over a sink or it can be connected as shown in Fig. A. The height of stand pipe or sink should be between 60 and 100 cm (24 and 40 inches). Care must be taken that the hose is not obstructed, twisted, submerged or kinked. If the hose is connected with an airtight joining, provision should be made to prevent syphoning. The rubber gasket.

The front feet are adjustable. Connect the inlet hose to the threaded connector on the machine rear. The guide for draining into tubs and sinks. Retain the transit screws, spacers and washers. Should you move house then these should be replaced to support the inside of the machine to prevent damage when transporting the machine.

Water pipe inlet at the top right. Fig. A Warning! The company denies all liability if and when these norms are not respected. Plastic bags, expanded styrofoam, nails and other packaging parts are not children's toys, and are potentially dangerous. 11 Instructions for installation and use Removing the plug: If your appliance has a nonrewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc. please ensure that either: the plug is replaced by a fused 13 ampere re-wearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance.



[You're reading an excerpt. Click here to read official INDESIT](#)

[WD12X user guide](#)

<http://yourpdfguides.com/dref/5067019>

Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Neutral Blue Brown Live As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL(N) BROWN LIVE (L) GREEN&YELLOW EARTH(E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP Instructions for installation and use 12 Instructions for the fitter Mounting the wooden panel onto the door and inserting the machine into cabinets: In the case where the machine must be shipped for final installation after the wooden panel has been mounted, we suggest leaving it in its original packaging.

The packaging was designed to make it possible to mount the wooden panel onto the machine without removing it completely (see figures below). The wooden panel that covers the face of the machine must not be less than 18 mm in thickness and can be hinged on either the right or left. For the sake of practicality when using the machine, we recommend that the panel be hinged on the same side as the door for the machine itself - the left. Door Mounting Accessories (Fig. 1-2-3-4-5) N° 2 Hinge Supports Fig. 1 Fig. 2 N° 2 Hinges cheria lavabian machine washing laver machine aschine waschm ta Lato por Door side te Cote por te Tur sei N° 1 Magnet 6 5 4 3 2 1 N° 1 Magnet plate Fig. 4 Fig. 3 A B N° 1 Rubber plug Fig. 5 Fig.

4/B N° 1 Spacer C D cheria lavabian machine washing laver machine e maschin wasch ta Lato por Door side te Cote por e Tur seit 6 5 4 3 2 1 - No. 6 type A self-threading screws, l =13 mm. - No. 2 type B metric, countersunk screws, l =25; for fastening the magnet plate to the cabinet. - No.

4 type C metric screws, l =15 mm; for mounting the hinge supports to the cabinet. - No. 4 type D metric screws, l =7 mm; for mounting the hinges on the supports. E 13 Instructions for installation and use Mounting the Parts onto the Face of the Machine - Mount the hinge supports onto the face of the machine, positioning the hole indicated by the arrow in fig. 1 towards the inside of the face and using the type C screws.

- Mount the magnetic plate on the opposite side, at the top, using the two type B screws. - Place the spacer illustrated in fig. 4/B between the appliance front and the magnet receiver. Using the Drilling Template - To trace the positions of the holes on the left-hand side of the panel, align the drilling template to the top left side of the panel using the lines traced on the extremities as a reference. - To trace the positions of the holes on the right-hand side of the panel, align the drilling template to the top right side of the panel. - Use an appropriately sized router to mill the holes for the two hinges, the rubber plug and the magnet. Mounding the Parts onto the Wooden Panel (Door) - Insert the hinges into the holes (the movable part of the hinge must be positioned facing away from the panel) and fasten them with the 4 type A screws. - Insert the magnet into the top hole on the opposite side of the hinges and fasten it with the two type B screws. - Insert the rubber plug into the bottom hole. The panel is now ready to be mounted onto the machine.

Mounting the Panel into the machine Insert the nib of the hinge (indicated by the arrow in fig. 2) into the hole for the hinge and push the panel towards the front of the machine. Fasten the two hinges with the type D screws. Fastening the plinth guide If the machine is installed at the end of a set of modular cabinets, mount either one or both of the guides for the base molding (as shown in fig. 8). Adjust them for depth based on the position of the base molding, and, if necessary, fasten the base to the guides (fig. 9). This is how to assemble the plinth guide (fig.8): Fasten angle P using screw R, insert plinth guide Q into the special slot and once it is in the desired position, lock it in place using angle P and screw R. Inserting the machine into the Cabinet - Push the machine into the opening, aligning it with the cabinets (fig.

6). - Regulate the adjustable feet to raise the machine to the appropriate height. - To adjust the position of the wooden panel in both the vertical and horizontal directions, use the C and D screws, as shown in fig. 7. Important: close the lower part of the appliance front by ensuring that the plinth rests against the floor.

600 min 540 595 C D min0 57 820 ÷ 900 815 C Fig. 7 Fig. 8 Fig. 9 Fig. 6 Accessories provided for the height adjustment The following can be found inside the polystyrene lid (fig.

10): 2 crossbars (G), 1 strip (M) Fig. 10 the following can be found inside the appliance drum: 4 additional feet (H), 4 screws (I), 4 screws (R), 4 nuts (L), 2 plinth guides (Q) Adjusting the appliance height The height of the appliance can be adjusted (from 815 mm to 835 mm), by turning the 4 feet. Should you require the appliance to be placed higher than the above height, you need to use the following accessories to raise it to up to 870 mm: - the two crossbars (G) - the 4 feet (H) - the 4 screws (I) - the 4 nuts (L) then perform the following operations (fig. 11): remove the 4 original feet, place a crossbar G at the front of the appliance, fastening it in place using screws I (screwing them in where the original feet were) then insert the new feet H. Repeat the same operation at the back of the appliance. Now adjust feet H to raise or lower the appliance from 835 mm to 870 mm. Once you have reached the desired height, lock nuts L onto crossbar G. To adjust the appliance to a height between 870 mm and 900 mm, you need to mount strip M, adjusting feet H to the required height. Insert the strip as follows: loosen the three screws N situated at the front of the Top cover of the appliance, insert strip M as shown in fig. 12, then fasten screws N.

M G L H Fig. 11 I Fig. 12 Instructions for installation and use 14 Easy Care and Maintenance Treat your machine well and it will provide many years of trouble free service Your washer-dryer is a reliable companion in life and on the job.



[You're reading an excerpt. Click here to read official INDESIT
WD12X user guide
http://yourpdfguides.com/dref/5067019](http://yourpdfguides.com/dref/5067019)

It is just as important for you to keep it in shape. Your washer-dryer is designed to provide reliable service over many years. A few simple steps will help to prolong its life and avoid problems. It is advisable, to turn off water taps when the machine is not to be used, this protects the hoses, etc. If the water in your area is too hard, use a deliming product (water is hard if it often leaves whitish stains around taps or drains, especially of bath tubs. For more accurate information as to the type of water in your system, call the local water works or a local plumber). Pockets must always be emptied removing even pins, badges and any other hard object.

The washer-dryer exterior should be cleaned with a rag dipped in lukewarm water and soap. It is important to wash the detergent dispenser regularly. To prevent dried washing powder from accumulating, place the dispenser under running water for a few minutes. Never exaggerate with doses. Normal detergents already contain deliming agents.

Only if the water is particularly hard, that is, rich in lime content, do we recommend the use of a specific product at every wash. A periodical wash cycle with a dose of a deliming product, without detergents or washing, may prove useful. Never use too much detergent or additives because this could cause an excess amount of foam, scaling and possible damage to the component parts of your washer-dryer. Do not forget to empty all pockets: small objects can cause damage to your washer-dryer. When in need, check the pump and the rubber hose.

The washer-dryer comes equipped with a self-cleaning pump that does not require any cleaning or maintenance. The water inlet hose Check the rubber hose at least once a year. If you see any cracks, replace it immediately. When you use your washer-dryer, water pressure is very strong and a cracked tube could easily split open. 15 Instructions for installation and use Important for the safe use of your washer-dryer Your safety and that of your family Read these instructions and all the information in this manual carefully: they are an important source, not only of numerous useful tips, but also of vital information on safety, use and maintenance. 1. the machine should not be installed in an outdoor environment, not even when a roof shelters the area, because it may be very dangerous to leave it exposed to rain and thunderstorms. 2. It must only be used by adults and exclusively for washing clothes following the instructions provided in this manual. 3.

Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. 4. Before loading the washerdryer, make sure the drum is empty. 5. @@@6. @@@@To protect you and all your family. 8. @@@9. While the appliance is functioning, do not touch the drain water as it could reach very high temperatures.

The appliance door, during wash cycles, tends to become hot; ensure that children do no touch it. Never force the washerdryer door because this could damage the safety lock which prevents accidental opening when the nachine is working. Allow a few minutes at the end of the program for the lock to release. 10. In case of malfunctioning, first close the water tap and unplug the appliance from the wall socket; do not under any circumstances touch internal parts in order to attempt repairs.

7. Never open the detergent dispenser while the appliance is functioning; do not use hand wash detergent because the abundance of foam could damage its internal parts. How to change the power supply cable The washing machine power supply cable is special and can be purchased exclusively from authorised Technical Service Centres. To replace the cable: 1. Make sure that the machine is switched off and unplugged.

2. Remove the cover by unscrewing screws I [fig 13]. 3. Disconnect the wires from the radio interference suppressor F [fig. 14] noting as to their position (Blue=N wire; Brown=L wire) leaving the earth wire until last . N.B.: letters L, N and the symbol are indicated on the radio interference suppressor. 4. Remove the screw and washer V [fig.

15], which act as a stop for the cable passageway. 5. Remove the upper part of the cable slightly from the back panel of the appliance, pull the power supply cable upwards and take it out [fig. 16]. To connect the new power supply cable, reverse the procedure. It is important for your safety that you reassemble all parts and screws used. N L F Fig. 13 Fig. 14 Fig. 15 Fig.

16 Instructions for installation and use 16 Stay in touch THANK YOU for choosing an Indesit appliance. We are confident you have made a good choice and that your new appliance will give many years of excellent service. And we're there when you need us. Register your purchase now This will confirm your entitlement to enter our quarterly prize draw where you have the possibility to recover the cost of your purchase. Simply complete and return the Registration Form supplied with the appliance documents, using the FREEPOST envelope supplied.

Or call the Registration Hotline on 0870 010 4305. We're as close to you as your telephone For direct access to Genuine Indesit Spare Parts and Accessories, call 0870 558 5850 and speak to our skilled staff who can help you to identify and purchase the item you require. For a Rapid Response to a problem with your appliance, call 0870 607 0805. We're open from Monday to Saturday (8am - 5.30pm weekdays, 9am - 5pm Saturday).

We have our own department of highly trained Indesit service staff. For most calls, our Service Engineer can fix the problem on the first visit. Please have the following details to hand when you ring us: The nature of the problem, the Model Number and the Serial Number. These numbers can be found on the appliance and on the portion of the Registration Card which you retain. 17 Instructions for installation and use Instructions for installation and use 18 Merloni Elettrodomestici Viale Aristide Merloni 47 60044 Fabriano Italy Tel +39 0732 6611 Fax +39 0732 662501 www.merloni.com Leader for young Europe 02/2002 - 195033265.00 - XEROX BUSINESS SERVICES - DOCUTECH .



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5067019)

[WD12X user guide](http://yourpdfguides.com/dref/5067019)

<http://yourpdfguides.com/dref/5067019>