



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIA 602. You'll find the answers to all your questions on the INDESIT WIA 602 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIA 602
User guide INDESIT WIA 602
Operating instructions INDESIT WIA 602
Instructions for use INDESIT WIA 602
Instruction manual INDESIT WIA 602

Instructions for use

WASHING MACHINE

GB
English,1

ES
Español,13

GR
ΕΛΛΗΝΙΚΑ,25

PT
Português,37

SB
СРПСКИ,49

BG
БЪЛГАРСКИ,61

WIA 602

Contents

Installation, 2-3
Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 3
Technical details, 3

Washing machine description, 4-5
Control panel, 4
Leads, 5

Starting and Programmes, 6
Briefly, how to start a programme, 6
Programme table, 6

Personalisations, 7
Setting the temperature, 7
Functions, 7

Detergents and laundry, 8
Detergent dispenser, 8
Preparing your laundry, 8
Special items, 8

Precautions and advice, 9
General safety, 9
Disposal, 9
Saving energy and respecting the environment, 9

Care and maintenance, 10
Cutting off the water or electricity supply, 10
Cleaning your appliance, 10
Cleaning the detergent dispenser, 10
Caring for your appliance door and drum, 10
Cleaning the pump, 10
Checking the water inlet hose, 10

Troubleshooting, 11

Service, 12
Before calling for Assistance, 12

GB

INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WIA 602 user guide](http://yourpdfguides.com/dref/2712830)
<http://yourpdfguides.com/dref/2712830>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). 2. Make sure there are no kinks or bends in the hose. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other.

Warning! The company denies all liability if and when these norms are not respected. The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (on the right); the supply voltage is included within the values indicated on the Technical details table (on the right); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to IEC456 directive 5 cm wide 85 cm high 52,5 cm deep from 1 to 5 kg voltage 220/230 Volts 50 Hz maximum absorbed power 1850 W maximum pressure 1 MPa (10 bar) minimum pressure 0. Programme 3; temperature 60°C; run with a load of 5 kg. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.

LEDs: to find out which wash cycle phase is under way. This is what they can tell you: Cycle phase under way: During the wash cycle, the LEDs gradually illuminate on to indicate the cycle phase under way: Prewash/Wash Rinse Spin cycle Note: during draining, the LED corresponding to the Spin cycle phase will be turned on. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. The rapid flashing of the DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality (see page 11). All the LEDs will light up for a few seconds and the DOOR LOCK Led will begin to flash. 2. Load your laundry into the washing machine and shut the appliance door.

6. Switch the washing machine off by turning the position. The temperature can be lowered, or even set to a cold wash (). Wash them separately without exceeding half the appliance load. Use programme 10 which excludes the spin cycle automatically. Trainers: remove any mud. compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow from the grid. Do not use hand wash detergent because it may form too much foam. Divide your laundry according to: - the type of fabric/the symbol on the label. - the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons. Do not exceed the weight limits stated below, which refer to the weight when dry: Sturdy fabrics: max 5 kg Synthetic fabrics: max 2.5 kg Delicate fabrics: max 2 kg Wool: max 1 kg How much does your laundry weigh? The washing machine was designed and built in compliance with the applicable international safety regulations. The following information is provided for your safety and should consequently be read carefully.

Pull the plug out yourself. Do not touch the drain water as it could reach very high temperatures. Never force the washing machine door: this could damage the safety lock mechanism designed to prevent any accidental openings. In the event of a malfunction, do not under any circumstances touch internal parts in order to attempt repairs. Always keep children well away from the appliance while in operation. The appliance door tends to get quite hot during the wash cycle. Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. Before loading your laundry into the washing machine, make sure the drum is empty. the pre-wash cycle is only necessary on extremely soiled garments. Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible. If you use your washing machine from late in the afternoon until the early hours of the morning, you will help reduce the electricity board's peak load. If your laundry has to be dried in a tumble dryer, select a high spin speed. Having the least water possible in your laundry will save you time and energy in the drying process.

The European Directive 2002/96/EC on Waste Electrical and Electronic Equ.



[You're reading an excerpt. Click here to read official INDESIT WIA 602 user guide](http://yourpdfguides.com/dref/2712830)
<http://yourpdfguides.com/dref/2712830>