



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIA121. You'll find the answers to all your questions on the INDESIT WIA121 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIA121
User guide INDESIT WIA121
Operating instructions INDESIT WIA121
Instructions for use INDESIT WIA121
Instruction manual INDESIT WIA121

Instructions for use

WASHING MACHINE

GB

English, 1

WIA 121

Contents

Installation, 2-3-4-5

Unpacking and levelling, 2
Electric and water connections, 2-3
The first wash cycle, 4
Technical details, 5

Washing machine description, 6-7

Control panel, 6
Leds, 7

Starting and Programmes, 8

Briefly: how to start a programme, 8
Programme table, 8

Personalisations, 9

Setting the temperature, 9
Functions, 9

Detergents and laundry, 10

Detergent dispenser, 10
Preparing your laundry, 10
Special items, 10

Precautions and advice, 11

General safety, 11
Disposal, 11
Saving energy and respecting the environment, 11

Care and maintenance, 12

Cutting off the water or electricity supply, 12
Cleaning your appliance, 12
Cleaning the detergent dispenser, 12
Caring for your appliance door and drum, 12
Cleaning the pump, 12
Checking the water inlet hose, 12

Troubleshooting, 13

Service, 14
Before calling for Assistance, 14

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WIA121 user guide](http://yourpdfguides.com/dref/5066926)
<http://yourpdfguides.com/dref/5066926>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. □ Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the 3 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5.

Keep all the parts: you will need them again if the washing machine needs to be moved to another location. A 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2.

Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). □ Packaging materials are not children's toys. Levelling 3. @@1. @@2. @@@@ If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB Installation Description Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot.

If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater. **WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewireable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance.

Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live Programmes Detergents Precautions □ We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling.

Care Troubleshooting Electric connection Before plugging the appliance into the mains socket, make sure that: □ the socket is earthed and in compliance with the applicable law; □ the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 Service GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use.

How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. GREEN & YELLOW Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP □ The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.

□ When the washing machine is installed, the mains socket must be within easy reach. □ Do not use extensions or multiple sockets. □ The power supply cable must never be bent or dangerously compressed. □ The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIA 121 59.5 cm wide 85 cm high 52,5 cm deep from 1 to 5 kg GB Installation Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to IEC456 directive Description voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.

05 MPa (0.5 bar) drum capacity 46 litres up to 1200 rpm Programmes programme 3; temperature 60°C; run with a load of 5 kg. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE Detergents Precautions Care Troubleshooting Service 5 Washing machine description GB Control panel FUNCTION Buttons START/DOOR PAUSE LOCK Button Led Detergent dispenser Leds TEMPERATURE Knob PROGRAMME/ ON-OFF Knob Detergent dispenser: to add detergent and fabric softener (see page 10).



[You're reading an excerpt. Click here to read official INDESIT](#)

[WIA121 user guide](#)

<http://yourpdfguides.com/dref/5066926>

LEDS: to find out the wash cycle progress. **FUNCTION** buttons: to select the functions available. The button corresponding to the function selected will remain on. **TEMPERATURE** knob: to set the temperature or the cold wash cycle (see page 9). **DOOR LOCK** Led: to find out whether the washing machine is on and if the appliance door can be opened (see page 7). **START/PAUSE** button: starts or temporarily interrupts programmes. **N.**

B.: once the programme has started, pressing this button will stop the cycle and only the LED for the cycle phase in progress will light up. After about 1 minute you will be able to open the door (when the **DOOR LOCK** led switches off). If the **DOOR LOCK** led stays lit, it means that there is something that needs to be checked before the door is opened (e.g.

: there is water in the tub or the temperature of the water is too high). Pressing the button again restarts the programme from the point at which it was interrupted. **PROGRAMME/ON-OFF** knob: sets the desired programme (see page 8) and switches the machine on or off. The knob stays still during the cycle.

6 Leds The LEDS provide important information.

This is what they can tell you: **Cycle progress:** During the wash cycle, the LEDS gradually illuminate on to indicate the cycle progress: **Prewash/Wash Rinse Spin cycle** Note: during draining, the LED corresponding to the Spin cycle phase will be turned on. **Function buttons** The **FUNCTION** **BUTTONS** also act like LEDS. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. **GB Installation Description Programmes Detergents Precautions Care Troubleshooting Service** **DOOR LOCK** led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. The rapid flashing of the **DOOR LOCK** Led together with the flashing of at least one other LED indicates there is an abnormality. @@@@2. @3. Set the wash temperature (see page 9).

4. Add the detergent and any fabric softener (see page 10). 5. Start the programme by pressing the **START/PAUSE** button for one second. @@@@6.

@@@Switch the washing machine off by turning the position. @@Detergent Pread. Use programme 10 which excludes the spin cycle automatically.

@@@Trainers: remove any mud. @@@@- the colours: separate coloured garments from whites.

Empty all pockets and check for loose buttons. @@@@Pull the plug out yourself. @@@ Never force the washing machine door: this could damage the safety lock mechanism designed to prevent any accidental openings. In the event of a malfunction, do not under any circumstances touch internal parts in order to attempt repairs. Always keep children well away from the appliance while in operation.

The appliance door tends to get quite hot during the wash cycle. Should it have to be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. Before loading your laundry into the washing machine, make sure the drum is empty. Saving energy and respecting the environment **Environmentally-friendly technology** If you only see a little water through your appliance door, this is because thanks to the latest Indesit technology, your washing machine only needs less than half the amount of water to get the best results: an objective reached to respect the environment.

Saving on detergent, water, energy and time To avoid wasting resources, the washing machine should be used with a full load. A full load instead of two half loads allows you to save up to 50% on energy. The pre-wash cycle is only necessary on extremely soiled garments. Avoiding it will save on detergent, time, water and between 5 and 15% energy. Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible. If you use your washing machine from late in the afternoon until the early hours of the morning, you will help reduce the electricity board's peak load. If your laundry has to be dried in a tumble dryer, select a high spin speed.

Having the least water possible in your laundry will save you time and energy in the drying process. **Description Programmes Detergents Precautions Care Disposal** Disposing of the packaging material: observe local regulations, so the packaging can be re-used. The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. **Troubleshooting Service 11 Care and maintenance GB** Cutting off the water or electricity supply Turn off the water tap after every wash. This will limit the wear of your appliance's water system and also prevent leaks. Unplug your appliance when cleaning it and during all maintenance operations. **Cleaning the pump** The washing machine is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the washing machine (see figure); **Cleaning your appliance** The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. **Cleaning the detergent dispenser** Remove the dispenser by pulling it out (see figure). Wash it under running water; this operation should be repeated frequently.

2. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; **Caring for your appliance door and drum** Always leave the appliance door ajar to prevent unpleasant odours from forming. 3. clean the interior thoroughly; 4.

screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. **Checking the water inlet hose** Check the water inlet hose at least once a year.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5066926)

[WIA121 user guide](http://yourpdfguides.com/dref/5066926)

<http://yourpdfguides.com/dref/5066926>

If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Never use hoses that have already been used. 12 Troubleshooting Your washing machine could fail to work. Before calling for Assistance (see page 14), make sure the problem can't easily be solved by consulting the following list. GB Installation Problem The washing machine won't start. Possible causes/Solution: The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure.

The appliance door is not shut properly. The START/PAUSE button has not been pressed. NB: It should be held minimum one second. The water tap is not turned on. The water inlet hose is not connected to the tap. The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient. The START/PAUSE button has not been pressed.

Description The washing machine does not fill with water. Programmes The machine continuously fills and empties with water. The washing machine does not drain or spin. The drain hose is too low or too far in to the stand pipe (see page 3) for correct installation. The wall drainage system doesn't have a standard pipe (min.

38 mm). Some programs have a slower final spin to take best care of the fabrics. See page 8 for details of the final spin speed for each program. The programme does not foresee the draining: some programmes require enabling the draining manually (see page 8). The Anti crease function is enabled: to complete the programme, press the START/PAUSE button (see page 9).

The drain hose is bent (see page 3). Remove the drain hose from the standpipe or under-sink trap and check for blockages, ensuring that the water can drain freely away from the machine. @@ Remove the screws (see page 2). The washing machine is not level (see page 2). @@ The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 12). The drain hose is not secured properly (see page 3). This means there is a problem with the machine. @@ Switch off the machine; 2. @@ Place the plug back into the socket; 4.

Switch on the machine; 5. If the problem is still evident after this process has been carried out, contact Assistance. The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. Detergents

Precautions The washing machine vibrates too much during the spin cycle. Care The washing machine leaks. Troubleshooting The DOOR LOCK Led flashes rapidly at the same time as at least one other LED. Service There is too much foam. 13 Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. If the machine has been installed or used incorrectly, you may be charged for the maintenance callout Always request the assistance of authorised servicemen.

Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washing machine. service. 14 GB Installation Description Programmes Detergents Precautions Care Troubleshooting Service 15 195050324.

03 06/2005 - Xerox Business Services GB 16 .



[You're reading an excerpt. Click here to read official INDESIT](#)

[WIA121 user guide](#)

<http://yourpdfguides.com/dref/5066926>