



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIDE 146. You'll find the answers to all your questions on the INDESIT WIDE 146 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIDE 146  
User guide INDESIT WIDE 146  
Operating instructions INDESIT WIDE 146  
Instructions for use INDESIT WIDE 146  
Instruction manual INDESIT WIDE 146

## Bedienungsanleitungen

### WASCHTROCKNER

**DE**  
Deutsch, 1

**GB**  
English, 15

WIDE 146

#### INHALTSVERZEICHNIS

##### Installation, 2-3

Auspacken und Aufstellen, 2  
Wasser- und Elektroanschlüsse, 2-3  
Erster Waschgang, 3  
Technische Daten, 3

##### Beschreibung Waschtrockner, 4-5

Bedenkblätter, 4  
Display, 5  
Programm "MEMO", 5

##### Inbetriebnahme und Programme, 6

Kurz zusammengefasst: Waschtrockner starten, 6  
Programmtabelle, 6

##### Individuelle Programmgestaltung, 7-8

Erstellen der Scheuder, 7  
Einstellen der Startzeitwahl, 7  
Einstellen der Waschtrockentemperatur, 7  
Einstellen der Trockenprogramme, 7  
Zusatzfunktionen, 8

##### Waschmittel und Wäsche, 9

Waschmittelschubladen, 9  
Vorsorgen der Wäsche, 9  
Besondere Waschetikette, 9  
Woolmark, 9

##### Vorsichtsmaßnahmen und Hinweise, 10

Allgemeine Sicherheit, 10  
Entsorgung, 10  
Energie sparen und Umwelt schonen, 10

##### Reinigung und Pflege, 11

Wasser- und Stromversorgung abstellen, 11  
Reinigung des Gerätes, 11  
Reinigung der Waschmittelschubladen, 11  
Pflege der Geräteruhr und Trommel, 11  
Reinigung der Pumpe, 11  
Kontrolle des Wasserzulaufschlauchs, 11

##### Störungen und Abhilfe, 12

##### Kundendienst, 13

Bevor Sie sich an den Kundendienst wenden, 13

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WIDE 146 user guide](http://yourpdfguides.com/dref/2425997)

<http://yourpdfguides.com/dref/2425997>

### Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the Washer-dryer to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the Washer-dryer. Check whether the Washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the Washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).

Keep all the parts: you will need them again if the Washer-dryer needs to be moved to another location. Make sure there are no kinks or bends in the hose. The water pressure at the tap must be within the Install the Washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or other.

2. **Warning!** The free end of the hose should not be underwater.

Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. 5 cm deep from 1 to 5 kg for the wash programme; from 1 to 4 kg for the drying programme voltage 220/230 Volts 50 Hz maximum absorbed power 1850 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar). If this is not the case, replace the socket or the plug.

The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. DELAY TIMER button to delay the start of the set programme for a maximum period of 24 hours (see page 21). Display to programme the Washer-dryer and follow the wash cycle progress (see opposite page). In addition to being a practical tool to programme your appliance (see page 21), the display provides useful information concerning the wash cycle. Once you have pressed the START/RESET button to start the programme, the display will indicate the amount of time left until the end of the wash cycle. Door lock: If the symbol is on, the Washer-dryer door is locked to prevent it from being opened accidentally. Load your laundry into the Washer-dryer and shut the appliance door. When the programme has ended, the word END is displayed. Turn the Washer-dryer off by pressing button Cold wash (without detergents), wash cycle, rinse cycles, and delicate spin cycle Notes -For programme 8, we advise against exceeding a wash load of 3.

5 kg. -For programme 12 we advise against exceeding a wash load of 2 kg. Special programme Daily (programme 10 for Synthetics) is designed to wash lightly soiled garments in a short amount of time: it only lasts 30 minutes and allows you to save on both time and energy. By setting this programme (10 at 30°C), you can wash different fabrics together (except for woollen and silk items), with a maximum load of 3 kg. Press button a programme with a spin cycle, a fixed and the maximum spin speed allowed for the programme set will be displayed, and the icon flashes. Press it again and the values lower until they reach OFF, which indicates that the spin cycle has been excluded (press it again to go back to the maximum value); stop on the desired speed, after approximately remains fixed. 2 seconds the setting is accepted: the symbol The spin cycle setting is enabled with all the programmes except for 5 and the Draining cycle. The temperature adjustment is enabled with all wash programmes. Iron : slightly damp clothes, easy to iron. Hanger : dry clothes to put away.

Cupboard : very dry clothes, recommended for towelling and bathrobes. a cooling stage is foreseen at the end of the drying cycle. Now follow the instructions provided for a dry only cycle. When this function is set, programmes 3 and 5 will end, with the laundry left to soak (Anti-crease), and the relative button flashes: - to conclude the cycle, press the START/RESET button or the EASY IRON button; - to run the draining cycle alone, set the knob to the relative symbol and press the START/RESET button. Good washing results also depend on the correct dose of detergent: adding too much detergent won't necessarily make for a more efficient wash, and may in fact cause build up on the interior of your appliance and even pollute the environment.

Wash them separately without exceeding half the appliance load. Use programme 5 which excludes the spin cycle automatically. Quilted coats and windbreakers: if they are padded with goose or duck down, they can be machine-washed. Turn the garments inside out and load a maximum of 2-3 kg, repeating the rinse cycle once or twice and using the delicate spin cycle. Wool: for best results, use a specific detergent, taking care not to exceed a load of 1 kg.

Indesit sets a new standard of superior performance that has been endorsed by The Woolmark Company with the prestigious Woolmark brand. compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow from the grid. Do not use hand wash detergent because it may form too much foam. - the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons. This appliance has been designed for nonprofessional, household use and its functions must not be changed. This is the lower part of the same. Make sure the wash cycle has ended and unplug The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Using a screwdriver, remove the cover panel on the lower front of the Washer-dryer (see figure); Wash it under running water; this operation should be repeated frequently.

Unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; Always leave the appliance door ajar to prevent unpleasant odours from forming. Screw the lid back on; 5. Never use hoses that have already been used. Your Washer-dryer could fail to work. The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The wash cycle won't start. The drain hose is not fitted between 65 and 100 cm from the floor (see page 17).



[You're reading an excerpt. Click here to read official INDESIT WIDE 146 user guide](http://yourpdfguides.com/dref/2425997)  
<http://yourpdfguides.com/dref/2425997>

*the free end of the hose is underwater (see page 17).*

*The wall drainage system doesn't have a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and call for Assistance. @@@@ the Washer-dryer is not level (see page 16). The Washer-dryer is closed in between furniture cabinets and the wall (see page 16). The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The washer-dryer vibrates too much during the spin cycle. There is too much foam.*

*Before calling for Assistance: Check whether you can solve the problem on your own (see page 26); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. This information can be found on the data plate situated on the rear of the Washer-dryer. .*



[You're reading an excerpt. Click here to read official INDESIT WIDE](#)

[146 user guide](#)

<http://yourpdfguides.com/dref/2425997>