



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIDL 106. You'll find the answers to all your questions on the INDESIT WIDL 106 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIDL 106
User guide INDESIT WIDL 106
Operating instructions INDESIT WIDL 106
Instructions for use INDESIT WIDL 106
Instruction manual INDESIT WIDL 106

Instructions for use

WASHER-DRYER

GB
English, 1

WIDL 106

Contents

Installation, 2-3

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 3
Technical details, 3

Washer-dryer description, 4-5

Control panel, 4
Leads, 5

Starting and Programmes, 6

Briefly, how to start a programme, 6
Programme table, 6

Personalisations, 7

Setting the temperature, 7
Setting the drying cycle, 7
Functions, 7

Detergents and laundry, 8

Detergent dispenser, 8
Preparing your laundry, 8
Special items, 8

Precautions and advice, 9

General safety, 9
Disposal, 9
Saving energy and respecting the environment, 9

Care and maintenance, 10

Cutting off the water or electricity supply, 10
Cleaning your appliance, 10
Cleaning the detergent dispenser, 10
Caring for your appliance door and drum, 10
Cleaning the pump, 10
Checking the water inlet hose, 10

Troubleshooting, 11

Service, 12

Before calling for Assistance, 12

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WIDL 106 user guide](#)

<http://yourpdfguides.com/dref/601505>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the Washer-dryer to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the Washerdryer. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the Washer-dryer. 2. Check whether the Washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the four protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). 1. @@@@Both pipes may be connected to the cold water tap using the special Y connection with multiple attachments, supplied with the appliance (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2.

Connect the other end of the water inlet hose to the Washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. 4. Seal the gaps using the plastic plugs provided.

5. @.@6. @.@@.2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. 2 65 - 100 cm from 1 to 6.5 kg for the wash programme; 40 6.5 kg AS/NZS 2040.2 AS/NZS 2442.

2 Washer-dryer description GB Control panel Leds Buttons FUNCTION ON-OFF/ DOOR ON-OFF LOCK Button Led Detergent dispenser PROGRAMME Knob Button START/RESET DRYING Knob TEMPERATURE Knob Detergent dispenser: to add detergent and fabric softener (see page 8). LEDS: to find out which wash cycle phase is under way. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 5).

DRYING knob: to set the desired drying cycle (see page 7). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 7). @@@@ON/OFF button: to turn the Washer-dryer on and off. PROGRAMME knob: to select the wash programmes. @.@.@.@.@@Function buttons The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB Installation Description Programmes As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start. Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door.

Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality. Call for Technical Assistance. 5 Starting and Programmes Briefly: starting a programme GB 1. Switch the Washer-dryer on by pressing button . All the LEDS will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash.

2. Load your laundry into the washing machine and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 7). 5. Set the drying cycle if necessary (see page 7). 6. Add the detergent and any fabric softener (see page 8).

7. Start he programme by pressing the START/RESET button. To cancel it, keep the START/RESET button pressed for at least 2 seconds. 8. When the programme is finished, the ON-OFF/ DOOR LOCK Led will flash to indicate that the appliance door can be opened. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly. Turn the Washer-dryer . off by pressing button D eterminant prewash wash C ycle Fabric length D escription of wash cycle softener (m inutes) Programme table Type of fab ric and degree of soil P rogram m es Tem perature S tandard Extremely soiled whites (sheets, tablecloths, etc.) Extremely soiled whites (sheets, tablecloths, etc.) Heavily soiled whites and fast colours Heavily soiled whites and delicate colours Slightly soiled whites and delicate colours (shirts, jumpers, etc.

) Heavily soiled fast colours (baby linen, etc.) Heavily soiled fast colours (baby linen, etc.) Wool Very delicate fabrics (curtains, silk, viscose, etc.) Drying cotton Drying delicates 1 2 2 2 3 4 4 5 6 7 8 90°C 90°C 60°C 40°C 40°C 60°C 135 125 110 105 70 75 60 50 45 40°C 40°C 30°C Pre-wash, wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, anti-crease or delicate spin cycle Wash cycle, rinse cycles, anti-crease or delicate spin cycle Wash cycle, rinse cycles, anti-crease or delicate spin cycle Wash cycle, rinse cycles, anti-crease or draining cycle Tim e 4 yo u Heavily soiled whites and fast colours Delicate colours (all types of slightly soiled garments) Delicate colours (all types of slightly soiled garments) 9 10 11 60°C 40°C 60 40 30°C 30 Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, delicate spin cycle Wash cycle, rinse cycles and delicate spin cycle Cold wash (without detergents), wash cycle, rinse cycles, and delicate spin cycle S port Sports shoes (MAX. 2 pairs) Fabrics for sportswear (Tracksuits, shorts, etc.

) PAR TIAL PR OGR AM M ES Rinse Spin cycle Drain Rinse cycles and spin cycle Draining and spin cycle Drain 12 13 30°C 50 60 30°C Wash cycle, rinse cycles, intermediate and final spin cycles Notes -For programme 9, we advise against exceeding a wash load of 3.



[You're reading an excerpt. Click here to read official INDESIT WIDL](#)

[106 user guide](#)

<http://yourpdfguides.com/dref/601505>

5 kg. -For programme 13 we advise against exceeding a wash load of 2 kg. -For the anti-crease function: see Easy iron, opposite page. The information contained in the table is purely indicative.

@@@The temperature can be lowered, or even set to a cold wash (). Turn the DRYING knob to set the desired drying type. Two options are available: A - Based on time: From 40 minutes to 150. @@Iron : dry clothes to put away. @@@@Now follow the instructions provided for a dry only cycle. @@@@the function is enabled when the corresponding button is illuminated. @@@In creases the efficiency of the rinse. Reduces the spin speed. @@@@In addition, avoid using fabric softener as much as possible. @@@@This will limit the wear of your appliance's water system and also prevent leaks.

Unplug your appliance when cleaning it and during all maintenance operations. **Cleaning the pump** The Washer-dryer is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance. To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the Washer-dryer (see figure); **Cleaning your appliance** The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. @@@unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; **Caring for your appliance door and drum** Always leave the appliance door ajar to prevent unpleasant odours from forming. 3. clean the interior thoroughly;

4.

screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. **Checking the water inlet hose** Check the water inlet hose at least once a year. If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Never use hoses that have already been used.

10 **Troubleshooting** Your Washer-dryer could fail to work. Before calling for Assistance (see page 12), make sure the problem can't easily be solved by consulting the following list. **GB Installation Problem** The washer-dryer wo.



[You're reading an excerpt. Click here to read official INDESIT WIDL 106 user guide](http://yourpdfguides.com/dref/601505)

<http://yourpdfguides.com/dref/601505>