



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIDL 146. You'll find the answers to all your questions on the INDESIT WIDL 146 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIDL 146
User guide INDESIT WIDL 146
Operating instructions INDESIT WIDL 146
Instructions for use INDESIT WIDL 146
Instruction manual INDESIT WIDL 146

Instructions for use

WASHER-DRYER

GB

English, 1

WIDL 146

Contents

GB

Installation, 2-3-4-5

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 4
Technical details, 5

Washer-dryer description, 6-7

Control panel, 6
Leds, 7

Starting and Programmes, 8

Briefly, how to start a programme, 8
Programme table, 8

Personalisations, 9

Setting the temperature, 9
Setting the drying cycle, 9
Functions, 9

Detergents and laundry, 10

Detergent dispenser, 10
Preparing your laundry, 10
Special items, 10

Precautions and advice, 11

General safety, 11
Disposal, 11
Saving energy and respecting the environment, 11

Care and maintenance, 12

Cutting off the water or electricity supply, 12
Cleaning your appliance, 12
Cleaning the detergent dispenser, 12
Caring for your appliance door and drum, 12
Cleaning the pump, 12
Checking the water inlet hose, 12

Troubleshooting, 13

Service, 14

Before calling for Assistance, 14

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WIDL 146 user guide](http://yourpdfguides.com/dref/3206799)

<http://yourpdfguides.com/dref/3206799>

Manual abstract:

2. Check whether the washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the four protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location.

1. Connect the supply pipe to the water mains, fitting the rubber gasket and the filter supplied with the appliance and ensuring that they are firmly tightened to the taps. The water supply marked C must be connected to the cold water tap; the pipe marked H must be connected to the hot water tap. Both pipes may be connected to the cold water tap using the special Y connection with multiple attachments, supplied with the appliance (see figure). Before making the connection, allow the water to run freely until it is perfectly clear.

2. Connect the other end of the water inlet hose to the washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. Packaging materials are not children's toys.

Levelling 1. Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washer-dryer's plug. If this is not the case, replace the socket or the plug.

Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. @@@@THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained.

Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewirable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket.

Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live Programmes Detergents Precautions We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. @@@@or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. @@@@ Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed.

The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIDL 146 59.5 cm wide 85 cm high 53.5 cm deep from 1 to 5 kg for the wash programme; from 1 to 4 kg for the drying programme voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.

5 bar) drum capacity 46 litres up to 1400 rpm Wash: programme 2; temperature 60°C; run with a load of 5 kg. Drying: first drying cycle performed with a 1 kg load, by selecting a drying time of 40 min; Second drying cycle performed with a 4 kg load and the DRYING knob on the setting. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments GB Installation Dimensions Capacity Electric connections Water connections Spin speed

Description Programmes Control programmes according to IEC456 directive 5 Detergents Precautions Care Troubleshooting Service Washer-dryer description GB Control panel Leds Buttons FUNCTION ON-OFF/ DOOR ON-OFF LOCK Button Led Detergent dispenser PROGRAMME Knob Button START/RESET DRYING Knob TEMPERATURE Knob Detergent dispenser: to add detergent and fabric softener (see page 10). LEDS: to find out the wash cycle progress. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 7). DRYING knob: to set the desired drying cycle (see page 9). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 9). START/RESET button: to start the programmes or cancel any incorrect settings.

ON-OFF/DOOR LOCK Led: to find out whether the Washer-dryer is on and if the appliance door can be opened (see page 7). ON/OFF button: to turn the Washer-dryer on and off. PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle. 6 Leds The LEDS provide important information. This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page. 9), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle progress: During the wash cycle, the LEDS gradually illuminate on to indicate the cycle progress: Prewash / Wash Rinse Spin cycle Drying Note: - during draining, the LED corresponding to the Spin cycle phase will be turned on.



[You're reading an excerpt. Click here to read official INDESIT WIDL 146 user guide](http://yourpdfguides.com/dref/3206799)

<http://yourpdfguides.com/dref/3206799>

- when the drying cycle is complete, the indicator will flash, to indicate that light relative to phase the DRYING knob needs to be set back to the 0 setting.

Function buttons The FUNCTION BUTTONS also act like LEDs. When a function is selected, the corresponding button is illuminated.

If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB Installation Description Programmes As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start. Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality.

Call for Technical Assistance. 7 Starting and Programmes Briefly: starting a programme GB 1. Switch the Washer-dryer on by pressing button . @@2.

@@3t for woollen and silk items), with a maximum load of 3 kg.

@@The temperature can be lowered, or even set to a cold wash (). Turn the DRYING knob to set the desired drying type. Two options are available: A - Based on time: From 40 minutes to 150. @@Iron : dry clothes to put away. @@@@Now follow the instructions provided for a dry only cycle. @@@@the function is enabled when the corresponding button is illuminated. @@@@In creases th e efficien cy o f t h e rin s e. R e d u ces t h e s p in s p eed . @@@@Wash them separately without exceeding half the appliance load. Use programme 6 which excludes the spin cycle automatically.

@@@@- the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons. Do not exceed the weight limits stated below, which refer to the weight when dryeast water possible in your laundry will save you time and energy in the drying process. Description Programmes Detergents Precautions Care Troubleshooting Service 11 Care and maintenance GB Cutting off the water or electricity supply Turn off the water tap after every wash. @@@@unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; Caring for your appliance door and drum Always leave the appliance door ajar to prevent unpleasant odours from forming. 3. clean the interior thoroughly; 4. screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance.

Checking the water inlet hose Check the water inlet hose at least once a year. If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Never use hoses that have already been used. 12 Troubleshooting Your washer-dryer could fail to work. Before calling for Assistance (see page 14), make sure the problem can't easily be solved by consulting the following list.

GB Installation Problem The washer-dryer won't start. Possible causes/Solution: The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. button has not been pressed.

The The START/RESET button has not been pressed. NB: It should be held minimum one second. The water tap is not turned on. A delayed start has been set (using the Delay Timer, see page 9). The water inlet hose is not connected to the tap. The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient. The START/RESET button has not been pressed.

Description The washer-dryer does not fill with water. Programmes The machine continuously fills and empties with water. The washer-dryer does not drain or spin. The drain hose is not too low or too far in to the stand pipe (see page 3) for correct installation. The wall drainage system doesn't have a standard pipe (min. 38 mm). @@See page 8 for details of the final spin speed for each program. @@@@ The drain hose is bent (see page 3). Remove the drain hose from the standpipe or under-sink trap and check for blockages, ensuring that the water can drain freely away from the machine. Check that the transit bolts were removed correctly during installation (carefully read pages 2 and 3).

The washer-dryer is not level (see page 2). The washer-dryer is closed in between furniture cabinets and the wall (see page 2). The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 12). The drain hose is not secured properly (see page 3). Call for Assistance because this means there is an abnormality. Detergents Precautions The washer-dryer vibrates too much during the spin cycle. Care The washer-dryer leaks. The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED. There is too much foam.

Troubleshooting The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. A delayed start has been set (using the Delay Timer, see page 9). the DRYING knob is on the 0 setting. The washer-dryer does not dry. 13 Service Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen.

Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washer-dryer. 14 GB Installation 15 Description Programmes Detergents Precautions Care Troubleshooting Service 195042972.01 06/2004 - Xerox Business Services GB I6 .



[You're reading an excerpt. Click here to read official INDESIT WIDL](http://yourpdfguides.com/dref/3206799)

[146 user guide](http://yourpdfguides.com/dref/3206799)

<http://yourpdfguides.com/dref/3206799>