



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIDL 86. You'll find the answers to all your questions on the INDESIT WIDL 86 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIDL 86
User guide INDESIT WIDL 86
Operating instructions INDESIT WIDL 86
Instructions for use INDESIT WIDL 86
Instruction manual INDESIT WIDL 86

Instructions for use

WASHER-DRYER

GB English	Contents	GB
	Installation, 14-15 Unpacking and levelling, 14 Electric and water connections, 14-15 The first wash cycle, 15 Technical details, 15	
	Washer-dryer description, 16-17 Control panel, 16 Leads, 17	
	Starting and Programmes, 18 Briefly, how to start a programme, 18 Programme table, 18	
	Personalisations, 21 Setting the temperature, 21 Setting the drying cycle, 21 Functions, 21	
WIDL 86	Detergents and laundry, 22 Detergent dispenser, 22 Preparing your laundry, 22 Special items, 22	
	Precautions and advice, 23 General safety, 23 Disposal, 23 Saving energy and respecting the environment, 23	
	Care and maintenance, 24 Cutting off the water or electricity supply, 24 Cleaning your appliance, 24 Cleaning the detergent dispenser, 24 Caring for your appliance door and drum, 24 Cleaning the pump, 24 Checking the water inlet hose, 24	
	Troubleshooting, 25	
	Service, 26 Before calling for Assistance, 26	

 INDESIT

13



[You're reading an excerpt. Click here to read official INDESIT WIDL 86 user guide](#)

<http://yourpdfguides.com/dref/433950>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the Washer-dryer to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the Washer-dryer. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the Washer-dryer. 2. Check whether the Washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the four protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). A 1. @@@@2. Connect the other end of the water inlet hose to the Washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 4.

Seal the gaps using the plastic plugs provided. 5. Use the plug provided to seal the three holes where the plug was housed, situated on the lower right-hand side on the rear of your appliance. 6. Keep all the parts: you will need them again if the Washer-dryer needs to be moved to another location. 3. @@@@2. @@@@The company denies all liability if and when these norms are not respected. 65 - 100 cm Description The first wash cycle alternatively, place it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. Programmes case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electric connection We advise against the use of hose extensions; in Technical details Model WIDL 86 59.5 cm wide 85 cm high 53.5 cm deep from 1 to 5 kg for the wash programme; from 1 to 4 kg for the drying programme voltage 220/230 Volts 50 Hz maximum absorbed power 1850 W maximum pressure 1 MPa (10 bar) minimum pressure 0.

05 MPa (0.5 bar) drum capacity 46 litres Detergents Dimensions Capacity Electric connections Water connections Spin speed Precautions Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (on the right); the supply voltage is included within the values indicated on the Technical details table (on the right); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. Care up to 800 rpm Wash: programme 2; temperature 60°C; run with a load of 5 kg. @@@@LEDS: to find out which wash cycle phase is under way. @@DRYING knob: to set the desired drying cycle (see page 19). FUNCTION buttons: to select the functions available. @@@@@ON/OFF button: to turn the Washer-dryer on and off. PROGRAMME knob: to select the wash programmes.

The knob stays still during the cycle. 16 Leds The LEDS provide important information. This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page. 19), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle phase under way: During the wash cycle, the LEDS gradually illuminate on to indicate the cycle phase under way: Prewash / Wash Rinse Spin cycle Drying Note: - during draining, the LED corresponding to the Spin cycle phase will be turned on. - when the drying cycle is complete, the indicator will flash, to indicate that light relative to phase the DRYING knob needs to be set back to the 0 setting.

Function buttons The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB Installation Description Programmes As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start.

Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality. Call for Technical Assistance. 17 Starting and Programmes Briefly: starting a programme GB 1. Switch the Washer-dryer on by pressing button . All the LEDS will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2. Load your laundry into the washing machine and shut the appliance door. 3. Set the PROGRAMME knob to the programme required.

4. Set the wash temperature (see page 19). 5. Set the drying cycle if necessary (see page 19). 6. Add the detergent and any fabric softener (see page 20). 7. Start the programme by pressing the START/RESET button. To cancel it, keep the START/RESET button pressed for at least 2 seconds. 8.

@@@@Turn the Washer-dryer . @@@@-For programme 13 we advise against exceeding a wash load of 2 kg. -For the anti-crease function: see Easy iron, opposite page. The information contained in the table is purely indicative. @@@@We recommend the use of liquid detergent.

18 Personalisations C Turn the TEMPERATURE knob to set the wash temperature (see Programme table on page 18). The temperature can be lowered, or even set to a cold wash (). Turn the DRYING knob excludes the spin cycle automatically. @@@@@- the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons.

@@@@@@@@@@@@@@@@Pull the plug out yourself. @@@@@@@@@@@@@ The appliance door tends to get quite hot during the wash cycle. @@Never try to do this alone, because the appliance is very heavy. @@ During the drying phase, the door tends to get quite hot. @ (trichlorethylene). Do not use the appliance to dry foam rubber or similar elastomers. Make sure that the water tap is turned on during the drying cycles. @@@@A full load instead of two half loads allows you to save up to 50% on energy.



[You're reading an excerpt. Click here to read official INDESIT WIDL 86 user guide](http://yourpdfguides.com/dref/433950)
<http://yourpdfguides.com/dref/433950>

The pre-wash cycle is only necessary on extremely soiled garments. Avoiding it will save on detergent, time, water and between 5 and 15% energy.

Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. Use the correct quantity of detergent, there may be drain trap problems causing the Washer-dryer to load and unload water continuously. @@@@ The drain hose is bent (see page 15). The drain duct is clogged. @@ The Washer-dryer is not level (see page 14). @@ The water inlet hose is not screwed on correctly (see page 14). The detergent dispenser is obstructed (to clean it, see page 22).

The drain hose is not secured properly (see page 15). @@ There is too much foam.

Troubleshooting The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly.

A delayed start has been set (using the Delay Timer, see page 19). the DRYING knob is on the 0 setting. The washer-dryer does not dry. 23 Service Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 23); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen.

Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washer-dryer. 24 .



[You're reading an excerpt. Click here to read official INDESIT WIDL 86 user guide](http://yourpdfguides.com/dref/433950)

<http://yourpdfguides.com/dref/433950>