



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIDL146. You'll find the answers to all your questions on the INDESIT WIDL146 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIDL146
User guide INDESIT WIDL146
Operating instructions INDESIT WIDL146
Instructions for use INDESIT WIDL146
Instruction manual INDESIT WIDL146

Instructions for use

WASHER-DRYER

GB
English, 1

WIDL 146

Contents

GB

Installation, 2-3-4-5

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 4
Technical details, 5

Washer-dryer description, 6-7

Control panel, 6
Leds, 7

Starting and Programmes, 8

Briefly, how to start a programme, 8
Programme table, 8

Personalisations, 9

Setting the temperature, 9
Setting the drying cycle, 9
Functions, 9

Detergents and laundry, 10

Detergent dispenser, 10
Preparing your laundry, 10
Special items, 10

Precautions and advice, 11

General safety, 11
Disposal, 11
Saving energy and respecting the environment, 11

Care and maintenance, 12

Cutting off the water or electricity supply, 12
Cleaning your appliance, 12
Cleaning the detergent dispenser, 12
Caring for your appliance door and drum, 12
Cleaning the pump, 12
Checking the water inlet hose, 12

Troubleshooting, 13

Service and Guarantee, 14-15-16

Before calling for Assistance, 14
Guarantee, 15-16



[You're reading an excerpt. Click here to read official INDESIT WIDL146 user guide](http://yourpdfguides.com/dref/2471349)
<http://yourpdfguides.com/dref/2471349>

Manual abstract:

Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the washer-dryer. 2. Check whether the washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the four protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided.

5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location. A 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear.

2. Connect the other end of the water inlet hose to the washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. Packaging materials are not children's toys.

Levelling The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly. 1. Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washer-dryer's plug.

If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB Installation Description Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. @@@@ Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewirable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance.

Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. *Instructions for connecting cable to an alternative plug:* Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live Programmes Detergents Precautions We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling.

Care Troubleshooting Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 Service GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use.

How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) *Disposing of the appliance:* When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. @@@@LEDS: to find out the wash cycle progress. @@DRYING knob: to set the desired drying cycle (see page 9). FUNCTION buttons: to select the functions available.

@@@@ON/OFF button: to turn the Washer-dryer on and off. PROGRAMME knob: to select the wash programmes. @@@@- when the drying cycle is complete, the indicator will flash, to indicate that light relative to phase the DRYING knob needs to be set back to the 0 setting. Function buttons The FUNCTION BUTTONS also act like LEDS.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/2471349)

[WIDL146 user guide](http://yourpdfguides.com/dref/2471349)

<http://yourpdfguides.com/dref/2471349>

When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB Installation Description Programmes As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start. Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality.

Call for Technical Assistance (see page 13). 7 Starting and Programmes Briefly: starting a programme GB 1. Switch the Washer-dryer on by pressing button . All the LEDs will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2.

Load your laundry into the washing machine and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 9).

5. Set the drying cycle if neceable on page 8). The temperature can be lowered, or even set to a cold wash (). Turn the DRYING knob to set the desired drying type. Two options are available: A - Based on time: From 40 minutes to 150. B - Based on the damp level of the dry clothes: : slightly damp clothes, easy to iron. Iron : dry clothes to put away. Hanger : very dry clothes, recommended for towelling Cupboard and bathrobes. A cooling stage is foreseen at the end of the drying cycle. Setting the temperature GB The data contained in the table are purely indicative.

Set the drying cycle Table of drying times Fabric type Load type Max. load (kg) Installation Cupboard Hanger Iron Cotton, Linen Cotton Terital, Cotton Acrylics Clothing of different sizes 4 4 2,5 1 130 130 90 65 120 120 80 60 110 110 70 60 Terry towels Sheets, Shirts Description Pyjamas, socks, etc. Slips, tights, stockings, etc. 1 65 60 60 If your laundry load to wash and dry is exceptionally in excess Nylon of the maximum load foreseen (see table opposite), perform the wash cycle, and when the programme is complete, divide up the garments and put part of them back in the drum. Now follow the instructions provided for a dry only cycle. Repeat this procedure for the remainder of the load. Programmes Detergents Dry only Turn the PROGRAMME knob to one of the drying settings (7-8) depending on the type of fabric, then select the desired drying type using the DRYING knob. Important: - A spin cycl the least water possible in your laundry will save you time and energy in the drying process. Programmes Detergents Precautions Care Troubleshooting Disposal Disposing of the packaging material: observe local regulations, so the packaging can be re-used. The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be Service 11 Care and maintenance GB Cutting off the water or electricity supply Turn off the water tap after every wash.

This will limit the wear of your appliance's water system and also prevent leaks. Unplug your appliance when cleaning it and during all maintenance operations. Cleaning the pump The Washer-dryer is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the Washer-dryer (see figure); Cleaning your appliance The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Cleaning the detergent dispenser Remove the dispenser by raising it and pulling it out (see figure). @@@@3.

clean the interior thoroughly; 4. screw the lid back on; 5. @@@@There has been a power failure. The appliance door is not shut properly. button has not been pressed. The The START/RESET button has not been pressed. NB: It should be held minimum one second. The water tap is not turned on. A delayed start has been set (using the Delay Timer, see page 9). The water inlet hose is not connected to the tap.

The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient. @@@@ The wall drainage system doesn't have a standard pipe (min. 38 mm). @@See page 8 for details of the final spin speed for each program. @@ The Easy iron option is enabled: to complete the programme, press the START/RESET button (see page 9). The drain hose is bent (see page 3). Remove the drain hose from the standpipe or under-sink trap and check for blockages, ensuring that the water can drain freely away from the machine.

When the machine is installed, the locking screws for the oscillating assembly are still in place. Remove the screws (see page 2). The washer-dryer is not level (see page 2). The washer-dryer is closed in between furniture cabinets and the wall (see page 2). The water inlet hose is not screwed on correctly (see page 2).

The detergent dispenser is obstructed (to clean it, see page 12). The drain hose is not secured properly (see page 3). This means there is a problem with the machine. Before calling Assistance, please follow the set of instructions below: 1. Switch off the machine; 2.

@@Place the plug back into the socket; 4. Switch on the machine; 5. @@@@ You used too much detergent. @@There has been a power failure. The appliance door is not shut properly. A delayed start has been set (using the Delay Timer, see page 9). the DRYING knob is on the 0 setting. Detergents Precautions The washer-dryer vibrates too much during the spin cycle. The washer-dryer leaks. The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED.

Care Troubleshooting There is too much foam. The washer-dryer does not dry. 13 Service Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. If the machine has been installed or used incorrectly, you may be charged for the maintenance callout service. Always request the assistance of authorised servicemen. Notify the operator of: the type of problem; the appliance model (Mod).



[You're reading an excerpt. Click here to read official INDESIT WIDL146 user guide](http://yourpdfguides.com/dref/2471349)
<http://yourpdfguides.com/dref/2471349>

); the serial number (S/N). This information can be found on the data plate situated on the rear of the washer-dryer. 14 Guarantee 12 Months Parts and Labour Guarantee Your appliance has the benefit of our manufacturers guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase. This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you.

This guarantee is subject to the following conditions: The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions. The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent.

@@@Replacement of any consumable item or accessory . @@@Extended Guarantees We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08709 088 088 (ROI 01 230 0233). Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08709 066 066 (ROI 0818 313 413)for telephone assistance, or, where necessary, to arrange for an engineer to call.

15 Precautions Care Troubleshooting Service 195042972.04 11/2006 - Xerox Business Services GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08709 066 066 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08709 077 077 Republic of Ireland: 0818 313 413 www.indesitservice.co.

uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. 16 .



[You're reading an excerpt. Click here to read official INDESIT WIDL146 user guide](http://yourpdfguides.com/dref/2471349)
<http://yourpdfguides.com/dref/2471349>