



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIDXL126. You'll find the answers to all your questions on the INDESIT WIDXL126 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIDXL126
User guide INDESIT WIDXL126
Operating instructions INDESIT WIDXL126
Instructions for use INDESIT WIDXL126
Instruction manual INDESIT WIDXL126

Instructions for use

WASHER-DRYER

GB
English, 1

AR
عربي, 15

WIDXL 126

Contents

Installation, 2-3-4-5

Unpacking and levelling
Electric and water connections
The first wash cycle
Technical details

Washer-dryer description, 6-7

Control panel
Leds

Starting and Programmes, 8

Briefly: how to start a programme
Programme table

Personalisations, 9

Setting the temperature
Setting the drying cycle
Functions

Detergents and laundry, 10

Detergent dispenser
Preparing your laundry
Special items

Precautions and advice, 11

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13

Service, 14

Before calling for Assistance

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WIDXL126 user guide](http://yourpdfguides.com/dref/5067017)
<http://yourpdfguides.com/dref/5067017>

Manual abstract:

2. Check whether the washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the four protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location.

A 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. Packaging materials are not children's toys. Levelling The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly.

1. Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated in the Technical details table (see page 5); the socket is compatible with the washer-dryer's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use.

Before using the appliance please read the instructions below. GB Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater. **WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot.

Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewirable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-syphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red.

Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed.

The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIDXL 126 59.5 cm wide 85 cm high 53.5 cm deep from 1 to 6 kg for the wash programme; from 1 to 4 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5067017)

[WIDXL126 user guide](http://yourpdfguides.com/dref/5067017)

<http://yourpdfguides.com/dref/5067017>

05 MPa (0.5 bar) drum capacity 52 litres up to 1200 rpm Wash: programme 2; temperature 60°C; run with a load of 6 kg. Drying: first drying cycle performed with a 2 kg load and the DRYING knob on the setting; Second drying cycle performed with a 4 kg load and the DRYING knob on the setting. This appliance is compliant with the following European Community Directives: - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE - 2006/95/CE (Low Voltage) GB Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to EN 50229 directive 5 Washer-dryer description GB Control panel Leds Buttons FUNCTION ON-OFF/DOOR ON-OFF LOCK Button Led Detergent dispenser PROGRAMME Knob Button START/RESET DRYING Knob TEMPERATURE Knob Detergent dispenser: to add detergent and fabric softener (see page 10). LEDS: to find out the wash cycle progress. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 7).

DRYING knob: to set the desired drying cycle (see page 9). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 9). START/RESET button: to start the programmes or cancel any incorrect settings.

ON-OFF/DOOR LOCK Led: to find out whether the Washer-dryer is on and if the appliance door can be opened (see page 7). ON/OFF button: to turn the Washer-dryer on and off. PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle. 6 Leds The LEDS provide important information.

This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page. 9), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle progress: During the wash cycle, the LEDS gradually illuminate on to indicate the cycle progress: Prewash / Wash Rinse Spin cycle Drying Note: - during draining, the LED corresponding to the Spin cycle phase will be turned on. - when the drying cycle is complete, the indicator will flash, to indicate that light relative to phase the DRYING knob needs to be set back to the 0 setting. Function buttons The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Once the set delay is complete, the flashing LED will turn off and the programme set will start. ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. □ The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality.

Call for Technical Assistance (see page 13). 7 Starting and Programmes Briefly: starting a programme GB 1. Switch the Washer-dryer on by pressing button . All the LEDS will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2. Load your laundry into the washing machine and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 9).

5. Set the drying cycle if necessary (see page 9). 6. Add the detergent and any fabric softener (see page 10). 7.

Start the programme by pressing the START/RESET button for one second. Once the programme has been accepted all of the option and status LED's will illuminate momentarily, the Door Lock LED will be lit and the relevant wash cycle progress LED will also be lit. To cancel it, keep the START/RESET button pressed for at least 2 seconds. 8. When the programme is finished, the ON-OFF/DOOR LOCK Led will flash to indicate that the appliance door can be opened.

Take out your laundry and leave the appliance door ajar to allhing of different sizes 4 4 2,5 1 130 130 90 65 120 120 80 60 110 110 70 60 Terry towels Sheets, Shirts Pyjamas, socks, etc. Slips, tights, stockings, etc. 1 65 60 60 If your laundry load to wash and dry is exceptionally in excess Nylon of the maximum load foreseen (see table opposite), perform the wash cycle, and when the programme is complete, divide up the garments and put part of them back in the drum. Now follow the instructions provided for a dry only cycle. Repeat this procedure for the remainder of the load. Dry only Turn the PROGRAMME knob to one of the drying settings (7-8) depending on the type of fabric, then select the desired drying type using the DRYING knob. Important: - A spin cycle is carried out during the drying if you have set a cotton programme and a level of , Hanger , Iron). dryness (Cupboard - For cotton loads of less than 1 Kg, use the drying programme designed for delicate fabrics. Functions To enable a function: 1. press the button corresponding to the desired function, according to the table below; 2.

the function is enabled when the corresponding button is illuminated. Note: The rapid flashing of the button indicates that the corresponding function cannot be selected for the programme set. Function Effect Delays the start of the wash by up to 9 hours. This option reduces the amount of creases in cotton fabrics, making them easier to iron. Increases the efficiency of the rinse. Reduces the spin speed. Components Present the button to be repeatedly until the LED corresponding to the desired delay is turned on. The fifth time the button is pressed, the function will be disabled. N.B.

: Once you have pressed the Start/Reset button, the delay can only be decreased if you wish to modify it. When this function is set, programmes 4, 6 will end with the laundry left to soak (Anti-crease) and the Rinse cycle phase LED will flash. - to conclude the cycle, press the START/RESET button; - to run the draining cycle alone, set the knob to the relative symbol and press the START/RESET button. Recommended when the appliance has a full load or with large quantities of detergent. Enable with programmes: A 11 Delay Timer 3, 4, 6, 9, 10, Rinse cycle.

Easy iron Extra Rinse 1, 2, 3, 4, 9, 10, 12, 13, Rinse cycle. All programmes except for 6 and draining. 1200-600 □ The machine has an intelligent built in check for out of balance loads. To let protect your machine it may reduce the final spin speed if an unbalanced load is detected.



[You're reading an excerpt. Click here to read official INDESIT](#)

[WIDXL126 user guide](#)

<http://yourpdfguides.com/dref/5067017>

9 Detergents and laundry Detergent dispenser GB Good washing results also depend on the correct dose of detergent: adding too much detergent won't necessarily make for a more efficient wash, and may in fact cause build up on the interior of your appliance and even pollute the environment.

@@ Wash them separately without exceeding half the appliance load. Use programme 6 which excludes the spin cycle automatically. @@@@ - the colours: separate coloured garments from whites. □ Empty all pockets and check for loose buttons. @@@@ - Pull the plug out yourself. @@@@ □ The appliance door tends to get quite hot during the wash cycle. @@ Never try to do this alone, because the appliance is very heavy. @@ □ During the drying phase, the door tends to get quite hot. @@ trichlorethylene). □ Do not use the appliance to dry foam rubber or similar elastomers.

@@ Saving on detergent, water, energy and time □ To avoid wasting resources, the Washer-dryer should be used with a full load. A full load instead of two half loads allows you to save up to 50% on energy. □ The pre-wash cycle is only necessary on extremely soiled garments. Avoiding it will save on detergent, time, water and between 5 and 15% energy. □ Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. □ Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible. □ If you use your washing machine from late in the afternoon until the early hours of the morning, you will help reduce the electricity board's peak load. The Delay Timer option (see page 9) helps to organise your wash cycles accordingly.

□ If your laundry has to be dried in a tumble dryer, select a high spin speed. Having the least water possible in your laundry will save you time and energy in the drying process. Disposal □ Disposing of the packaging material: observe local regulations, so the packaging can be re-used. □ The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal 11 Care and maintenance GB Cutting off the water or electricity supply □ Turn off the water tap after every wash. This will limit the wear of your appliance's water system and also prevent leaks.

□ Unplug your appliance when cleaning it and during all maintenance operations. Cleaning the pump The Washer-dryer is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. □ Make sure the wash cycle has ended and unplug the appliance. To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the Washer-dryer (see figure); Cleaning your appliance The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Cleaning the detergent dispenser Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; Caring for your appliance door and drum □ Always leave the appliance door ajar to prevent unpleasant odours from forming; 3. clean the interior thoroughly; 4. screw the lid back on; 5.

reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the water inlet hose at least once a year. If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. □ Never use hoses that have already been used. 12 Troubleshooting Your washer-dryer could fail to work. Before calling for Assistance (see page 14), make sure the problem can't easily be solved by consulting the following list. GB Problem The washer-dryer won't start. Possible causes/Solution: □ □ □ □ □ The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. button has not been pressed. The START/RESET button has not been pressed. NB: It should be held minimum one second. □ The water tap is not turned on. □ A delayed start has been set (using the Delay Timer, see page 9).

□ □ □ □ □ The water inlet hose is not connected to the tap. The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient.

The START/RESET button has not been pressed. The washer-dryer does not fill with water. The machine continuously fills and empties with water. The washer-dryer does not drain or spin. □ The drain hose is too low or too far in to the stand pipe (see page 3) for correct installation. □ The wall drainage system doesn't have a standard pipe (min. 38 mm). □ Some programs have a slower final spin to take best care of the fabrics. See page 8 for details of the final spin speed for each program. □ The programme does not foresee the draining: some programmes require enabling the draining manually (see page 8).

□ The Easy iron option is enabled: to complete the programme, press the START/RESET button (see page 9). □ The drain hose is bent (see page 3). □ Remove the drain hose from the standpipe or under-sink trap and check for blockages, ensuring that the water can drain freely away from the machine. □ When the machine is installed, the locking screws for the oscillating assembly are still in place. Remove the screws (see page 2). □ The washer-dryer is not level (see page 2). □ The washer-dryer is closed in between furniture cabinets and the wall (see page 2). □ The water inlet hose is not screwed on correctly (see page 2). □ The detergent dispenser is obstructed (to clean it, see page 12). □ The drain hose is not secured properly (see page 3).

□ This means there is a problem with the machine. Before calling Assistance, please follow the set of instructions below: 1. Switch off the machine; 2. Remove the plug connecting the appliance to the mains supply and wait for at least 40 seconds; 3. Place the plug back into the socket; 4. Switch on the machine; 5. If the problem is still evident after this process has been carried out, contact Assistance. □ The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like).



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5067017)

[WIDXL126 user guide](http://yourpdfguides.com/dref/5067017)

<http://yourpdfguides.com/dref/5067017>

You used too much detergent. The appliance is not plugged into the socket, or not enough to make contact.

There has been a power failure. The appliance door is not shut properly. A delayed start has been set (using the Delay Timer, see page 9). the DRYING knob is on the 0 setting. 13 The washer-dryer vibrates too much during the spin cycle. The washer-dryer leaks. The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED. There is too much foam. The washer-dryer does not dry. Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate.

If the machine has been installed or used incorrectly, you may be charged for the maintenance callout Always request the assistance of authorised servicemen. Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washer-dryer. service. 14

81 - 71 - 61 81 - 71 - 61 22 12 02 12-02 91 - 32 32 32 32 22 22 52 42 42 42 42 42 42 62 62 WIDL 621 52 52 52 52 62 62 62 62 62 62 62 62 51 82 72 51 82 72 .1 3/4 .2 A) .2 A)



[You're reading an excerpt. Click here to read official INDESIT WIDL126 user guide](http://yourpdfguides.com/dref/5067017)
<http://yourpdfguides.com/dref/5067017>

... (91) ...
... 31 ...
... E ...
... L ...
... BS 3631 (31) ...
...
... 09 ...
... (E) ...
... (L) ...
... (N) ...
... SERRAFILO BLU ... MARRONE ... 31 ... 13 ampere fusibile GIALLO ... VERDE & .
... CROSSBAR ...
...
... !!!
... WIDXL 621 ... 81 ... 5.35 ... 58 ... 95 ...
... 0502 ... 05 ... 032/042 ...
... 50 ...



[You're reading an excerpt. Click here to read official INDESIT](#)

[WIDXL126 user guide](#)

<http://yourpdfguides.com/dref/5067017>

0 5.0) 25 06 02 : 0021 4 91 EN 92205 42 Delay Timer 02 . 0 .



You're reading an excerpt. Click here to read official INDESIT WIDL126 user guide http://yourpdfguides.com/dref/5067017

