



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIE 147. You'll find the answers to all your questions on the INDESIT WIE 147 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT WIE 147**  
**User guide INDESIT WIE 147**  
**Operating instructions INDESIT WIE 147**  
**Instructions for use INDESIT WIE 147**  
**Instruction manual INDESIT WIE 147**

## Instructions for use

### WASHING MACHINE

**GB**  
English, 1

**WIE 147**

#### Contents

**GB**

#### Installation, 2-3-4-5

Unpacking and leveling, 2  
Electric and water connections, 2-3  
The first wash cycle, 4  
Technical details, 5

#### Washing machine description, 6-7

Control panel, 6  
Display, 7  
"MEMO" Programme, 7

#### Starting and Programmes, 8

Briefly, how to start a programme, 8  
Programme table, 8

#### Personalisations, 9

Setting the spin cycle, 9  
Setting the Delay Timer, 9  
Setting the temperature, 9  
Functions, 9

#### Detergents and laundry, 10

Detergent dispenser, 10  
Bleach cycle, 10  
Preparing your laundry, 10  
Special Items, 10  
Woolmark, 10

#### Precautions and advice, 11

General safety, 11  
Disposal, 11  
Saving energy and respecting the environment, 11

#### Care and maintenance, 12

Cutting off the water or electricity supply, 12  
Cleaning your appliance, 12  
Cleaning the detergent dispenser, 12  
Caring for your appliance door and drum, 12  
Cleaning the pump, 12  
Checking the water inlet hose, 12

#### Troubleshooting, 13

#### Service, 14

Before calling for Assistance, 14

 **INDESIT**

1



[You're reading an excerpt. Click here to read official INDESIT WIE 147 user guide](http://yourpdfguides.com/dref/3808948)

<http://yourpdfguides.com/dref/3808948>

**Manual abstract:**

2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the four protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location.

1. Connect the supply pipe to the water mains, fitting the rubber gasket and the filter supplied with the appliance and ensuring that they are firmly tightened to the taps. The water supply marked C must be connected to the cold water tap; the pipe marked H must be connected to the hot water tap. Both pipes may be connected to the cold water tap using the special Y connection with multiple attachments, supplied with the appliance (see figure). Before making the connection, allow the water to run freely until it is perfectly clear.

2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. Packaging materials are not children's toys.

Levelling 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug.

Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. @@@@THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained.

Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket.

Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live Programmes Detergents Precautions We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. @@@@or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. @@@@ Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed.

The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIE 147 59.5 cm wide 85 cm high 53.5 cm deep from 1 to 5 kg GB Installation Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to IEC456 directive Description voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.

5 bar) drum capacity 46 litres up to 1400 rpm Programmes programme 2; temperature 60°C; run with a load of 5 kg. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments Detergents Precautions Care Troubleshooting Service 5 Washing machine description Control panel GB

FUNCTION Buttons START/RESET button START/STOP button Detergent dispenser SPIN button Display button button Control knob TEMPERATURE DELAY TIMER Detergent dispenser to add detergent and fabric softener (see page 10). SPIN button to adjust the spin speed or exclude it altogether (see page 9). DELAY TIMER button to delay the start of the set programme for a maximum period of 24 hours (see page 9). TEMPERATURE button to adjust the wash temperature (see page 9). Display to programme the washing machine and follow the wash cycle progress (see opposite page). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. START/RESET button to start the programmes or cancel any incorrect settings. START/STOP button to turn the washing machine on and off.

Control knob to select the wash programmes. The knob stays still during the cycle. 6 Display In addition to being a practical tool to programme your appliance (see page 9), the display provides useful information concerning the wash cycle. Once you have pressed the START/RESET button to start the programme, the display will indicate the amount of time left until the end of the wash cycle. If a delayed start has been set (using the Delay Timer, see page 9), the delay time will be indicated on the display. GB Installation Description Programmes Door lock: If the symbol is on, the washing machine door is locked to prevent it from being opened accidentally. To avoid any damages, wait for the symbol to switch itself off before you open the appliance door.



[You're reading an excerpt. Click here to read official INDESIT WIE 147 user guide](http://yourpdfguides.com/dref/3808948)  
<http://yourpdfguides.com/dref/3808948>

At the end of the programme, the word END is displayed. Detergents In the event of an anomaly, an error code will appear, such as: F-01, which should be communicated to the Service Centre (see page 14). Precautions Care Troubleshooting This programme allows you to store your favourite or most-used wash cycle.

; the All you have to do is set the desired programme and, once it has started, turn the KNOB to position wash cycle will be stored automatically and the word MEMO appears on the display, flashing for a few seconds. ; you will be able to Subsequently, you can start the "MEMO" cycle by simply turning the KNOB to position see the temperature/spin cycle/delay timer values by pressing the corresponding buttons; you will also be able to modify them but this variation will only be valid for the programme in progress and it will not be stored in the "MEMO" cycle. If you want to store a new wash cycle, repeat the above-mentioned operations. "MEMO" Programme 7 Service Starting and Programmes Briefly: starting a programme GB 1. Turn the washing machine on by pressing button .

2. @@3. Set the knob to the desired programme. The estimated duration of the selected programme is displayed. @@4.

Select any functions (see page 9). 5. Add the detergent and any fabricacyed, and the icon flashes. @@@@The Delay Timer regulation is enabled with all programmes. @@@@the function is enabled when the corresponding button is illuminated. @@@Increases the efficiency of the rinse. @@@@This function is incompatible with the EASY IRON function. @@@@- the colours: separate coloured garments from whites.

Empty all pockets and check for loose buttons. @@@@Wash them separately without exceeding half the appliance load.

Use programme 6 which excludes the spin cycle automatically. @@@@To run the bleach cycle alone, pour the bleach into extra . compartment 4 and set the Rinse programme To bleacleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Cleaning the detergent dispenser Remove the dispenser by pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; Caring for your appliance door and drum Always leave the appliance door ajar to prevent unpleasant odours from forming. 3.

clean the interior thoroughly; 4. screw the lid back on; 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the water inlet hose at least once a year. If you see any cracks, replace it immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

Never use hoses that have already been used. 12 Troubleshooting Your washing machine could fail to work. Before calling for Assistance (see page 14), make sure the problem can't easily be solved by consulting the following list. GB Installation Problem The washing machine won't start. Possible causes/Solution: The appliance is not plugged into the socket, or not enough to make contact.

There has been a power failure. The appliance door is not shut properly (the word DOOR is displayed). button has not been pressed. The The START/RESET button has not been pressed. NB: It should be held minimum one second. The water tap is not turned on. A delayed start has been set (using the Delay Timer, see page 9). The water inlet hose is not connected to the tap. The hose is bent. The water tap is not turned on.

There is a water shortage. The water pressure is insufficient. @@@@ The wall drainage system doesn't have a standard pipe (min. 38 mm). @@See page 8 for details of the final spin speed for each program. The programme does not foresee the draining: some programmes require enabling the draining manually (see page 8). The Easy iron option is enabled: to complete the programme, press the START/RESET button (see page 9). The drain hose is bent (see page 3). Remove the drain hose from the standpipe or under-sink trap and check for blockages, ensuring that the water can drain freely away from the machine. Check that the transit bolts were removed correctly during installation (carefully read pages 2 and 3).

The washing machine is not level (see page 2). The washing machine is closed in between furniture cabinets and the wall (see page 2). The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 12). The drain hose is not secured properly (see page 3). The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. Detergents Precautions The washing machine vibrates too much during the spin cycle. Care Troubleshooting The washing machine leaks. There is too much foam.

13 Service Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen. Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washing machine. 14 GB Installation Description Programmes Detergents Precautions Care Troubleshooting Service 15 195039828.03 06/2004 - Xerox Business Services GB 16 .



[You're reading an excerpt. Click here to read official INDESIT WIE 147 user guide](http://yourpdfguides.com/dref/3808948)  
<http://yourpdfguides.com/dref/3808948>