



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIL 163 S. You'll find the answers to all your questions on the INDESIT WIL 163 S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIL 163 S
User guide INDESIT WIL 163 S
Operating instructions INDESIT WIL 163 S
Instructions for use INDESIT WIL 163 S
Instruction manual INDESIT WIL 163 S

Instructions for use

WASHING MACHINE

GB
English, 1

WIL 163 S

Contents

GB

Installation, 2-3-4-5

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 4
Technical details, 5

Washing machine description, 6-7

Control panel, 6
Leds, 7

Starting and Programmes, 8

Briefly, how to start a programme, 8
Programme table, 8

Personalisations, 9

Setting the temperature, 9
Functions, 9

Detergents and laundry, 10

Detergent dispenser, 10
Bleach cycle, 10
Preparing your laundry, 10
Special items, 10

Precautions and advice, 11

General safety, 11
Disposal, 11
Saving energy and respecting the environment, 11

Care and maintenance, 12

Cutting off the water or electricity supply, 12
Cleaning your appliance, 12
Cleaning the detergent dispenser, 12
Caring for your appliance door and drum, 12
Cleaning the pump, 12
Checking the water inlet hose, 12

Troubleshooting, 13

Service, 14

Before calling for Assistance, 14

 **INDESIT**

1



[You're reading an excerpt. Click here to read official INDESIT WIL 163 S user guide](http://yourpdfguides.com/dref/3206806)
<http://yourpdfguides.com/dref/3206806>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the four protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). 1. Both pipes may be connected to the cold water tap using the special Y connection with multiple attachments, supplied with the appliance (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2.

Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. 4. Seal the gaps using the plastic plugs provided.

5. Before using the appliance please read the instructions below. **WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.** Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot.

Connect Brown wire to terminal marked L or coloured Red. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected.

4 Technical details Model WIL 163 S 59.5 cm wide 85 cm high 53.5 cm deep from 1 to 5 kg GB Installation Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to IEC456 directive Description voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 46 litres up to 1600 rpm Programmes programme 2; temperature 60°C; run with a load of 5 kg.

This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments 5 Detergents Precautions Care Troubleshooting Service Washing machine description GB Control panel Leds Buttons FUNCTION ON-OFF/ DOOR ON-OFF LOCK Button Led Detergent dispenser PROGRAMME Knob Button Knob START/RESET TEMPERATURE Detergent dispenser: to add detergent and fabric softener (see page 10). LEDS: to find out which wash cycle phase is under way. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 7). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on.

TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 9). START/RESET button: to start the programmes or cancel any incorrect settings. ON-OFF/DOOR LOCK Led: to find out whether the washing machine is on and if the appliance door can be opened (see page 7). ON/OFF button: to turn the washing machine on and off. PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle. 6 Leds The LEDS provide important information. This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page 9), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle phase under way: During the wash cycle, the LEDS gradually illuminate on to indicate the cycle phase under way: Prewash Wash Rinse Spin cycle Note: during draining, the LED corresponding to the Spin cycle phase will be turned on. Function buttons The FUNCTION BUTTONS also act like LEDS.

When a function is selected, the corresponding button is illuminated. Switch the washing machine on by pressing button . 2. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 9). 5. Add the detergent and any fabric softener (see page 10). 6. Start the programme by pressing the START/RESET button. 7. Turn the washing machine off by pressing button Fabric softener Cycle Stain removal oval length Description of wash cycle operation/leach (minutes) Programme table Type of fabric and degree of soil Programme temperature Detergent prewash wash Standard Extremely soiled whites (sheets, tablecloths, etc.) Extremely soiled whites (sheets, tablecloths, etc.) Heavily soiled whites and fast colours Heavily soiled whites and delicate colours Slightly soiled whites and delicate colours (shirts, jumpers) function. This function is incompatible with the STAIN REMOVAL function. - the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons. Wash them separately without exceeding half the appliance load. Use programme 7 which excludes the spin cycle automatically.



You're reading an excerpt. Click here to read official INDESIT WIL 163 S user guide
<http://yourpdfguides.com/dref/3206806>

