



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIL 163. You'll find the answers to all your questions on the INDESIT WIL 163 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIL 163  
User guide INDESIT WIL 163  
Operating instructions INDESIT WIL 163  
Instructions for use INDESIT WIL 163  
Instruction manual INDESIT WIL 163

## Instructions for use

### WASHING MACHINE

<b>GB</b> English, 1	<b>Contents</b> <b>Installation, 2-3-4-5</b> Unpacking and leveling, 2 Electric and water connections, 2-3 The first wash cycle, 4 Technical details, 5 <b>Washing machine description, 6-7</b> Control panel, 6 Leds, 7 <b>Starting and Programmes, 8</b> Briefly, how to start a programme, 8 Programme table, 8 <b>Personalisations, 9</b> Setting the temperature, 9 Functions, 9 <b>Detergents and laundry, 10</b> Detergent dispenser, 10 Bleach cycle, 10 Preparing your laundry, 10 Special items, 10 <b>Precautions and advice, 11</b> General safety, 11 Disposal, 11 Saving energy and respecting the environment, 11 <b>Care and maintenance, 12</b> Cutting off the water or electricity supply, 12 Cleaning your appliance, 12 Cleaning the detergent dispenser, 12 Caring for your appliance door and drum, 12 Cleaning the pump, 12 Checking the water inlet hose, 12 <b>Troubleshooting, 13</b> <b>Service, 14</b> Before calling for Assistance, 14	<b>GB</b>
-------------------------	--	-----------

WIL 163



[You're reading an excerpt. Click here to read official INDESIT WIL 163 user guide](http://yourpdfguides.com/dref/3808962)  
<http://yourpdfguides.com/dref/3808962>

### Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the 4 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5.

Keep all the parts: you will need them again if the washing machine needs to be moved to another location. 1. Connect the supply pipe to the water mains, fitting the rubber gasket and the filter supplied with the appliance and ensuring that they are firmly tightened to the taps. The water supply marked C must be connected to the cold water tap; the pipe marked H must be connected to the hot water tap. Both pipes may be connected to the cold water tap using the special Y connection with multiple attachments, supplied with the appliance (see figure).

@@2. @@3. @@@@2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug.

Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. @@@@THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained.

Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewearable plug bearing the BSI mark of approval. or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. @@@@or Connect Brown wire to terminal marked L or coloured Red.

Connect Blue wire to terminal marked N or coloured Black. @@@@How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms.

When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIL 163 59.

5 cm wide 85 cm high 53.5 cm deep from 1 to 5 kg GB Installation Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to IEC456 directive Description voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 46 litres up to 1600 rpm Programmes programme 2; temperature 60°C; run with a load of 5 kg. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments 5 Detergents Precautions Care Troubleshooting Service Washing machine description GB Control panel Leds Buttons FUNCTION ON-OFF/ DOOR ON-OFF LOCK Button Led PROGRAMME Detergent dispenser Knob Button Knob START/RESET TEMPERATURE Detergent dispenser: to add detergent and fabric softener (see page 10). LEDS: to find out the wash cycle progress. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 7). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 9).

START/RESET button: to start the programmes or cancel any incorrect settings. ON-OFF/DOOR LOCK Led: to find out whether the washing machine is on and if the appliance door can be opened (see page 7). ON/OFF button: to turn the washing machine on and off. PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle. 6 Leds The LEDS provide important information. This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page.



[You're reading an excerpt. Click here to read official INDESIT WIL](http://yourpdfguides.com/dref/3808962)

[163 user guide](http://yourpdfguides.com/dref/3808962)

<http://yourpdfguides.com/dref/3808962>

9), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle progress: During the wash cycle, the LEDs gradually illuminate on to indicate the cycle progress: Prewash Wash Rinse Spin cycle Note: during draining, the LED corresponding to the Spin cycle phase will be turned on. Function buttons The FUNCTION BUTTONS also act like LEDs. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. @@@Switch the washing machine on by pressing button . @@2. @@3. Set the PROGRAMME knob to the programme required.

4. Set the wash temperature (see page 9). 5. Add the detergent and any fabric softener (see page 10). 6.

@@@@@@@@@the function is enabled when the corresponding button is illuminated. @@Bleaching cycle designed to remove the toughest stains. @@@@The fifth time the button is pressed, the function will be disabled. @@@@This function is incompatible with the EASY IRON function. @@@@This function is incompatible with the STAIN REMOVAL function. @@@@- the colours: separate coloured garments from whites. Empty all pockets and check for loose butiance when cleaning it and during all maintenance operations. Cleaning the pump The washing machine is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance.

To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the washing machine (see figure); Cleaning your appliance The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Cleaning the detergent dispenser Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal; Caring for your appliance door and drum Always leave the appliance door ajar to prevent unpleasant odours from forming. 3. clean the interior thoroughly; 4. screw the lid back on; 5. @@@@@There has been a power failure. The appliance door is not shut properly. button has not been pressed. The The START/RESET button has not been pressed.

NB: It should be held minimum one second. The water tap is not turned on. A delayed start has been set (using the Delay Timer, see page 9). The water inlet hose is not connected to the tap. The hose is bent.

The water tap is not turned on. There is a water shortage. The water pressure is insufficient. The START/RESET button has not been pressed. Description The washing machine does not fill with water. Programmes The machine continuously fills and empties with water. The washing machine does not drain or spin. The drain hose is not too low or too far in to the stand pipe (see page 3) for correct installation. The wall drainage system doesn't have a standard pipe (min. 38 mm).

Some programs have a slower final spin to taked best care of the fabrics. See page 8 for details of the final spin speed for each program. @@@@ The drain hose is bent (see page 3). @@@@ The washing machine is not level (see page 2). The washing machine is closed in between furniture cabinets and the wall (see page 2). The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 12). The drain hose is not secured properly (see page 3). Call for Assistance because this means there is an abnormality. Detergents Precautions The washing machine vibrates too much during the spin cycle.

Care The washing machine leaks. Troubleshooting The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED. There is too much foam. The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent.

13 Service Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen. Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washing machine.

14 GB Installation Description Programmes Detergents Precautions Care Troubleshooting Service 15 195046343.00 07/2004 - Xerox Business Services GB 16 .



[You're reading an excerpt. Click here to read official INDESIT WIL](http://yourpdfguides.com/dref/3808962)

[163 user guide](http://yourpdfguides.com/dref/3808962)

<http://yourpdfguides.com/dref/3808962>