



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIL 62. You'll find the answers to all your questions on the INDESIT WIL 62 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIL 62
User guide INDESIT WIL 62
Operating instructions INDESIT WIL 62
Instructions for use INDESIT WIL 62
Instruction manual INDESIT WIL 62

Instructions for use

WASHING MACHINE

GB
English, 1

WIL 62

Contents

GB

Installation, 2-3-4-5

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 4
Technical details, 5

Washing machine description, 6-7

Control panel, 6
Leads, 7

Starting and Programmes, 8

Briefly, how to start a programme, 8
Programmes table, 8

Personalisations, 9

Setting the temperature, 9
Functions, 9

Detergents and laundry, 10

Detergent dispenser, 10
Bleach cycle, 10
Preparing your laundry, 10
Special items, 10

Precautions and advice, 11

General safety, 11
Disposal, 11
Saving energy and respecting the environment, 11

Care and maintenance, 12

Cutting off the water or electricity supply, 12
Cleaning your appliance, 12
Cleaning the detergent dispenser, 12
Caring for your appliance door and drum, 12
Cleaning the pump, 12
Checking the water inlet hose, 12

Troubleshooting, 13

Service, 14

Before calling for Assistance, 14

 **INDESIT**

1



[You're reading an excerpt. Click here to read official INDESIT WIL 62 user guide](http://yourpdfguides.com/dref/1322890)

<http://yourpdfguides.com/dref/1322890>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the 3 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). NB: The plastic spacers may fall down inside the machine once the bolt has been removed, and will not interfere with the operation of the machine. 4. Seal the gaps using the plastic plugs provided. 5.

@@@2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). Packaging materials are not children's toys. Levelling 3. @@1. @@2. @@@@If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. GB Installation Description Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater. WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted.

If the fuse cover is lost, the plug must not be used until a replacement is obtained. @@@@@@@@@@@@@@@@@@@@If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Care Troubleshooting Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 Service GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected.

The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed.

The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIL 133 59.5 cm wide 85 cm high 52.5 cm deep from 1 to 5 kg GB Installation Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to IEC456 directive Description voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 46 litres up to 1300 rpm Programmes programme 2; temperature 60°C; run with a load of 5 kg. This appliance is compliant with the following European Community Directives: - 73/23/CEE of 19/02/73 (Low Voltage) and subsequent amendments - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE 5 Detergents Precautions Care Troubleshooting Service Washing machine description GB Control panel Leds Buttons FUNCTION ON-OFF/ DOOR ON-OFF LOCK Button Led Detergent dispenser PROGRAMME Knob Button Knob START/RESET TEMPERATURE Detergent dispenser: to add detergent and fabric softener (see page 10). LEDS: to find out the wash cycle progress. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 7). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 9). START/RESET button: to start the programmes or cancel any incorrect settings. ON-OFF/DOOR LOCK Led: to find out whether the washing machine is on and if the appliance door can be opened (see page 7). ON/OFF button: to turn the washing machine on and off.

PROGRAMME knob: to select the wash programmes. @@@@@@Function buttons The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated. @@@@@@the function is enabled when the corresponding button is illuminated. @@Bleaching cycle designed to remove the toughest stains. @@@@The fifth time the button is pressed, the function will be disabled. @@@@This function is incompatible with the EASY IRON function. @@@@This function is incompatible with the STAIN REMOVAL function. @@@@@@Pull the plug out yourself. @@@@@@@@@@@@ The appliance door tends to get quite hot during the wash cycle. @@Never try to do this alone, because the appliance is very heavy.



[You're reading an excerpt. Click here to read official INDESIT WIL 62 user guide](http://yourpdfguides.com/dref/1322890)

@@@@@ The pre-wash cycle is only necessary on extremely soiled garments. @@@@A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as possible.

If you use your washing machine from late in the afternoon until the early hours of the morning, you will help reduce the electricity board's peak load. The Delay Timer option (see page 9) helps to organise your wash cycles accordingly. If your laundry has to be dried in a tumble dryer, select a high spin speed. Having the least water possible in your laundry will save you time and energy in the drying process. Description Programmes Detergents Precautions Care

Disposal Disposing of the packaging material: observe local regulations, so the packaging can be re-used.

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. @@@@@ Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance. To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the washing machine (see figure); Cleaning your appliance The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. Cleaning the detergent dispenser Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out.

This is perfectly normal; Caring for your appliae. 14 GB Installation Description Programmes Detergents Precautions Care Troubleshooting Service 15
195058791.00 06/2006 - Xerox Business Services GB 16.



[You're reading an excerpt. Click here to read official INDESIT WIL
62 user guide](http://yourpdfguides.com/dref/1322890)

<http://yourpdfguides.com/dref/1322890>