



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIL 85. You'll find the answers to all your questions on the INDESIT WIL 85 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIL 85  
User guide INDESIT WIL 85  
Operating instructions INDESIT WIL 85  
Instructions for use INDESIT WIL 85  
Instruction manual INDESIT WIL 85

## Instructions for use

WASHING MACHINE

GB  
English

WIL 85

### Contents

GB

#### Installation, 26-27

Unpacking and levelling, 26  
Electric and water connections, 26-27  
The first wash cycle, 27  
Technical details, 27

#### Washing machine description, 28-29

Control panel, 28  
Leds, 29

#### Starting and Programmes, 30

Briefly, how to start a programme, 30  
Programme table, 30

#### Personalisations, 31

Setting the temperature, 31  
Setting the spin speed, 31  
Functions, 31

#### Detergents and laundry, 32

Detergent dispenser, 32  
Bleach cycle, 32  
Preparing your laundry, 32  
Special items, 32

#### Precautions and advice, 33

General safety, 33  
Disposal, 33  
Saving energy and respecting the environment, 33

#### Care and maintenance, 34

Cutting off the water or electricity supply, 34  
Cleaning your appliance, 34  
Cleaning the detergent dispenser, 34  
Caring for your appliance door and drum, 34  
Cleaning the pump, 34  
Checking the water inlet hose, 34

#### Troubleshooting, 35

Service, 36  
Before calling for Assistance, 36

 INDESIT

25



[You're reading an excerpt. Click here to read official INDESIT WIL 85 user guide](#)

<http://yourpdfguides.com/dref/433951>

**Manual abstract:**

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the 3 protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). A 1. @@@@2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 4.

Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location. Packaging materials are not children's toys. Levelling 3.

Make sure there are no kinks or bends in the hose. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. @@@@The free end of the hose should not be underwater. @@If this is not the case, replace the socket or the plug. outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to EN 60456 directive 59.5 cm wide 85 cm high 52.5 cm deep from 1 to 5 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.

05 MPa (0.5 bar) drum capacity 46 litres up to 800 rpm Care Troubleshooting programme 2; temperature 60°C; run with a load of 5 kg. The washing machine should not be installed in an When the washing machine is installed, the mains socket must be within easy reach. This appliance is compliant with the following European Community Directives: - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2006/95/CE (Low Voltage) - 2002/96/CE 27 Service Washing machine description GB Control panel Leds Buttons FUNCTION ON-OFF/ DOOR ON-OFF LOCK Button Led Detergent dispenser PROGRAMME Knob Button START/RESET TEMPERATURE SPIN SPEED Knob Knob Detergent dispenser: to add detergent and fabric softener (see page 32). LEDS: to find out which wash cycle phase is under way. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 29). SPIN SPEED knob: to set the spin speed or exclude the spin cycle completely (see page 31). FUNCTION buttons: to select the functions available. @@@@ON/OFF button: to turn the washing machine on and off. PROGRAMME knob: to select the wash programmes. @@@@Function buttons The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. Description Programmes As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start. Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality (see page 35). 29 Starting and Programmes Briefly: starting a programme GB 1. Switch the washing machine on by pressing button . All the LEDS will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2. Load your laundry into the washing machine and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 31). 5. Set the spin speed (see page 31). 6. Add the detergent and any fabric softener (see page 32).

7. Start he programme by pressing the START/RESET button. To cancel it, keep the START/RESET button pressed for at least 2 seconds. 8. When the programme is finished, the ON-OFF/ DOOR LOCK Led will flash to indicate that the appliance door can be opened. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly. Turn the washing . machine off by pressing button Fab ric softener C ycle Sta in re m ova l length op tion /b le a ch (m inute s) Programme table Typ e of fa b ric a nd d e gre e of soil P rogra m m e s Te m p e ra ture D e te rge nt prew as h w as h D e sc rip tion of w a sh c yc le S tandard C otton: Extremely soiled w hites (sheets, tablecloths, etc.) C otton: Extremely soiled w hites (sheets, tablecloths, etc.) C otton: Heavily soiled w h ites and fast colours C otton: Heavily soiled w h ites and delicate colours C otton: Sligh tly so iled w h ites an d delicate colours (sh irts , ju mpers, etc.

) Synthetics: Heavily soiled fast colours (baby linen, etc.) Synthetics: Heavily soiled fast colours (baby linen, etc.) Synthetics: Delicate colours (all types of slightly soiled garments) W oo l Very delicate fabrics (cu rtain s , s ilk, vis cos e, etc.) 1 2 2 2 3 4 4 5 6 7 9 0°C 9 0°C 6 0°C 4 0°C 4 0°C 6 0°C 4 0°C 4 0°C 4 0°C 3 0°C D elicate/ Tradition al D elicate/ Tradition al D elicate/ Tradition al D elicate/ Tradition al D elicate D elicate D elicate 167 152 158 143 99 80 71 71 50 52 Pre-wash, wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rin se cycles , an tcrease or delicate spin cycle Was h cycle, rin se cycles , an tcrease or delicate spin cycle Was h cycle, rin se cycles , an tcrease or delicate spin cycle W as h cycle, rin s e cycles an d delicate s p in cycle W as h cycle, rin s e cycles , an tcreas e o r drain in g cycle Wash cycle, rinse cycles, intermediate and final spin cycles Wash cycle, rinse cycles, intermediate and final spin cycles Was h cycle, rin se cycles , delicate s pin cycle W as h cycle, rin s e cycles an d delicate s p in cycle Cold w ash (w ithout detergents), w ash cycle, rin se cycles, and delicate spin cycle Tim e 4 y o u C otton: Heavily soiled w h ites and fast colours C otton: Sligh tly so iled w h ites an d delicate colours (sh irts , ju mpers, etc.



[You're reading an excerpt. Click here to read official INDESIT WIL 85 user guide](http://yourpdfguides.com/dref/433951)  
<http://yourpdfguides.com/dref/433951>

) Synthetics: Delicate colours (all types of slightly soiled garments) Synthetics: Delicate colours (all types of slightly soiled garments) 8 9 10 11 6 0°C 4 0°C  
40 °C 60 50 40 3 0°C 30 Sports shoes (MAX).

2 pairs) Fabrics for sportswear (Tracksuits, shorts, etc.) PARTIAL PROGRAMMES Spin cycle Drain Delicate/Traditional Rinse cycles and spin cycle Draining and spin cycle Drain in g 12 13 30 °C 50 63 3 0°C Wash cycle, rinse cycles, intermediate and final spin cycles Notes -For programmes 8 and 9, we advise against exceeding a wash load of 3.5 kg. -For programme 13 we advise against exceeding a wash load of 2 kg. -For the anti-crease function: see Easy iron, opposite page.

The information contained in the table is purely indicative. Special programme Daily (programme 11 for Synthetics) is designed to wash lightly soiled garments in a short amount of time: it only lasts 30 minutes and allows you to save on both time and energy. Wash them separately without exceeding half the appliance load. Use programme 7 which excludes the spin cycle automatically. Wool: for best results, use a specific detergent, taking care not to exceed a load of 1 kg. Do not use hand wash detergent because it may form too much foam. Bleach cycle Traditional bleach should be used on sturdy white fabrics, and delicate bleach for coloured fabrics, synthetics and for wool. Place extra compartment 4, provided, into compartment 1. When pouring in the bleach, be careful not to exceed the "max" level indicated on the central pivot (see figure). Pull the plug out yourself.

The appliance door tends to get quite hot during the wash cycle. Never try to do this alone, because the appliance is very heavy. The pre-wash cycle is only necessary on extremely soiled garments. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid wastage and to protect the environment: despite being biodegradable, detergents do contain ingredients that alter the natural balance of the environment. In addition, avoid using fabric softener as much as turn off the water tap, switch the appliance off and call for Assistance. If the dwelling is on one of the upper floors of a building, there may be drain trap problems causing the washing machine to load and unload water continuously.

The drain hose is bent (see page 27). The drain duct is clogged. The washing machine is not level (see page 26).

The water inlet hose is not screwed on correctly (see page 26). The detergent dispenser is obstructed (to clean it, see page 34). The drain hose is not secured properly (see page 27). If the problem persists, contact Assistance. The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like).

You used too much detergent. Detergents Precautions The washing machine does not drain or spin. Care The washing machine vibrates too much during the spin cycle. Troubleshooting The washing machine leaks. The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED.

There is too much foam. 35 Service Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 35); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen. Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washing machine. Service 36 .



[You're reading an excerpt. Click here to read official INDESIT WIL 85 user guide](http://yourpdfguides.com/dref/433951)

<http://yourpdfguides.com/dref/433951>