




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIN 82. You'll find the answers to all your questions on the INDESIT WIN 82 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIN 82
User guide INDESIT WIN 82
Operating instructions INDESIT WIN 82
Instructions for use INDESIT WIN 82
Instruction manual INDESIT WIN 82

Instructions for use

WASHING MACHINE

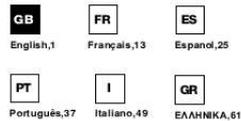

WIN 82

Contents

Installation, 2-3

Unpacking and levelling
Electric and water connections
The first wash cycle
Technical details

Washing machine description, 4-5

Control panel
Leds

Starting and Programmes, 6

Briefly, how to start a programme
Programme table

Personalisations, 7

Setting the temperature
Functions

Detergents and laundry, 8

Detergent dispenser
Preparing your laundry
Special items

Precautions and advice, 9

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12
Before calling for Assistance



[You're reading an excerpt. Click here to read official INDESIT WIN 82 user guide](http://yourpdfguides.com/dref/4256177)
<http://yourpdfguides.com/dref/4256177>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure).

2. 3. Make sure there are no kinks or bends in the hose.

The water pressure at the tap must be within the Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. The power supply cable must only be replaced by an authorised serviceman. warning! The company denies all liability if and when these norms are not respected. The free end of the hose should not be underwater.

Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. 5 cm wide 85 cm high 52,5 cm deep from 1 to 5 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (on the right); the supply voltage is included within the values indicated on the Technical details table (on the right); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug.

If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. ON-OFF/DOOR LOCK led If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality (see page 11). All the LEDs will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2. Load your laundry into the washing machine and shut the appliance door. To cancel it, keep the START/RESET button pressed for at least 2 seconds. 7. The temperature can be lowered, or even set to a cold wash ().

Wash them separately without exceeding half the appliance load. Use programme 11 which excludes the spin cycle automatically. Compartment 1: Detergent for pre-wash (powder) compartment 2: Detergent for the wash cycle (powder or liquid) Liquid detergent should only be poured in immediately prior to the wash cycle start. compartment 3: Additives (fabric softeners , etc.) The fabric softener should not overflow from the grid. Do not use hand wash detergent because it may form too much foam. Divide your laundry according to: - the type of fabric/the symbol on the label. - the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons. Do not exceed the weight limits stated below, which refer to the weight when dry: Sturdy fabrics: max 5 kg Synthetic fabrics: max 2.

5 kg Delicate fabrics: max 2 kg Wool: max 1 kg How much does your laundry weigh? The washing machine was designed and built in compliance with the applicable international safety regulations. disposed of in the normal unsorted municipal waste stream. Never touch the washing machine when barefoot or with wet or damp hands or feet. Do not pull on the power supply cable to unplug the appliance from the electricity socket. Pull the plug out yourself.

Do not open the detergent dispenser while the appliance is in operation. Do not touch the drain water as it could reach very high temperatures. Never force the washing machine door: this could damage the safety lock mechanism designed to prevent any accidental openings. Always keep children well away from the appliance while in operation. The appliance door tends to get quite hot during the wash cycle.

Never try to do this alone, because the appliance is very heavy. the pre-wash cycle is only necessary on extremely soiled garments. Avoiding it will save on detergent, time, water and between 5 and 15% energy. Treating stains with a stain remover or leaving them to soak before washing will cut down the need to wash them at high temperatures. A programme at 60°C instead of 90°C or one at 40°C instead of 60°C will save up to 50% on energy. Use the correct quantity of detergent depending on the water hardness, how soiled the garments are and the amount of laundry you have, to avoid write on the telephone number provided on the guarantee certificate. This information can be found on the data plate situated on the rear of the washing machine. .



[You're reading an excerpt. Click here to read official INDESIT WIN 82 user guide](http://yourpdfguides.com/dref/4256177)

<http://yourpdfguides.com/dref/4256177>