



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WITL 90. You'll find the answers to all your questions on the INDESIT WITL 90 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WITL 90
User guide INDESIT WITL 90
Operating instructions INDESIT WITL 90
Instructions for use INDESIT WITL 90
Instruction manual INDESIT WITL 90

Instructions for use

WASHING MACHINE

GB

English, 1

HU

Magyar, 13

CZ

Česky, 25

PL

Polski, 37

WITL 90

GB

Contents

Installation, 2-3

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 3
Technical details, 3

Washing machine description, 4-5

Control panel, 4
How to open and shut the drum, 5
Leds, 5

Starting and Programmes, 6

Briefly: how to start a programme, 6
Programme table, 6

Personalisations, 7

Setting the temperature, 7
Setting the spin cycle, 7
Functions, 7

Detergents and laundry, 8

Detergent dispenser, 8
Bleach cycle, 8
Preparing your laundry, 8
Special items, 8

Precautions and advice, 9

General safety, 9
Disposal, 9
Saving energy and respecting the environment, 9

Care and maintenance, 10

Cutting off the water or electricity supply, 10
Cleaning your appliance, 10
Caring for your appliance door and drum, 10
Cleaning the pump, 10
Checking the water inlet hose, 10
Cleaning the detergent dispenser, 10

Troubleshooting, 11

Service, 12

Before calling for Assistance, 12

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT WITL 90 user guide](http://yourpdfguides.com/dref/2320133)

<http://yourpdfguides.com/dref/2320133>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).

Keep all the parts: you will need them again if the washing machine needs to be moved to another location. Warning: should the screws be re-used, make sure you fasten the shorter ones at the top. Make sure there are no kinks or bends in the hose. @ @ 1. @ @ 2.

@ @ @ @ Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. warning! The company denies all liability if and when these norms are not respected. The free end of the hose should not be underwater. @ @ @ @ @ Maximum pressure 1 MPa (10 bar) minimum pressure 0.

Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (on the right); the supply voltage is included within the values indicated on the Technical details table (on the right); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug.

Outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to EN 60456 directive Programme 2; temperature 60°C; run with a load of 5 kg. When the washing machine is installed, the mains socket must be within easy reach. This appliance is compliant with the following European Community Directives: - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2006/95/CE (Low Voltage) - 2002/96/EU LEDs to find out which wash cycle phase is under way. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 5). SPIN SPEED knob to set the spin speed or exclude the spin cycle completely (see page 7). ON/OFF key to turn the washing machine on and off. sTART/RESET key to start the programmes or cancel incorrect settings.

ON-OFF/LID LOCK led, to find out whether the washing machine is on (flashing) and if the lid may be opened (see page 4). ON-OFF/LID LOCK led: If this LED is on, the appliance Lid is locked to prevent it from being opened accidentally; to avoid any damages, you must wait for the lamp to flash before you open the Lid. . @ All the LEDs will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash. 2.

Load your laundry into the washing machine, add the detergent and any fabric softener (see page 8) and shut the appliance door. To cancel it, keep the START/RESET button pressed for at least 2 seconds. 7. When the programme is finished, the ON-OFF/ DOOR LOCK Led will flash to indicate that the appliance door can be opened. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly.

Turn the washing machine off by pressing button . Notes -For programmes 8 and 9, we advise against exceeding a wash load of 3.5 kg. -For programme 13 we advise against exceeding a wash load of 2 kg. @ @ @ @ @ @ The temperature can be lowered, or even set to a cold wash ().

@ This option is incompatible with the EASY IRON option. @ @ This option is incompatible with the B LEACHING option. extra Rinse Increases the efficiency of the rinse. @ @ @ @ @ @ @ @ - the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons.

@ @ @ @ @ @ Wash them separately without exceeding half the appliance load. Use programme 7 which excludes the spin cycle automatically. @ @ @ @ Wool: for best results, use a specific detergent, taking care not to exceed a load of 1 kg. Do not use hand wash detergent because it may The softener is added automatically into the machine during the last wash. At the end of the wash programme, some water will be left in compartment 3. This is used for the inlet of denser fabric softeners into the machine, i. Should more than a normal amount of water remain in compartment 3, this means the emptying device is blocked. for cleaning instructions , see page 10. The fabric softener should not overflow from the grid. Traditional bleach should be used on sturdy white fabrics, and delicate bleach for coloured fabrics, synthetics and for wool.

When pouring in the bleach, be careful not to exceed the "max" level indicated on compartment 4 (see figure). To run the bleach cycle alone, pour the bleach into compartment 4 and set the Rinse programme (for Extra cotton fabrics) and push the button option rinse. @ Never touch the washing machine when barefoot or with wet or damp hands or feet. Do not pull on the power supply cable to unplug the appliance from the electricity socket. Pull the plug out yourself. Do not open the detergent dispenser while thespenser Disassembly: Press lightly on the large button on the front of the detergent dispenser and pull it upwards (fig. 3) using an old toothbrush and, once the pair of siphons inserted in the top of compartments 1 and 2 (fig. 4) have been pulled out, check whether the same are not clogged and then rinse them. Reassembly: Do not forget to reinsert the pair of siphons into the special housings and then to replace the dispenser into its seat, clicking it into place (fig. Your washing machine could fail to work.

Before calling for Assistance (see page 12), make sure the problem can't easily be solved by consulting the following list. The wash cycle won't start. The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. @ @ the free end of the hose is underwater (see page 3).

The wall drainage system doesn't have a breather pipe. @ @ @ @ In order to avoid such an inconvenience, special anti-drain trap valves are available in shops.



[You're reading an excerpt. Click here to read official INDESIT WITL 90 user guide](http://yourpdfguides.com/dref/2320133)
<http://yourpdfguides.com/dref/2320133>

The programme does not foresee the draining: some programmes require enabling the draining manually (see page 6). When the machine is installed, the locking screws for the oscillating assembly are still in place. @@@@You used too much detergent.

The washing machine vibrates too much during the spin cycle. There is too much foam. @@ This means there is a problem with the machine. @@Remove the plug connecting the appliance to the mains supply and wait for at least 40 seconds. If the problem is still evident after this process has been carried out, contact Assistance. Before calling for Assistance: Check whether you can solve the problem on your own (see page 11); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. If the machine has been installed or used incorrectly, you may be charged for the maintenance callout service. This information can be found on the data plate situated on the rear of the washing machine. .



[You're reading an excerpt. Click here to read official INDESIT WITL
90 user guide
http://yourpdfguides.com/dref/2320133](http://yourpdfguides.com/dref/2320133)