



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIXL 126. You'll find the answers to all your questions on the INDESIT WIXL 126 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIXL 126
User guide INDESIT WIXL 126
Operating instructions INDESIT WIXL 126
Instructions for use INDESIT WIXL 126
Instruction manual INDESIT WIXL 126

Instructions for use

WASHING MACHINE

GB
English

WIXL 126

Contents

GB

Installation, 2-3

Unpacking and levelling, 2
Electric and water connections, 2-3
The first wash cycle, 3
Technical details, 3

Washing machine description, 4-5

Control panel, 4
Leds, 5

Starting and Programmes, 6

Briefly, how to start a programme, 6
Programme table, 6

Personalisations, 7

Setting the temperature, 7
Functions, 7

Detergents and laundry, 8

Detergent dispenser, 8
Bleach cycle, 8
Preparing your laundry, 8
Special items, 8

Precautions and advice, 9

General safety, 9
Disposal, 9
Saving energy and respecting the environment, 9

Care and maintenance, 10

Cutting off the water or electricity supply, 10
Cleaning your appliance, 10
Cleaning the detergent dispenser, 10
Caring for your appliance door and drum, 10
Cleaning the pump, 10
Checking the water inlet hose, 10

Troubleshooting, 11

Service, 12

Before calling for Assistance, 12

 **INDESIT**

1



[You're reading an excerpt. Click here to read official INDESIT WIXL 126 user guide](http://yourpdfguides.com/dref/3808968)

<http://yourpdfguides.com/dref/3808968>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Unpacking and levelling Unpacking front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the washing machine. Electric and water connections Connecting the water inlet hose 1. Unpack the washing machine. 2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer.

3. @@ Seal the gaps using the plastic plugs provided. 5. @@6. Keep all the parts: you will need them again if the washing machine needs to be moved to another location.

1. Connect the supply pipe to the water mains using a gas 3/4 attachment, fitting the rubber gasket and the filter supplied with the appliance and ensuring that they are firmly tightened to the taps. The water supply marked C must be connected to the cold water tap; the pipe marked H must be connected to the hot water tap. @@@@2. @@3.

Make sure there are no kinks or bends in the hose. Packaging materials are not children's toys. Levelling Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. @@ The power supply cable must never be bent or dangerously compressed. @@@@LEDS: to find out which wash cycle phase is under way. If the Delay Timer function has been set, the time left until the programme starts will be indicated (see page 5). FUNCTION buttons: to select the functions available.

The button corresponding to the function selected will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 7). START/RESET button: to start the programmes or cancel any incorrect settings. ON-OFF/DOOR LOCK Led: to find out whether the washing machine is on and if the appliance door can be opened (see page 5). ON/OFF button: to turn the washing machine on and off. PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle. 4 Leds The LEDS provide important information. This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page. 7), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle phase under way: During the wash cycle, the LEDs gradually illuminate on to indicate the cycle phase under way: Prewash Wash Rinse Spin cycle Note: during draining, the LED corresponding to the Spin cycle phase will be turned on.

As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Function buttons The FUNCTION BUTTONS also act like LEDS. When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB Installation Description Programmes Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start.

Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality (see page 11 Troubleshooting). 5 Starting and Programmes Briefly: starting a programme GB 7. Start the programme by pressing the START/RESET 1. Switch the washing machine on by pressing button . All the LEDS will light up for a few seconds and To cancel it, keep the START/RESET button pressed the ON-OFF/DOOR LOCK Led will begin to flash. for at least 2 seconds. 2. Load your laundry into the washing machine and 8. When the programme is finished, the ON-OFF/ shut the appliance door. DOOR LOCK Led will flash to indicate that the 3. Set the PROGRAMME knob to the programme appliance door can be opened. Take out your required. laundry and leave the appliance door ajar to allow 4.

Set the wash temperature (see page 7). the drum to dry thoroughly. Turn the washing 6. Add the detergent and any fabric softener (see page 8). . @@@@-For programme 13 we advise against exceeding a wash load of 2 kg. -For the anti-crease function: see Easy iron, opposite page. The information contained in the table is purely indicative. @@By set safety regulations. @@@@@@@@@@@@@@@@Pull the plug The wall drainage system doesn't have a breather pipe.

@@If the dwelling is on one of the upper floors of a building, there may be drain trap problems causing the washing machine to load and unload water continuously. In order to avoid such an inconvenience, special anti-drain trap valves are available in shops. The programme does not foresee the draining: some programmes require enabling the draining manually (see page 6). @@ The drain hose is bent (see page 3). The drain duct is clogged. @@Remove the screws (see page 2). The washing machine is not level (see page 2). @@ The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 10). The drain hose is not secured properly (see page 3).

This means there is a problem with the machine. @@Switch off the machine. 2. @@3. Place the plug back into the socket. 4. Switch on the machine. 5. If the problem is still evident after this process has been carried out, contact Assistance.all for Assistance because this means there is an abnormality.

The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. Detergents The washing machine does not drain or spin. Precautions The washing machine vibrates too much during the spin cycle. Care The washing machine leaks. Troubleshooting The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED. There is too much foam. 11 Service Service GB 195053267.00 07/2005 - Xerox Business Services Before calling for Assistance: Check whether you can solve the problem on your own (see page 11); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate.



[You're reading an excerpt. Click here to read official INDESIT WIXL](#)

[126 user guide](#)

<http://yourpdfguides.com/dref/3808968>

If the machine has been installed or used incorrectly, you may be charged for the maintenance callout Always request the assistance of authorised servicemen. Notify the operator of: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate situated on the rear of the washing machine. service Service 12 .



[You're reading an excerpt. Click here to read official INDESIT WIXL 126 user guide](#)

<http://yourpdfguides.com/dref/3808968>