



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIXXE 127. You'll find the answers to all your questions on the INDESIT WIXXE 127 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIXXE 127
User guide INDESIT WIXXE 127
Operating instructions INDESIT WIXXE 127
Instructions for use INDESIT WIXXE 127
Instruction manual INDESIT WIXXE 127

Instructions for use

WASHING MACHINE

GB
English,1

WIXXE 127

Contents

GB

Installation, 2-3-4-5

Unpacking and levelling
Electric and water connections
The first wash cycle
Technical details

Washing machine description, 6-7

Control panel
Display
"MEMO" Programme

Starting and Programmes, 8

Briefly, how to start a programme
Programme table

Personalisations, 9

Setting the spin cycle
Setting the Delay Timer
Setting the temperature
Functions

Detergents and laundry, 10

Detergent dispenser
Bleach cycle
Preparing your laundry
Special Items

Precautions and advice, 11

General safety
Disposal
Saving energy and respecting the environment

Care and maintenance, 12

Cutting off the water or electricity supply
Cleaning your appliance
Cleaning the detergent dispenser
Caring for your appliance door and drum
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 13

Service and Guarantee, 14-15-16

Before calling for Assistance
Guarantee

 **INDESIT**

1



[You're reading an excerpt. Click here to read official INDESIT WIXXE 127 user guide](http://yourpdfguides.com/dref/3206816)
<http://yourpdfguides.com/dref/3206816>

Manual abstract:

2. Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the 4 protective screws and the rubber bush with the respective spacer, situated on the rear of the appliance (see also the installation leaflet). 1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure).

3. Make sure there are no kinks or bends in the hose. 4. Seal the gaps using the plastic plugs provided. 5.

Keep all the parts: you will need them again if the washing machine needs to be moved to another location. Packaging materials are not children's toys.

Levelling The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly. 1.

Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. Ensure that the supply taps are allowing water through. Old taps may seize in the closed position and thus prevent water reaching the machine. 2 Connecting the drain hose 65 - 100 cm Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; the supply voltage is included within the values indicated on the Technical details table (see page 5); the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug. Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below.

GB Where it connects to the waste water the waste water pipe pipe cut end off cut end or remove the spigot off spigot or remove the blanking cap blanking cap Where it connects The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is place over the edge of a basin or sink be sure the free end of the hose should not be underwater.

WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted.

@@@ or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches).

If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (see page 5); 3 GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or coloured Green or Green & Yellow. or Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black.

If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle.

GREEN & YELLOW BROWN 13 ampere fuse BLUE CROSS-BAR CORD GRIP The washing machine should not be installed in an outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. When the washing machine is installed, the mains socket must be within easy reach. Do not use extensions or multiple sockets. The power supply cable must never be bent or dangerously compressed. The power supply cable must only be replaced by an authorised serviceman. 4 Technical details Model WIXXE 127 59.5 cm wide 85 cm high 53.5 cm deep from 1 to 7 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 52 litres up to 1200 rpm GB Dimensions Capacity Electric connections Water connections Spin speed Control programmes according to EN 60456 directive programme 2; temperature 60°C; run with a load of 7 kg.

This appliance is compliant with the following European Community Directives: - 89/336/CEE of 03/05/89 (Electromagnetic Compatibility) and subsequent amendments - 2002/96/CE - 2006/95/CE (Low Voltage) 5 Washing machine description Control panel GB FUNCTION Buttons START/RESET button START/STOP button Detergent dispenser SPIN button Display button Control knob TEMPERATURE DELAY TIMER Detergent dispenser to add detergent and fabric softener (see page 10).



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/3206816)

[WIXXE 127 user guide](http://yourpdfguides.com/dref/3206816)

<http://yourpdfguides.com/dref/3206816>

SPIN button to adjust the spin speed or exclude it altogether (see page 9). DELAY TIMER button to delay the start of the set programme for a maximum period of 24 hours (see page 9). TEMPERATURE button to adjust the wash temperature (see page 9). Display to programme the washing machine and follow the wash cycle progress (see opposite page). FUNCTION buttons: to select the functions available. The button corresponding to the function selected will remain on. START/RESET button to start the programmes or cancel any incorrect settings. START/STOP button to turn the washing machine on and off.

Control knob to select the wash programmes.

Turn the washing machine on by pressing button . 2. Set the knob to the desired programme. The estimated duration of the selected programme is displayed.

4. Select any functions (see page 9). 5. Add the detergent and any fabric softener (see page 10). 6.

To cancel it, keep the START/RESET button pressed for at least 2 seconds. 7. When the programme has ended, the word END is displayed. Take out your laundry and leave the appliance door ajar to allow the drum to dry thoroughly. . 8. Turn the washing machine off by pressing button Max. Cycle Spin length Speeds (minutes) (r.p.m.).

Programme table Type of fabric and degree of soil Programme Temperature Detergent prewash Wash fabric softener Stain removal Descrimption of wash cycle option/bleach standard (sheets, tablecloths, etc.) Cotton: Extremely soiled whites (sheets, ta; appears, that is, a delay of one hour (this can reach up to 24h); stop on the "desired" delay; after approximately 2 seconds the setting is accepted, following which, the time for the set programme appears on the display and the remains on. symbol If you now press the START/RESET button, the set "delay" appears; this decreases every hour until the start of the cycle. In this phase, the "delay" can only be modified by decreasing it. The Delay Timer regulation is enabled with all programmes. If, when the appliance is switched on, the KNOB is positioned on a programme for which the temperature needs to be regulated, a fixed appears. Press button and the maximum temperature allowed for the programme set will be displayed and the icon flashes. Press it again and the temperature lowers until it reaches OFF, which indicates a cold wash cycle (press it again to go back to the maximum value); stop on the desired value, after approximately 2 seconds the setting is accepted: the symbol remains fixed. The temperature adjustment is enabled with all wash programmes.

Setting the Delay Timer Setting the temperature Functions To enable a function: 1. press the button corresponding to the desired function, according to the table below; 2. the function is enabled when the corresponding button is illuminated. Note: The rapid flashing of the button indicates that the corresponding function cannot be selected for the programme set. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled.

Function Effect Bleaching cycle designed to remove the toughest stains. Increases the efficiency of the rinse. This optitive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be Care and maintenance GB Cutting off the water or electricity supply Turn off the water tap after every wash. This will limit the wear of your appliance's water system and also prevent leaks. Unplug your appliance when cleaning it and during all maintenance operations.

Cleaning the pump The washing machine is fitted with a self-cleaning pump that does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber that protects the pump, situated in the lower part of the same. Make sure the wash cycle has ended and unplug the appliance. To access the pre-chamber: 1. using a screwdriver, remove the cover panel on the lower front of the washing machine (see figure); Cleaning your appliance The exterior and rubber parts of your appliance can be cleaned with a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.

Cleaning the detergent dispenser Remove the dispenser by pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2. unscrew the lid rotating it anticlockwise (see figure): a little water may trickle out.

3. clean the interior thoroughly; 4. screw the lid back on; 5. There has been a power failure. The appliance door is not shut properly (the word DOOR is displayed). button has not been pressed. The START/RESET button has not been pressed. NB: It should be held minimum one second. The water tap is not turned on. A delayed start has been set (using the Delay Timer, see page 9).

The water inlet hose is not connected to the tap. The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient. The wall drainage system doesn't have a standard pipe (min. 38 mm). See page 8 for details of the final spin speed for each program. The drain hose is bent (see page 3). The SPIN SPEED is in OFF position.

Remove the screws (see page 2). The washing machine is not level (see page 2). The washing machine is closed in between furniture cabinets and the wall (see page 2). This means there is a problem with the machine. Before calling Assistance, please follow the set of instructions below: 1. Switch off the machine; 2. Remove the plug connecting the appliance to the mains supply and wait for at least 40 seconds; 3. Place the plug back into the socket; 4. Switch on the machine; 5. If the problem is still evident after this process has been carried out, contact Assistance.

The water inlet hose is not screwed on correctly (see page 2). The detergent dispenser is obstructed (to clean it, see page 12). The drain hose is not secured properly (see page 3). The detergent is not suitable for machine washing (it should bear the definition "for washing machines" or "hand and machine wash", or the like). You used too much detergent. 13 The washing machine vibrates too much during the spin cycle. The machine is locked and the display flashes, indicating an error code (e.g. F-01, F-..

The washing machine leaks. There is too much foam. Service GB Before calling for Assistance: Check whether you can solve the problem on your own (see page 13); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. If the machine has been installed or used incorrectly, you may be charged for the maintenance callout service.

The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only.



[You're reading an excerpt. Click here to read official INDESIT](#)

[WIXXE 127 user guide](#)

<http://yourpdfguides.com/dref/3206816>

The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory . These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic. THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee Indesit also offers you a free 5 year parts guarantee. @ @There will be a charge for our engineer's time. @ @ @ @Free Helpdesk Service We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413)for telephone assistance, or, where necessary, to arrange for an engineer to call.

15 195082414.00 10/2009 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. Essential Contact Information Indesit Service We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 www.indesitservice.co.uk Please note: Our advisors will require the following information: Model number: Serial number: Parts and Accessories We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 www.indesitservice.co. uk Appliance Registration We want to give you additional benefits of Indesit ownership. To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 www.indesitservice.co. uk Indesit Company UK Ltd. Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 Recycling & Disposal Information As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut.

16.



[You're reading an excerpt. Click here to read official INDESIT WIXXE 127 user guide](http://yourpdfguides.com/dref/3206816)
<http://yourpdfguides.com/dref/3206816>