



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT WIXXL 146. You'll find the answers to all your questions on the INDESIT WIXXL 146 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT WIXXL 146
User guide INDESIT WIXXL 146
Operating instructions INDESIT WIXXL 146
Instructions for use INDESIT WIXXL 146
Instruction manual INDESIT WIXXL 146

Instruction booklet

WASHING MACHINE

GB
English

WIXXL 146

Contents

Installation, 2-3

Unpacking, 2
Remove the transit fixings, 2
Levelling, 2
Water connections, 2
Drainage and electrical connections, 3
Technical Details, 3

Washing machine description, 4-5

Control panel, 4
LEDs, 5

Starting and programmes, 6

Briefly starting a programme, 6
Programme table, 6

Personalisations, 7

Setting the temperature, 7
Setting the spin speed, 7
Options, 7

Detergents and laundry, 8

Detergent dispenser, 8
Maximum load size, 8

Precautions and advice, 9

General safety, 9
Disposal, 9
Saving energy and respecting
the environment, 9

Care and Maintenance, 10

Switching off the water or electricity supply, 10
Cleaning, 10
Caring for your appliance door and drum, 10
Cleaning the pump, 10
Checking the water inlet hose, 10

Troubleshooting, 11

Service, 12
Before calling for assistance, 12

 INDESIT



[You're reading an excerpt. Click here to read official INDESIT WIXXL 146 user guide](http://yourpdfguides.com/dref/3206818)
<http://yourpdfguides.com/dref/3206818>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the washing machine to inform the new owner as to its operation and features. ! Read these instructions carefully: they contain vital information on installation, use and safety. GB Levelling Your machine will be noisy if the two front feet are not adjusted so that the machine stands firm and level. ! The machine should be levelled from side to side and from front to back.

1. Move your machine into its final location. - Take care not to trap or kink the hoses. 2. Turn one or both front feet anti-clockwise by hand until the feet cannot be turned any more. When adjusting the feet, use a spirit level to check the machine stands level, from side to side and from front to back. - The spring on each foot will stop them coming loose. ! @@Unpack the machine. 2. Check whether the machine has been damaged during transport. If this is the case, do not install it and contact your retailer.

@@@MUST be removed before use ! Failure to do so may cause damage to your machine. It is important the transit bolt and spacer (see pic) come out intact. 1. @@Remember that this is a cold-fill machine. ! Check that seal is in place inside the hose end cap. 2. @@@@Hold, slide sideways and pull to remove. Turn the taps on and check for leaks: tighten if necessary. ! Make sure there are no kinks or bends in the hose. ! @@! If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. ! Always use new hoses. ! Check the water hose at least once a year, replace any that are cracked as worn hoses could split under water pressure. 4. For safety, insert one of the the plastic covers (supplied with your machine) over the hole. ! Repeat steps 1 to 4 to remove the second transit bolt.

! Packaging materials are not children's toys. 2 Drainage connections B A The first wash cycle Once the appliance has been installed and before you use it for the first time, run a wash cycle without detergent and no laundry, setting the 90°C programme without a pre-wash cycle. GB A. Connect the drain hose, without kinking it, to a draining duct or a wall drain fixed at a height between 65 and 100cm from the floor. B. Alternatively, place it over the edge of a basin, sink or tub, fastening the hose supplied to the tap. The free end of the hose should not be under water. ! We advise against the use of hose extensions. In case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150cm in length. TECHNICAL DETAILS Model WIXXL 146 59.

5 cm wide 85 cm high 52.5 cm deep from 1 to 7 kg voltage 220 - 240 volts 50 Hz absorbed power 1700 2100 W maximum pressure 1 MPa (10 bar) minimum pressure 0,05 MPa (0,5 bar) drum capacity 53 litres up to 1400 rpm Dimensions Capacity Electric connections Water connection Spin speed Control programmes according to the IEC456 directive Electrical connections Before plugging the appliance into the mains socket, make sure that: · the socket is earthed and in compliance with the applicable law. @@@@· the socket is compatible with the washing machines plug. If this is not the case, replace the socket or the plug. ! @@! @@! Do not use extensions or multiple sockets.

! The power supply cable must never be bent or dangerously compressed. ! @@! @@LEDS: to find out which wash cycle phase is under way. @@SPIN SPEED knob: to set the spin speed or exclude the spin cycle completely (see page 7). OPTION buttons: to select the options available. The button corresponding to the selected option will remain on. TEMPERATURE knob: to set the temperature or the cold wash cycle (see page 7). START/RESET button: to start the programmes or cancel any incorrect settings. ON-OFF/DOOR LOCK LED: to find out whether the washing machine is on and if the appliance door can be opened (see page 5). ON/OFF button: to turn the washing machine on and off. PROGRAMME knob: to select the wash programmes. The knob stays still during the cycle. 4 LEDs The LEDs provide important information. This is what they can tell you: Delay set: If the Delay Timer option has been enabled (see page 7), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle phase under way: During the wash cycle, the LEDs gradually illuminate on to indicate the cycle phase under way: Prewash Wash Rinse Spin cycle GB Note: during draining, the LED corresponding to the Spin cycle phase will be turned on. Option buttons: The OPTION buttons also act like LEDs. When an option is selected, the corresponding button is illuminated.

If the option selected is incompatible with the programme set, the button will flash and the option will not be enabled. If you set an option that is incompatible with another option you selected previously, only the last one selected will be enabled. As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Once the set delay is complete, the flashing LED will turn off and the programme set will start. ON-OFF / DOOR LOCK LED: If the LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. ! The rapid flashing of the ON-OFF/DOOR LOCK LED together with the flashing of at least one other LED indicates there is an abnormality. Call for Technical Assistance. 5 Starting and Programmes Briefly: starting a programme 1. Switch the washing machine on by pressing button . All the LEDs will light up for a few seconds and the ONOFF / DOOR LOCK LED will begin to flash. 2.

Load your laundry into the washing machine and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 7). 5. Set the spin speed (see page 7). 6. Add the detergent and any fabric softener (see page 8). 7. @@8. @@@@- For the anti-crease option: see Easy Iron (opposite page). The information contained in the table is purely indicative. @@7kg Synthetic fabrics : max. 3kg Delicate fabrics : max. 2kg Wool : max. 1kg ! DO NOT overload the machine as this could result in reduced performance. 8 Precautions and advice ! @@@@In addition, avoid using fabric softener as much as possible. @@@@Pull the plug out yourself. @@@@Never try to do this alone, because the applmiddot; The appliance door is not shut properly.

button has not been pressed. The The START/RESET button has not been pressed. The water tap is not turned on. A delayed start has been set (using the Delay Timer. see page 7) The water inlet hose is not connected to the tap. The hose is bent. The water tap is not turned on. There is a water shortage. The water pressure is insufficient. The START/RESET button has not been pressed. The wash cycle won't start. The washing machine fails to load water. The washing machine · The drain hose is not fitted between 65 and 100cm from the floor (see continuously loads and unloads page 3).



[You're reading an excerpt. Click here to read official INDESIT WIXXL 146 user guide](http://yourpdfguides.com/dref/3206818)
<http://yourpdfguides.com/dref/3206818>

water. · The free end of the hose is underwater (see page 3).

· The wall drainage system doesn't have a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and call for Assistance. If the dwelling is on one of the upper floors of a building, there may be drain trap problems causing the washing machine to load and unload water continuously. In order to avoid such an inconvenience, special anti-drain trap valves are available in shops. The washing machine does not drain or spin.

· The programme does not foresee the draining. Some programmes require enabling the draining manually (see page 6). · The Easy Iron option is enabled: to complete the programme, press the START/RESET button (see page 7). · The drain hose is bent (see page 3). · The drain duct is clogged. The washing machine vibrates · The drum was not unblocked correctly during installation (see page 2). too much during the spin cycle. · The washing machine is not level (see page 2). @@The washing machine leaks. @@@@@flashes rapidly at the same time as at least one other LED.

There is too much foam. @@@@@What to tell the Service Centre: · name, address and post code. · telephone number. · the type of problem. · the date of purchase. · the appliance model (Mod.). · the serial number (S/N). This information can be found on the data label inside the door of the machine. Spare Parts

This appliance is a complex machine.

Repairing it yourself or having a non-authorized person try to repair it could cause harm to one or more persons, could damage the machine and could invalidate the spare parts warranty. Call an authorised technician if you experience problems while using the machine. The spare parts have been designed exclusively for this appliance and not for other uses. 12 .



[You're reading an excerpt. Click here to read official INDESIT](#)

[WIXXL 146 user guide](#)

<http://yourpdfguides.com/dref/3206818>