



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT XWD61452W. You'll find the answers to all your questions on the INDESIT XWD61452W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT XWD61452W  
User guide INDESIT XWD61452W  
Operating instructions INDESIT XWD61452W  
Instructions for use INDESIT XWD61452W  
Instruction manual INDESIT XWD61452W

## Instructions for use

### WASHING MACHINE

GB  
English, 1

XWD 61452

#### Contents

GB

#### Installation, 2-3-4-5

Unpacking and leveling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

#### Care and maintenance, 6

Cutting off the water or electricity supply  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

#### Precautions and tips, 7

General safety  
Load balancing system  
Disposal

#### Description of the washing machine and starting a wash cycle, 8-9

Control panel  
Indicator lights  
Starting a wash cycle

#### Wash cycles, 10

Push & Wash  
Table of wash cycles

#### Personalisation, 11

Setting the temperature  
Setting the spin speed  
Functions

#### Detergents and laundry, 12

Detergent dispenser drawer  
Bleach cycle  
Preparing the laundry  
Comments requiring special care

#### Troubleshooting, 13-14

#### Assistance, 15-16

 INDESIT

1



[You're reading an excerpt. Click here to read official INDESIT XWD61452W user guide](http://yourpdfguides.com/dref/5736550)  
<http://yourpdfguides.com/dref/5736550>

### Manual abstract:

Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. ! Packaging materials should not be used as toys for children. Levelling 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2.

If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the supply pipe by screwing it to a cold water tap using a ¾ gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2.

Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical details table (see page 5). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand hoses. ! Use the ones supplied with the machine. 2 Connecting the drain hose Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and 100 cm from the floor; • the supply voltage is included within the values indicated on the Technical Data Plate fixed on the machine. • the socket is compatible with the washing machine's plug. If this is not the case, replace the socket or the plug.

Your appliance is now supplied with a 13 amp fused plug it can be plugged into a 13 amp socket for immediate use. Before using the appliance please read the instructions below. WARNING - THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN. Replacing the fuse: When replacing a faulty fuse, a 13 amp ASTA approved fuse to BS 1362 should always be used, and the fuse cover re-fitted. If the fuse cover is lost, the plug must not be used until a replacement is obtained. Replacement fuse covers: If a replacement fuse cover is fitted, it must be of the correct colour as indicated by the coloured marking or the colour that is embossed in words on the base of the plug. Replacements can be obtained directly from your nearest Service Depot. Removing the plug: If your appliance has a non-rewireable moulded plug and you should wish to re-route the mains cable through partitions, units etc., please ensure that either: the plug is replaced by a fused 13 ampere rewireable plug bearing the BSI mark of approval.

or: the mains cable is wired directly into a 13 amp cable outlet, controlled by a switch, (in compliance with BS 5733) which is accessible without moving the appliance. Disposing of the plug: Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket. Instructions for connecting cable to an alternative plug: Important: the wires in the mains lead are coloured in accordance with the following code: Green & Yellow Earth Blue Neutral Brown Live 3 GB 65 - 100 cm Where it connects to the waste water pipe cut end off spigot or remove the blanking cap The drain hose may be connected to an under-sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot. If it is placed over the edge of a basin or sink be sure the free end of the hose should not be underwater.

! We advise against the use of hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Ensure that if the drain hose is pushed into a standpipe, that the end does not go down more than 15cms (6 inches). If the hose is pushed down too far, this may cause the machine to self-siphon ie. continuously empty as it is filling. Electric connection Before plugging the appliance into the mains socket, make sure that: • the socket is earthed and in compliance with the applicable law; • the socket is able to sustain the appliance's maximum power load indicated on the Technical Data Plate fixed on the machine; GB As the colours of the wires in the lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: Connect Green & Yellow wire to terminal marked E or or coloured Green or Green & Yellow. Connect Brown wire to terminal marked L or coloured Red. Connect Blue wire to terminal marked N or coloured Black. If a 13 amp plug (BS 1363) is used it must be fitted with a 13 amp fuse, either in the plug or adaptor or at the distribution board. If you are in any doubt regarding the electrical supply to your machine, consult a qualified electrician before use. How to connect an alternative plug: The wires in this mains lead are coloured in accordance with the following code: BLUE NEUTRAL (N) BROWN LIVE (L) GREEN & YELLOW EARTH (E) GREEN & YELLOW 13 ampere fuse ! The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle "Auto Clean" (see "Cleaning the washing machine"). Technical data Model Dimensions Capacity XWD 61452 width 59.5 cm height 85 cm depth 54 cm from 1 to 6 kg Electrical please refer to the technical connections data plate fixed to the machine maximum pressure 1 MPa (10 bar) Water connections minimum pressure 0.05 MPa (0.

5 bar) drum capacity 52 litres Spin speed up to 1400 rotations per minute Programme 8: Cotton Standard 60°. Programme 9: Cotton Standard 40°. Test wash cycles in accordance with directives 1061/2010 and 1015/2010 BROWN BLUE CROSS-BAR CORD GRIP Disposing of the appliance: When disposing of the appliance please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of it as described above. ! The washing machine should not be installed in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain and thunderstorms.



[You're reading an excerpt. Click here to read official INDESIT XWD61452W user guide](http://yourpdfguides.com/dref/5736550)  
<http://yourpdfguides.com/dref/5736550>

*! When the washing machine is installed, the mains socket must be within easy reach. ! Do not use extensions or multiple sockets. ! The power supply cable must never be bent or dangerously compressed. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU 4 GB 5 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. • Unplug the washing machine when cleaning it and during all maintenance work.*

*Cleaning the pump The washing machine is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. To access the pre-chamber: 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures).*

*Cleaning the washing machine • The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. • The washing machine has a "Auto Clean" programme for its internal parts that must be run with no load in the drum. For maximum performance you may want to use either the detergent (i.e.*

*a quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washing machine. We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure). The programme will start automatically and will last approximately 70 minutes. To stop the cycle press the START/PAUSE button. 1 2 3 2. Unscrew the lid by rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal. A B 3. Clean the inside thoroughly.*

*4. Screw the lid back on. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the detergent dispenser drawer 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. ! Never use second-hand hoses. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming.*

*6 Precautions and tips ! This washing machine was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully. Disposal • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. • The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.*

*The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB General safety • This appliance was designed for domestic use only. • This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capacity. This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again.*

*8 Indicator lights The indicator lights provide important information. This is what they can tell you: Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate. If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If the selected option is not compatible with another previously selected option, the indicator light will flash accompanied by a buzzer (3 beeps), and only the latter option will be activated; the indicator light corresponding to the activated option will turn on. Door locked indicator light When the indicator light is on, the porthole door is locked to prevent it from being opened; make sure the indicator light is off before opening the door (wait approximately 3 minutes). To open the door during a running wash cycle, press the START/PAUSE button; the door may be opened once the DOOR LOCKED indicator light turns off. GB Starting a wash cycle Rapid programming 1. LOAD THE LAUNDRY. Open the porthole door. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page.*

*2. ADD THE DETERGENT. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Detergents and laundry". 3. CLOSE THE DOOR. 4. Press the "PUSH & WASH" button to start the wash programme. Traditional programming 1. Turn the washing machine on by pressing the ON/OFF button. All the indicator lights will turn on for a few seconds, then only the indicator lights relative to the selected programme settings will remain lit and the START/PAUSE indicator light will flash.*

*2. Load the laundry and close the door. 3. Set the WASH CYCLE knob to the desired programme. 4.*

*Set the washing temperature (see "Personalisation"). 5. Set the spin speed (see "Personalisation"). 6. Measure out the detergent and washing additives (see "Detergents and laundry").*

*7. Select the desired functions. 8. Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner in green. The display will show the maximum duration of the cycle chosen, which may decrease after several minutes, since the effective duration of the programme varies depending on the wash load and the settings chosen. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle. 9. At the end of the wash cycle the END indicator light will switch on.*



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5736550)

[XWD61452W user guide](http://yourpdfguides.com/dref/5736550)

<http://yourpdfguides.com/dref/5736550>





Compartment 3: Additives (fabric softeners, etc.) The fabric softener must not exceed the “max” level indicated on the central pin. Preparing the laundry ••• Divide the laundry according to: - the type of fabric/the symbol on the label - the colours: separate coloured garments from whites. Empty all garment pockets and check the buttons.

Do not exceed the values listed in the “Table of wash cycles”, which refer to the weight of the laundry when dry. How much does your laundry weigh? 1 sheet 400-500 g 1 pillow case 150-200 g 1 tablecloth 400-500 g 1 bathrobe 900-1.200 g 1 towel 150-250 g Garments requiring special care Sport (programme 1) is designed for washing lightly soiled sports clothing (tracksuits, shorts, etc.); for best results, we recommend not exceeding the maximum load indicated in the “Table of wash cycles”. We recommend using liquid detergent, and adding the amount suitable for a half-load.

Dark: use cycle 2 to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. Anti-odour: use programme 3 for washing garments with bad odours (e.g. smoke, sweat, fried food). The programme is designed to remove bad odours while preserving the fabric fibres. Synthetics fabrics or mixed loads should be washed at 40°, and resistant cotton fabrics at 60°. 12 Coloured: use this cycle 11 to wash bright coloured clothes. The programme is designed to maintain bright colours over time.

Cotton Standard 20°C (programme 12) ideal for lightly soiled cotton loads. The effective performance levels achieved at cold temperatures, which are comparable to washing at 40°, are guaranteed by a mechanical action which operates at varying speed, with repeated and frequent peaks. 20' Refresh 20°C (programme 13) ideal for refreshing and washing lightly soiled garments in a few minutes. It lasts just 20 minutes and therefore saves both time and energy. It can be used to wash different types of fabrics together (except for wool and silk), with a maximum load of 1.5 kg. 60' Cotton (programme 14) is designed to wash moderately soiled resistant cotton garments at 60° in an hour, with good washing performance. For synthetic or mixed garments, we recommend lowering the temperature down to 40°. Troubleshooting Your washing machine could fail to work. Before contacting the Technical Assistance Centre (see “Assistance”), make sure that the problem cannot be solved easily using the following list.

GB Problem: The machine does not switch on. Possible causes / Solutions: •The appliance is not plugged into the socket fully, or not enough to make contact.

- There is no power to the socket, or the fuse has blown in the mains plug. •The door is not closed properly. •The ON/OFF button has not been pressed.
- The START/PAUSE button has not been pressed. •The water tap has not been turned on to allow water to flow into the machine. •A delayed start has been set. •The water inlet hose is kinked. •The water inlet hose is not connected to the water supply.
- The water pressure is too low. •The water tap has not been turned on to allow water to flow into the machine. •There is no water supply to the house. •The inlet valve filter is blocked. •The START/PAUSE button has not been pressed. •The top of the drain hose is too low - It must be fitted at a height between 65 and 100 cm from the floor (see “Installation”). •The drain hose is connected incorrectly to the sink trap allowing water to run into the machine, the drain hose must be positioned higher than the bottom of the sink to prevent water flowing down the drain hose. •The end of the drain hose has been pushed too far down the standpipe, the ‘U’ bracket should be fitted 100 mm from the end of the drain hose. •The Pump filter is blocked. •The drain hose is kinked (see “Installation”).

- New Installation - The blanking cap or spigot has not been removed if connected under a sink. •The drain hose or sink trap is blocked. •The Spin Speed is set to •The Temperature is set to . . The wash cycle does not start. The washing machine does not take in water (“H2O” will flash on the display). The machine continuously fills with water and continually drains away or Water left in the drum or Stuck on wash. The machine does not drain or spin - ( error lights flashing ). The machine does spin. The machine does not heat or poor wash results.

The machine does not drain or spin & ‘START/PAUSE’ indicator lights flash. The programme takes too long. •If the option is enabled, at the end of the program the machine drum will rotate slowly. To complete the program press the ‘START/PAUSE’ or the buttons. •Programme times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance.

This will increase the programme times accordingly (see ‘The machine wont spin properly’ below). •The feet have not been adjusted, enabling the machine to rock. •New Installation - Either the Transit Bolts including the plastic spacers, or the Polystyrene Packaging have not been removed when installing the machine. •The machine is trapped between cabinets and/or walls. •The load is in a slight out of balance condition and machine is spinning, but at a lower speed.

The machine vibrates a lot during the spin cycle. 13 GB The machine is noisy. The machine wont spin properly. •There will always be some motor, pump and drum noise during spin. •Out of Balance detected when attempting to go into a spin cycle - If this happens the machine will continue to try to repeat the distribution of the load required before the machine will go into higher spin speeds - This will increase the programme time accordingly. This is a safety feature to prevent damage. Out of Balance can be caused by washing a single heavy item (eg duvet, quilt, etc). - Try the programme again using a different load. •The dispenser drawer is blocked with detergent and requires cleaning. •The water pressure is too high and requires turning down - turn down the tap on the water supply pipe slightly and try again.

•The machine is tilting forwards - It must be level when in its final position. •The fill hose is loose, check both the cabinet and tap ends. •The fill hose is tight but still leaks, if so replace the rubber washers, or the fill hose is missing the rubber washer. •The drain hose is not fixed in properly. •Switch off the machine and unplug it, wait for approximately 1 minute and then switch back on again. If the problem persists contact Technical Assistance Centre. •The machine requires a service wash.



[You're reading an excerpt. Click here to read official INDESIT](#)

[XWD61452W user guide](#)

<http://yourpdfguides.com/dref/5736550>

Run a "Auto Clean" wash cycle with detergent and no laundry. • The door will not open until the door lock indicator light goes out shortly after the program has finished. • If there is no power to the machine you need to perform the manual unlocking procedure.

• The door seal has drainage holes at the bottom - This is normal. • The water level is correct if it can be seen at the bottom of the door. The machine leaks from the dispenser. The machine leaks (other than dispenser). The option lights and the START/ PAUSE indicator light are flash rapidly and an error code appears on the display (eg F-01, F-

). The machine smells. The machine door cannot be opened. Door Seal damaged at the bottom.

The water level is too low when the machine is washing. There is too much foam. • The detergent is not suitable for machine washing (it should display the text 'for washing machines' or 'hand and machine wash' or the like). • Too much detergent was used - less detergent is required in soft water. • To comply with new energy saving regulations the machine is fitted with an automatic standby system. Press 'ON/OFF' button for 3 seconds to activate the machine, it can then either be switched off or a new programme selected. After completing the programme, or before starting a programme, the machine has turned itself off (no lights). General. • Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water Levels, Temperatures, Out of Balance loads, Wash time/progress). Normally, if your machine successfully completes the cycle, there is unlikely to be anything wrong! Remember, you will be charged for a service call for problems caused by incorrect installation, as indicated on pages 2 to 4.

@@@The appliance is used only on the electricity or gas supply printed on the rating plate. The appliance has been used for normal domestic purposes only. The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us. Any repair work must be undertaken by us or our appointed agent. Any parts removed during repair work or any appliance that is replaced become our property. The appliance is used in the United Kingdom or Republic of Ireland. GB The guarantee does not cover: - - - Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation. Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters. Replacement of any removable parts made of glass or plastic.

**THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES. 5 Year Parts Guarantee** Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on 08448 24 24 24 (Republic of Ireland 01 230 0800).

**Extended Guarantees** We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on 08448 226 226 (Republic of Ireland 01 230 0233). **Free Helpdesk Service** We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on 08448 224 224 (Republic of Ireland 0818 313 413) for telephone assistance, or, where necessary, to arrange for an engineer to call. 15 195122642.

00 03/2014 - Xerox Fabriano GB After Sales Service No one is better placed to care for your Indesit appliance during the course of its working life than us - the manufacturer. **Essential Contact Information Indesit Service** We are the largest service team in Europe offering you access to 400 skilled telephone advisors and 1100 fully qualified engineers on call to ensure you receive fast, reliable, local service. UK: 08448 224 224 Republic of Ireland: 0818 313 413 [www.indesitservice.co.uk](http://www.indesitservice.co.uk) Please note: Our advisors will require the following information: Model number: Serial number: **Parts and Accessories** We supply a full range of genuine replacement parts as well as accessory products that protect and hygienically clean your appliance to keep it looking good and functioning efficiently throughout its life. UK: 08448 225 225 Republic of Ireland: 0818 313 413 [www.indesitservice.co.uk](http://www.indesitservice.co.uk) **Appliance Registration** We want to give you additional benefits of Indesit ownership.

To activate your free 5 year parts guarantee you must register your appliance with us. UK: 08448 24 24 24 Republic of Ireland: 01 230 0800 [www.indesitservice.co.uk](http://www.indesitservice.co.uk) **Indesit Company UK Ltd.** Morley Way, Peterborough, PE2 9JB Indesit Company Unit 49 Airways Industrial Estate, Dublin 17 **Recycling & Disposal Information** As part of Indesit's continued commitment to helping the environment, Indesit reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage. Please dispose of packaging and old appliances carefully. To minimise the risk of injury to children, remove the door, plug and cut the mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut. Indesit Company Spa Viale Aristide Merloni, 47 60044 Fabriano (AN) Italy

www.  
indesit.com 16 .



[You're reading an excerpt. Click here to read official INDESIT XWD61452W user guide](http://yourpdfguides.com/dref/5736550)  
<http://yourpdfguides.com/dref/5736550>