



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT XWDA 751480X W FR. You'll find the answers to all your questions on the INDESIT XWDA 751480X W FR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT XWDA 751480X W FR**

**User guide INDESIT XWDA 751480X W FR**

**Operating instructions INDESIT XWDA 751480X W FR**

**Instructions for use INDESIT XWDA 751480X W FR**

**Instruction manual INDESIT XWDA 751480X W FR**



[You're reading an excerpt. Click here to read official INDESIT XWDA 751480X W FR user guide](http://yourpdfguides.com/dref/5833489)  
<http://yourpdfguides.com/dref/5833489>

### Manual abstract:

@@@ ! Read these instructions carefully: they contain vital information relating to the safe installation and operation of the appliance. Levelling the machine correctly will provide it with stability, help to avoid vibrations and excessive noise and prevent it from shifting while it is operating. If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the Washer-dryer. Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the Washerdryer by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent.

! The water pressure at the tap must fall within the range of values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Use the ones supplied with the machine. unpacking and levelling Unpacking 1. Remove the Washer-dryer from its packaging.

2. Make sure that the Washer-dryer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure).

4. Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the Washer-dryer needs to be moved to another location. ! Packaging materials should not be used as toys for children. levelling 1. Install the Washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 14 Connecting the drain hose Connect the drain hose, without bending it, to a drain duct or a wall drain situated between 65 and 100 cm from the floor; Warning! The company shall not be held responsible in the event that these standards are not observed.

GB The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle "Auto Clean" (see "Cleaning the Washer-dryer"). 65 - 100 cm alternatively, placed it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. technical data Model Dimensions XWDA 751480 width 59.5 cm height 85 cm depth 54 cm from 1 to 7 kg for wash programme from 1 to 5 kg for the drying programme Capacity ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the Washer-dryer. If this is not the case, replace the socket or the plug. ! The Washer-dryer must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the Washer-dryer has been installed, the electricity socket must remain within easy reach.

The cable should not be bent or compressed. ! The power supply cable must only be replaced by authorised technicians. Electrical please refer to the technical connections data plate fixed to the machine maximum pressure 1 MPa (10 bar) Water conimum pressure nections 0.05 MPa (0.5 bar) drum capacity 52 litres Spin speed up to 1400 rotations per minute wash: programme 8; temperature 60°C; using a load of 7 kg.

Energy radrying: the smaller load ted (2kg) must be dried by seprogrammes lecting the " " dryness leaccording to vel. The load must consist of regulations 2 sheets, 1 pillowcase and 2 EN 50229 hand towels; the remainder of the load must be dried by selecting the " " dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU - WEEE 15 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the Washer-dryer and help to prevent leaks. □ Unplug the Washer-dryer when cleaning it and during all maintenance work.

Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The Washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures). Cleaning the Washer-dryer • The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. □ The Washer-dryer has a "Auto Clean" programme for its internal parts that must be run with no load in the drum.

For maximum performance you may want to use either the detergent (i.

e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the Washer-dryer. We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure). the programme will start automatically and will last approximately 70 minutes. To stop the cycle press the START/PAUSE button. 1 2 3 A B 2. Unscrew the lid by rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal. Cleaning the detergent dispenser drawer 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure).

Wash it under running water; this procedure should be repeated frequently.



[You're reading an excerpt. Click here to read official INDESIT](#)

[XWDA 751480X W FR user guide](#)

<http://yourpdfguides.com/dref/5833489>

Screw the lid back on. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Checking the water inlet hose Check the inlet hose at least once a year.

If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. This washer-dryer was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully.  Always keep children well away from the appliance while it is operating.  The door can become quite hot during the wash cycle.

If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.  Before loading laundry into the washer-dryer, make sure the drum is empty.  During the drying phase, the door tends to get quite hot. GB General safety • This appliance was designed for domestic use only.  This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. - Do not dry unwashed items in the tumble dryer. - Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. - Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. - The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.  Do not touch the machine when barefoot or with wet or damp hands or feet.  Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull.  Do not open the detergent dispenser drawer while the machine is in operation.  Do not touch the drained water as it may reach extremely high temperatures. • Never force the porthole door.

This could damage the safety lock mechanism designed to prevent accidental opening.  If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself.  Do not use the appliance to dry clothes that have been washed with flammable solvents (e.  Do not use the appliance to dry foam rubber or similar elastomers.  Make sure that the water tap is turned on during the drying cycles.

Children of less than 3 years should be kept away from the appliance unless continuously supervised. • Remove all objects from pockets such as lighters and matches. Load balancing system Before every spin cycle, to avoid excessive vibrations and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the Washer-dryer performs the distribution process instead of spinning.

To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. Disposal • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used.  The European Directive 2012/19/EU door during a running wash cycle, press the START/PAUSE button; the door may be opened once the DOOR LOCKED indicator light turns off. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page. @@@@ traditional programming 1. Turn the Washer-dryer on by pressing the ON/OFF button. @@ 2. Load the laundry and close the door. 3. Set the WASH CYCLE knob to the desired programme.

@@@@@ 9. At the end of the wash cycle the FIN indicator light will switch on. @@@@ Switch the Washer-dryer off by pressing the ON/OFF button. @@@@ The indicator lights up to show that the cycle has started. @@ During the drying cycle the maximum temperature is 60°C. @@@@@@ 4. @@@@ maximum load for washing-only is 3,5 kg (Cycle duration 50'). The cycle cannot be customised further. @@@@@@ 5. Once the programme is finished, the FIN indicator light turns on.

@ @ Speed (rpm) Duration of wash cycle Detergents Fabric softener Bleach Wash Maximum load for washing (Kg) Maximum load for drying (Kg) Drying Special 1 2 3 4 5 6 Sport Dark Anti-odour (Cotton) Anti-odour (Synthetic) Delicate Wool: for wool, cashmere, etc. Eco Synthetic Automatic 13 Wash&Dry 45' 14 AirFresh Partials Rinse/Bleach Spin + Drain The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions. The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected. For all Test Institutes: 1) Test wash cycle in compliance with regulations EN 50229: select wash cycle 8 with a temperature of 60°C. 2) Long wash cycle for cottons: select wash cycle 10 with a temperature of 40. 20 Personalisation Setting the temperature GB Press the TEMPERATURE button to set the wash temperature (see Table of wash cycles). The temperature may be lowered, or even set to a cold wash. The Washer-dryer will automatically prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle. ! Exception: if the 8 programme is selected, the temperature can be increased up to a value of 90°C. Setting the drying cycle Two different types of drying are possible: time-based and Max.

cupboard Hanger Iron level-based. Fabric Load type load type Press the TIME-BASED DRYING button to set the desired (kg) drying duration: 40'- 90'- 120' - 150'- 180'. Clothing of different When the button is pressed for the first time, the selected time Cotton 5 250 210 190 sizes, Terry towels will be the minimum time allowed for the set cycle. When the machine has started the drying phase, press the TIME- Synthe- Sheets, Shirts, Py3 180 130 115 jamas, socks, etc.



[You're reading an excerpt. Click here to read official INDESIT](#)

[XWDA 751480X W FR user guide](#)

<http://yourpdfguides.com/dref/5833489>

*BASED DRYING button again to reduce the drying duration that was set previously. The indicator lights will show the new drying Knitwear, Pullovers. Wool 1,5 155 135 115 duration selected and the time remaining will consider the time etc. that has elapsed. Press the LEVEL-BASED DRYING button to set the desired drying level: Cupboard : suitable for laundry which can be put back in a cupboard without being ironed. Hanger : ideal for clothes which do not need to be dried fully.*

*Iron : suitable for clothes which will need ironing afterwards. The remaining dampness softens creases, making them easier to remove. If your laundry load to be washed and dried is much greater than the maximum stated load (see adjacent table of wash cycles), perform the wash cycle, and when the cycle is complete, divide the garments into groups and put some of them back in the drum. At this point, follow the instructions provided for a "Drying only" cycle. Repeat this procedure for the remainder of the load. A cooling-down period is always added to the end of each drying cycle. Note: if all the drying indicator lights are off, the machine will not perform the drying cycle. Drying only Press button to perform the drying-only cycle. After selecting the desired cycle (compatible with the type of garments), press button to exclude the washing phase and start the drying phase at the maximum level for the selected cycle. The drying level and duration can be set and changed by pressing the drying buttons , .*

*(Not compatible with cycles 13 and 14). Table of drying times (guideline values) Wash options The various wash options available with this Washer-dryer will help to achieve the desired results, every time. to activate the functions: 1. Press the button corresponding to the desired function; 2. The function is enabled when the corresponding indicator light is illuminated.*

*Note: - If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. - If the selected option is not compatible with another previously selected option, the indicator light will flash accompanied by a buzzer (3 beeps), and only the latter option will be activated; the indicator light corresponding to the activated option will turn on Sport This option allows for selecting the most suitable programme for any type of sports clothing, and is designed to remove dirt □ while optimally preserving the technical features of the garments. The various Sport option levels offer the following wash cycles: Sport Shoes, a cycle designed to safely wash up to 2 pairs of sports shoes simultaneously. : to dry 1 pair of shoes, we recommend setting drying time to 120'; to dry 2 pairs set it to 180'. Gym Kit, a cycle designed to simultaneously wash any type of sports clothing together with gym towels (Temperature 40°).*

*Technical Wear, designed for specifically washing waterproof garments or clothing with special technical fibres like GoreTex, so as to optimise washing performance while preserving their technical properties over time. Do not use fabric softeners for garments with technical fibres. Press this button to reduce the spin speed. Extra Rinse By selecting this option, the efficiency of the rinse is increased and optimal detergent removal is guaranteed. it is particularly useful for sensitive skin. 21 Detergents and laundry GB Detergent dispenser drawer Successful washing results also depend on the correct dose of detergent: adding too much detergent will not necessarily result in a more efficient wash, and may in fact cause build up on the inside of your appliance and contribute to environmental pollution. ! Do not use hand washing detergents because these create too much foam. ! Use powder detergent for white cotton garments, for prewashing, and for washing at temperatures over 60°C. ! Follow the instructions given on the detergent packaging. Open the detergent dispenser drawer and pour in the detergent or washing additiB 4 A ve, as follows.*

*1 3 2 Compartment 1: Pre-wash detergent (powder) Before pouring in the detergent, make sure that extra compartment 4 has been removed. Compartment 2:*

*Washing detergent (powder or liquid) If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners , etc. ) The fabric softener must not exceed the "max" level indicated on the central pin. Extra compartment 4: Bleach Bleach cycle When you select the drying function, at the end of the washing cycle the machine will automatically perform a delicate drying cycle that preserves the colours of the garments. The display will show the level " ". Anti-odour: use programme 3 for washing garments with bad odours (e. The programme is designed to remove bad odours while preserving the fabric fibres. synthetics fabrics or mixed loads should be washed at 40° , and resistant cotton fabrics at 60°.*

*Delicate: use programme 4 to wash very delicate garments. It is advisable to turn the garments inside out before washing them. For best results, use liquid detergent on delicate garments. When selecting an exclusively time-based drying function, a drying cycle is performed at the end of the wash cycle that is particularly delicate, thanks to light handling and appropriate temperature control of the water jet. The recommended durations are: 1 kg of synthetic garments --> 150 min 1 kg of synthetic and cotton garments --> 180 min 1 kg of cotton garments --> 180 min The degree of dryness depends on the load and fabric composition.*

*Wool: the wool wash programme of this machine has been tested and approved by The Woolmark Company for the washing of wool containing garments labelled as "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washer-dryer. (M1126) In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark. Rapid 30' (programme 6) this programme is designed to wash lightly soiled garments at 30° (excluding wool and silk) with a 3 kg maximum load in a short time: it only lasts 30 minutes and allows for saving time and energy Coloured: use this programme 10 to wash bright coloured clothes. The programme is designed to maintain bright colours over time. eco Cotton 20° (programme 11) ideal for lightly soiled cotton loads.*

*The effective performance levels achieved at cold temperatures, which are comparable to washing at 40°, are guaranteed by a mechanical action which operates at varying speed, with repeated and frequent peaks. Eco Synthetic (programme 12) ideal for mixed loads (cotton and synthetics) with a normal soil level. The effective performance levels achieved at cold temperatures are guaranteed by a mechanical action which operates at varying speed, across set average intervals.*



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5833489)

[XWDA 751480X W FR user guide](http://yourpdfguides.com/dref/5833489)

<http://yourpdfguides.com/dref/5833489>

Wash&Dry 45' select programme 13 for washing and drying lightly soiled garments (Cotton and Synthetic) in a short time. This cycle may be used to wash and dry a laundry load of up to 1 kg in just 45 minutes. to achieve optimum results , use liquid detergent and pre-treat cuffs , collars and stains. AirFresh (programme 14) ideal cycle to refresh garments and remove bad odours, in particular smoke, from cotton and synthetic items in 30' (max 1. 5kg) without the washing phase. Insert the additional compartment 4 (provided) into compartment 1. In pouring the bleach do not exceed the "max" level indicated on the central pin.

Perform bleaching by pouring the bleach into additional compartment 4 and set the programme . ! Traditional bleach should be used on resistant white fabrics, and delicate bleach for coloured and synthetics fabrics and for wool. Preparing the laundry •••Divide the laundry according to: - the type of fabric/the symbol on the label - the colours: separate coloured garments from whites. Empty all garment pockets and check the buttons. @@How much does your laundry weigh? @@@@We recommend using liquid detergent, and adding the amount suitable for a half-load. Dark: use programme 2 to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. 22 Troubleshooting Your Washer-dryer could fail to work. Before contacting the Technical Assistance Centre (see

"Assistance"), make sure that the problem cannot be solved easily using the following list.

gB Problem: The Washer-dryer does not switch on. The wash cycle does not start. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or is not making contact. □ There is no power in the house. □ The water inlet hose is not connected to the tap.

□ The pressure is too low. • The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation"). □ The wall drainage system is not fitted with a breather pipe.

If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously. Special antidraining valves are available in shops and help to avoid this inconvenience. □ The wash cycle does not include draining: some wash cycles require the drain phase to be started manually. □ The drum was not unlocked correctly during installation (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The Washer-dryer does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The Washer-dryer continuously takes in and drains water. The Washer-dryer does not drain or spin.

The Washer-dryer vibrates a lot during the spin cycle. the Washer-dryer leaks. The "Options" indicator lights and the "start/pause" indicator light flash, while one of the "phase in progress" indicator lights and the "door locked" indicator light will remain lit in a fixed manner. There is too much foam. □ The detergent is not suitable for machine washing (it should display the text "for Washer-dryers" or "hand and machine wash"; or the like). • Too much detergent was used. □ After switching on the machine a control other than Push&Wash+Dry was activated. Switch the machine off and press the Push&Wash+Dry button. □ •••The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure.

The appliance door is not shut properly. All the drying indicator lights are off. push&Wash+Dry does not activate. The washer-dryer does not dry. 23 Service GB 195119731.

02 10/2014 - Xerox Fabriano Before calling for Assistance: • Check whether you can solve the problem alone (see "Troubleshooting"); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N). This information can be found on the data plate applied to the rear of the Washer-dryer, and can also be found on the front of the appliance by opening the door.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5833489)

[XWDA 751480X W FR user guide](http://yourpdfguides.com/dref/5833489)

<http://yourpdfguides.com/dref/5833489>