



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT XWDE 861480X W. You'll find the answers to all your questions on the INDESIT XWDE 861480X W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual INDESIT XWDE 861480X W

User guide INDESIT XWDE 861480X W

Operating instructions INDESIT XWDE 861480X W

Instructions for use INDESIT XWDE 861480X W

Instruction manual INDESIT XWDE 861480X W



[You're reading an excerpt. Click here to read official INDESIT XWDE 861480X W user guide](http://yourpdfguides.com/dref/5834175)
<http://yourpdfguides.com/dref/5834175>

Manual abstract:

@@@ ! @@ Levelling the machine correctly will provide it with stability, help to avoid vibrations and excessive noise and prevent it from shifting while it is operating. If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washer-dryer. Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the **Water Block** (A) device to a cold water tap using a 3/4 gas threaded attachment, A then perform the connection by screwing the supply hose to the device. Before performing the connection, allow the water to run freely until it is perfectly clear. For a correct installation of the device, follow the instructions given in the **Water Block** packaging. ! The device is already adjusted for the correct operation of the washing machine and therefore it is recommended not to change its settings. 2. Connect the inlet hose to the washer-dryer by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3.

Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Use the ones supplied with the machine. unpacking and levelling Unpacking 1.

Remove the washer-dryer from its packaging. 2. Make sure that the washer-dryer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3.

Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5. Keep all the parts in a safe place: you will need them again if the washer-dryer needs to be moved to another location. ! Packaging materials should not be used as toys for children. levelling 1. Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°.

2. The cable should not be bent or compressed. ! The power supply cable must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. GB 65 - 100 cm The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle **Auto Clean** (see **Cleaning the washer-dryer**). Alternatively, rest it on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. technical data Model Dimensions XWDE 861480 width 59. 5 cm height 85 cm depth 60,5 cm from 1 to 8 kg for wash programme from 1 to 6 kg for the drying programme Capacity ! technical data Model Dimensions XWDE 861480 width 59. Electrical connections Before plugging the appliance into the electricity socket, make sure that: **⚡** the socket is earthed and complies with all applicable laws; **⚡** the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); **⚡** the power supply voltage falls within the values indicated in the Technical data table (see opposite); **⚡** the socket is compatible with the plug of the washer-dryer.

If this is not the case, replace the socket or the plug. ! The washer-dryer must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washer-dryer has been installed, the electricity socket must be within easy reach. Electrical please refer to the technical connections data plate fixed to the machine Water connections Spin speed maximum pressure 1 MPa (10 bar) minimum pressure 0.

05 MPa (0. 5 bar) drum capacity 62 litres up to 1400 rotations per minute wash: programme 8; temperature 60°C; using a load of 8 kg. Energy radrying: the smaller load (2kg) ted must be dried by selecting programmes the **Auto Clean** dryness level. The according to load must consist of 3 sheets, regulation 2 pillowcases and 1 hand towel; the remainder of the load must be dried by selecting the **Auto Clean** dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU - WEEE 17 Care and maintenance GB Cutting off the water and electricity supplies **⚡** Turn off the water tap after every wash cycle.

This will limit wear on the hydraulic system inside the washer-dryer and help to prevent leaks. **⚡** Unplug the washer-dryer when cleaning it and during all maintenance work. Cleaning the pump The washer-dryer is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures). 2. Unscrew the lid by rotating it anticlockwise (see figure): a little water may trickle out. This is perfectly normal.

Cleaning the washer-dryer **⚡** The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. **⚡** The washer-dryer has a **Auto Clean** programme for its internal parts that must be run with no load in the drum. For maximum performance you may want to use either the detergent (i. e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washer-dryer. We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure). the programme will start automatically and will last approximately 70 minutes. To stop the cycle press the **START/PAUSE** button.

Screw the lid back on. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the detergent dispenser drawer 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently.



[You're reading an excerpt. Click here to read official INDESIT XWDE 861480X W user guide](http://yourpdfguides.com/dref/5834175)
<http://yourpdfguides.com/dref/5834175>

Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Caring for the door and drum of your appliance

Always leave the porthole door ajar in order to prevent unpleasant odours from forming. 18 Precautions and tips ! This washer-dryer was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully.

Do not use the appliance to dry foam rubber or similar elastomers. Make sure that the water tap is turned on during the drying cycles. GB General safety This appliance was designed for domestic use only. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. - Do not dry unwashed items in the tumble dryer. - Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. - Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. - Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged. WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Do not touch the machine when barefoot or with wet or damp hands or feet. Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. Do not open the detergent dispenser drawer while the machine is in operation. Do not touch the drained water as it may reach extremely high temperatures. Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself.

Always keep children well away from the appliance while it is operating. The door can become quite hot during the wash cycle. If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. Before loading laundry into the washer-dryer, make sure the drum is empty.

During the drying phase, the door tends to get quite hot. Children of less than 3 years should be kept away from the appliance unless continuously supervised. Remove all objects from pockets such as lighters and matches. Disposal Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. The European Directive 2012/19/EU (WEEE) on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out wheeled bin symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. Opening the pesses the data on the basis of the selected programme. After a maximum of 10 minutes, the icon remains lit in a fixed manner and the final amount of time remaining is displayed. The hour-glass icon will then switch off approximately 1 minute after the final amount of time remaining has appeared. The wash cycle phases corresponding to the selected wash cycle and the wash cycle phase of the running wash cycle appear in section B: Main wash Rinse Spin/Drain Drying The delay symbol, when lit, indicates that the set delayed start value has appeared on the display. There are three levels in section C concerning the washing options. Section D includes the icons related to the three different drying levels as well as the icon drying option is set., which lights up when a timed DOOR LOCKED indicator light: The lit symbol indicates that the door is locked.

To prevent any damage, wait until the symbol turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED symbol is switched off the door may be opened. 21 How to run a wash cycle or a drying cycle GB Rapid programming 1. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in Detergents and laundry. Press the PUSH&WASH+DRY button to start the programme. Press the button; the START/PAUSE indicator light will flash slowly in a green colour. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes and wash cycles on the following page. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in Detergents and laundry. Use the WASH CYCLE SELECTOR knob to select the desired wash cycle.

A temperature and spin speed is set for each wash cycle; these values may be adjusted. The duration of the cycle will appear on the display. Use the relevant buttons: Modify the temperature and/or spin speed. If these buttons are pressed again, the maximum values are restored. ! Hanger : ideal for clothes which do not need to be dried fully.

Iron : suitable for clothes which will need ironing afterwards. The remaining dampness softens creases, making them easier to remove.



[You're reading an excerpt. Click here to read official INDESIT](#)

[XWDE 861480X W user guide](#)

<http://yourpdfguides.com/dref/5834175>

@@@Repeat this procedure for the remainder of the load. @@Drying only Press button to perform the drying-only cycle. @@@@ modify the cycle settings.

@@@ ! @@ ! @@ ! @@@@To open the door while a cycle is in progress, press the START/PAUSE button; if the DOOR LOCKED symbol is switched off the door may be opened. Press the START/PAUSE button again to restart the wash cycle from the point at which it was interrupted. This will be indicated by the text END on the display; when the DOOR LOCKED symbol switches off the door may be opened. Open the door, unload the laundry and switch off the machine. ! If you wish to cancel a cycle which has already begun, press and hold the button. The cycle will be stopped and the machine will switch off. Wash cycles and options Table of wash cycles Maximum load for washing (Kg) Maximum load for drying (Kg) Wash cycles Detergents Prewash Fabric softener Bleach Wash Max. Speed (rpm) Cycle duration Drying GB Description of the wash cycle Special 1 2 3 4 5 6 The duration of the wash cycles can be checked on the display. 20° Eco Synthetic 20° 30° and exclude the spin cycle, the machine will drain only. Automatic 13 Wash&Dry 45 14 AirFresh Partials Rinse/Bleach Spin + Drain Drain only * * If you select programme The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions.

The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected. For all Test Institutes: 1) Test wash cycle in compliance with regulation EN 50229: select wash cycle 8 with a temperature of 60°C. 2) Long wash cycle for cottons: select wash cycle 10 with a temperature of 40. Wash options - @@Sport This option allows for selecting the most suitable programme for any type of sports clothing, and is designed to remove dirt while optimally preserving the technical features of the garments. The various Sport option levels offer the following wash cycles: Sport Shoes, a cycle designed to safely wash up to 2 pairs of sports shoes simultaneously. : to dry 1 pair of shoes, we recommend setting drying time to 120; to dry 2 pairs set it to 180. Gym Kit, a cycle designed to simultaneously wash any type of sports clothing together with gym towels (Temperature 40°). Technical Wear, designed for specifically washing waterproof garments or clothing with special technical fibres like Gore-Tex, so as to optimise washing performance while preserving their technical properties over time. Do not use fabric softeners for garments with technical fibres. 23 GB Push&Wash+Dry This function makes it possible to start an automatic wash and drying cycle either when the machine is off without having to press the ON/OFF button in advance, or after switching on the machine without having activated any button and/or selector (otherwise the Push&Wash+Dry function will be deactivated).

To start the Push&Wash+Dry cycle press and hold the button for 2 seconds. The indicator lights up to show that the cycle has started. The wash and drying cycle is ideal for cotton or synthetic fabrics, as it washes them at a temperature of 30° and a maximum spin speed of 1000 rpm. During the drying cycle the maximum temperature is 60°C. At the end of the cycle the residual humidity will be the same as for the level. max recommended load 3 kg. The time displayed is the maximum time allowed by the Push&Wash+Dry cycle. If the load is lower than the maximum load or most garment are made of synthetic materials, the actual time of the cycle will be shorter. Load the laundry (cotton and/or synthetic garments) and close the door. Start the cycle by pressing and holding the Push&Wash+Dry button for 2 seconds.

The relevant indicator light will turn green and the door will lock (the DOOR LOCKED symbol is lit). NB: starting the cycle through the Push&Wash+Dry button activates an automatic non-customisable wash and drying cycle recommended for cotton and synthetic fabrics. 4. The automatic cycle can be used only for washing, excluding the drying phase. Press the Push&Wash+Dry button and then the drying button : the drying icon of the level will switch off. maximum load for washing-only is 4 kg. The cycle cannot be customised further. To open the door while an automatic cycle is under way, press the START/PAUSE button. If the DOOR LOCKED symbol is off, the door may be opened only during the washing phase. Press the START/PAUSE button again to restart the wash cycle from the point at which it was interrupted.

5. At the end of the wash cycle the word END will light up. 24 Detergents and laundry Detergent dispenser drawer Successful washing results also depend on the correct dose of detergent: adding too much detergent will not necessarily result in a more efficient wash, and may in fact cause build up on the inside of your appliance and contribute to environmental pollution. ! Do not use hand washing detergents because these create too much foam. ! Use powder detergent for white cotton garments, for prewashing, and for washing at temperatures over 60°C. ! Follow the instructions given on the detergent packaging. Open the detergent dispenser drawer and pour B 4 A in the detergent or washing additive, as follows. Special wash cycles Sport (programme 1) is designed for washing lightly soiled sports clothing (tracksuits, shorts, etc.); for best results, we recommend not exceeding the maximum load indicated in the Table of wash cycles. We recommend using liquid detergent, and adding the amount suitable for a half-load.

Dark: use programme 2 to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. When you select the drying function, at the end of the washing cycle the machine will automatically perform a delicate drying cycle that preserves the colours of the garments. The display will show the level. Anti-odour: use programme 3 for washing garments with bad odours (e. The programme is designed to remove bad odours while preserving the fabric fibres. synthetics fabrics or mixed loads should be washed at 40°, and resistant cotton fabrics at 60°. Delicate: use programme 4 to wash very delicate garments. It is advisable to turn the garments inside out before washing them.

For best results, use liquid detergent on delicate garments. When selecting an exclusively time-based drying function, a drying cycle is performed at the end of the wash cycle that is particularly delicate, thanks to light handling and appropriate temperature control of the water jet.



[You're reading an excerpt. Click here to read official INDESIT XWDE 861480X W user guide](#)
<http://yourpdfguides.com/dref/5834175>

The recommended durations are: 1 kg of synthetic garments --> 150 min 1 kg of synthetic and cotton garments --> 180 min 1 kg of cotton garments --> 180 min The degree of dryness depends on the load and fabric composition. Wool: the wool wash programme of this machine has been tested and approved by The Woolmark Company for the washing of wool containing garments labelled as "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washer-dryer. (M1127) In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark. Rapid 30 (programme 6) this programme is designed to wash lightly soiled garments at 30°C (excluding wool and silk) with a 3 kg maximum load in a short time: it only lasts 30 minutes and allows for saving time and energy Coloured: use this programme 10 to wash bright coloured clothes. The programme is designed to maintain bright colours over time. eco Cotton 20°C (programme 11) ideal for lightly soiled cotton loads. The effective performance levels achieved at cold temperatures, which are comparable to washing at 40°C, are guaranteed by a mechanical action which operates at varying speed, with repeated and frequent peaks. 25 GB 1 3 2 Compartment 1: Pre-wash detergent (powder) Before pouring in the detergent, make sure that extra compartment 4 has been removed.

Compartment 2: Washing detergent (powder or liquid) If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners, etc.) The fabric softener must not exceed the "max" level indicated on the central pin. Extra compartment 4: Bleach Bleach cycle Insert the additional compartment 4 (provided) into compartment 1. In pouring the bleach do not exceed the "max" level indicated on the central pin. Perform bleaching by pouring the bleach into additional compartment 4 and set the programme. ! Traditional bleach should be used on resistant white fabrics, and delicate bleach for coloured and synthetics fabrics and for wool. Preparing the laundry " " Divide the laundry according to: - the type of fabric/the symbol on the label - the colours: separate coloured garments from whites. Empty all garment pockets and check the buttons.

Do not exceed the values listed in the "Table of wash cycles", which refer to the weight of the laundry when dry. 1 sheet 400-500 g 1 pillow case 150-200 g 1 tablecloth 400-500 g 1 bathrobe 900-1. 200 g 1 towel 150-250 g How much does your laundry weigh? GB Eco Synthetic (programme 12) ideal for mixed loads (cotton and synthetics) with a normal soil level. The effective performance levels achieved at cold temperatures are guaranteed by a mechanical action which operates at varying speed, across set average intervals. Wash&Dry 45 select programme 13 for washing and drying lightly soiled garments (Cotton and Synthetic) in a short time.

This cycle may be used to wash and dry a laundry load of up to 1 kg in just 45 minutes. to achieve optimum results, use liquid detergent and pre-treat cuffs, collars and stains. AirFresh (programme 14) ideal cycle to refresh garments and remove bad odours, in particular smoke, from cotton and synthetic items in 30 (max 1. 5kg) without the washing phase. Load balancing system Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed.

If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. @@@@ Problem: Possible causes / Solutions: The washer-dryer does not switch " The appliance is not plugged into the socket fully, or not enough to make contact. " There is no power in the house. The wash cycle does not start. " The water inlet hose is not connected to the tap. " The pressure is too low. " The START/PAUSE button has not been pressed. " The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). " The free end of the hose is under water (see "Installation").

" The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Technical Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washer-dryer to fill with water and drain continuously. Special antidraining valves are available in shops and help to prevent this inconvenience. " The wash cycle does not include draining: some cycles require the draining process to be enabled manually. " The drum was not unlocked correctly during installation (see "Installation"). " Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The washer-dryer does not fill with water (the text "H2O" on the display). The washer-dryer continuously takes in and drains water.

The washer-dryer does not drain or spin. The washer-dryer vibrates a lot during the spin cycle. the washer-dryer leaks. The "option" and START/PAUSE indicator lights flash rapidly and an error code appears on the display (e. There is too much foam.

" The detergent is not suitable for machine washing (it should display the text "for washer-dryers" or "hand and machine wash", or the like). " Too much detergent was used. " After switching on the machine a control other than Push&Wash+Dry was activated. Switch the machine off and press the Push&Wash+Dry button. " " " The appliance is not plugged into the socket, or not enough to make contact.

There has been a power failure. The appliance door is not shut properly. The washer-dryer does not dry. Service GB Before contacting the Technical Assistance Service: " Check whether you can solve the problem alone (see "Troubleshooting"). " Restart the wash cycle to check whether the problem has been solved. " If this is not the case, contact an authorised Technical Assistance Centre. Always request the assistance of authorised technicians.



[You're reading an excerpt. Click here to read official INDESIT](http://yourpdfguides.com/dref/5834175)

[XWDE 861480X W user guide](http://yourpdfguides.com/dref/5834175)

<http://yourpdfguides.com/dref/5834175>

Have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washer-dryer, and can also be found on the front of the appliance by opening the door.



[You're reading an excerpt. Click here to read official INDESIT
XWDE 861480X W user guide
http://yourpdfguides.com/dref/5834175](http://yourpdfguides.com/dref/5834175)