



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for INDESIT XWE 101484X WSSS FR. You'll find the answers to all your questions on the INDESIT XWE 101484X WSSS FR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual INDESIT XWE 101484X WSSS FR**

**User guide INDESIT XWE 101484X WSSS FR**

**Operating instructions INDESIT XWE 101484X WSSS FR**

**Instructions for use INDESIT XWE 101484X WSSS FR**

**Instruction manual INDESIT XWE 101484X WSSS FR**



[You're reading an excerpt. Click here to read official INDESIT XWE 101484X WSSS FR user guide](http://yourpdfguides.com/dref/5827731)  
<http://yourpdfguides.com/dref/5827731>

### Manual abstract:

Levelling the machine correctly will provide it with stability, help to avoid vibrations and excessive noise and prevent it from shifting while it is operating. If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine. unpacking and levelling

Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. 3. 4. Close off the holes using the plastic plugs provided. 5.

! Packaging materials should not be used as toys for children. levelling 1. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must Connecting the electricity and water supplies Connecting the water inlet hose 1. Connect the supply pipe by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 3. Make sure that the hose is not folded over or bent.

! The water pressure at the tap must fall within the values indicated in the Technical details table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. Use the ones supplied with the machine. not exceed 2°. 16 Connecting the drain hose Connect the drain hose, without bending it, to a drainage duct or a wall drain located at a height between 65 and 100 cm from the floor; ! The cable should not be bent or compressed. ! The power supply cable must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. GB 65 - 100 cm alternatively, rest it on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle "Auto Clean" (see "Cleaning the washing machine").

technical data ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must be within easy reach. 5 cm Capacity from 1 to 8 kg please refer to the technical Electrical connections data plate fixed to the machine maximum pressure 1 MPa (10 bar) Water connections minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 62 litres Spin speed Test wash cycles in accordance with directives 1061/2010 and 1015/2010 up to 1200 rotations per minute Programme 8: Cotton Standard 60°. programme 9: Cotton Standard 40°.

This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU 17 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. □ Unplug the washing machine when cleaning it and during all maintenance work. Cleaning the pump The washing machine is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump.

! Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures). 2. Unscrew the lid by rotating it anticlockwise (see figure): a little water may trickle out.

This is perfectly normal. Cleaning the washing machine • The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. □ The washing machine has a "Auto Clean" programme for its internal parts that must be run with no load in the drum. For maximum performance you may want to use either the detergent (i. e. A quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washing machine. We recommend running a cleaning programme every 40 wash cycles. To start the programme press buttons A and B simultaneously for 5 seconds (see figure). the programme will start automatically and will last approximately 70 minutes.

To stop the cycle press the START/PAUSE button. Screw the lid back on. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the detergent dispenser drawer 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. 18 Precautions and tips !

! Children shall not play with the appliance.

! Do not open the detergent dispenser drawer while the machine is in operation. □ Do not touch the drained water as it may reach extremely high temperatures. • Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening.

□ If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. □ Always keep children well away from the appliance while it is operating.



[You're reading an excerpt. Click here to read official INDESIT XWE 101484X WSSS FR user guide](http://yourpdfguides.com/dref/5827731)  
<http://yourpdfguides.com/dref/5827731>

□ The door can become quite hot during the wash cycle. □ If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.

□ Before loading laundry into the washing machine, make sure the drum is empty. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket. 2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 20 1 3. Remove the cover panel on the lower front part of the washing machine (see figure). 2 3 Disposal • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. □ The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected 4.

Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards and open the door at the same time. 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 19 Description of the washing machine GB

Control panel START/PAUSE button and indicator light ON/OFF button TEMPERATURE button DISPLAY WASH CYCLE Detergent dispenser drawer SELECTOR KNOB PUSH & WASH button SPIN DELAYED START button OPTION buttons button Detergent dispenser drawer: used to dispense detergents and washing additives (see “Detergents and laundry”). ON/OFF button: press this briefly to switch the machine on or off. The START/PAUSE indicator light which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally thset for each wash cycle; these values may be adjusted. The duration of the cycle will appear on the display. Use the relevant buttons: Modify the temperature and/or spin speed. The machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle.

The temperature can be decreased by pressing the button, until the cold wash “OFF” setting is reached. The spin speed may be progressively reduced by pressing the button, until it is completely excluded (the “OFF” setting). If these buttons are pressed again, the maximum values are restored. ! @@ setting a delayed start. @@@@ modify the cycle settings.

@@@ ! @@ ! @@ ! @@@@ Open the door, unload the laundry and switch off the machine. ! @@The cycle will be stopped and the machine will switch off. @@@@The actual washing temperature may differ from the indicated value. @@@@The actual washing temperature may differ from the indicated value. @@@@When pressed the fourth time the 9' icon lights up again.

! It cannot be used in conjunction with wash cycles 1-2t for the best results when washing dark-coloured garments. Anti-odour: use programme 3 for washing garments with bad odours (e. @@@@Delicate: use programme 4 to wash very delicate garments. It is advisable to turn the garments inside out before washing them. For best results, use liquid detergent on delicate garments. @@@@GB 1 3 2 Compartment 1: Pre-wash detergent (powder) Before pouring in the detergent, make sure that extra compartment 4 has been removed. Compartment 2: Washing detergent (powder or liquid) If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. compartment 3: Additives (fabric softeners , etc. ) The fabric softener must not exceed the “max” level indicated on the central pin.

Extra compartment 4: Bleach Bleach cycle Insert the additional compartment 4 (provided) into compartment 1. In pouring the bleach do not exceed the “max” level indicated on the central pin. Perform bleaching by pouring the bleach into additional compartment 4 and set the programme . ! Traditional bleach should be used on resistant white fabrics, and delicate bleach for coloured and synthetics fabrics and for wool. Preparing the laundry • • • Divide the laundry according to: - the type of fabric/the symbol on the label - the colours: separate coloured garments from whites. Empty all garment pockets and check the buttons. Do not exceed the values listed in the “Table of wash cycles”, which refer to the weight of the laundry when dry. 1 sheet 400-500 g 1 pillow case 150-200 g 1 tablecloth 400-500 g 1 bathrobe 900-1. 200 g 1 towel 150-250 g Coloured: use this programme 11 to wash bright coloured clothes. The programme is designed to maintain bright colours over time.

How much does your laundry weigh? 25 GB Cotton Standard 20° (programme 12) ideal for heavily soiled cotton loads. The effective performance levels achieved at cold temperatures, which are comparable to washing at 40°, are guaranteed by a mechanical action which operates at varying speed, with repeated and frequent peaks. Eco Synthetic (programme 13) ideal for mixed loads (cotton and synthetics) with a normal soil level. @@@@The 30' programme is designed to wash lightly soiled garments at 30° (excluding wool and silk) with a 3 kg maximum load in a short time: it only lasts 30 minutes and allows for saving time and energy. The “1h” cycle is designed to wash moderately soiled resistant cotton garments at 60° in an hour, with good washing performance.

For synthetic or mixed garments, we recommend lowering the temperature down to 40°. Load balancing system Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. @@@@Before contacting the Technical Assistance Service (see “Service”), make sure that the problem cannot be solved easily using the following list. gB Problem: The washing machine does not switch on. The wash cycle does not start.

Possible causes / Solutions: • The appliance is not plugged into the socket fully, or not enough to make contact. □ There is no power in the house. The washing machine does not fill • The water inlet hose is not connected to the tap. With water (the text “H2O” on the • The hose is bent. □ The pressure is too low. • The START/PAUSE button has not been pressed.



[You're reading an excerpt. Click here to read official INDESIT XWE 101484X WSSS FR user guide](http://yourpdfguides.com/dref/5827731)  
<http://yourpdfguides.com/dref/5827731>

The washing machine continuously takes in and drains water. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation"). □ The wall drainage system is not fitted with a breather pipe.

If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Technical Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special antidraining valves are available in shops and help to prevent this inconvenience. □ The wash cycle does not include draining: some cycles require the draining process to be enabled manually. □ The drum was not unlocked correctly during installation (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks.

The "option" and START/PAUSE indicator lights flash rapidly and an error code appears on the display (e. There is too much foam. □ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). • Too much detergent was used. □

After switching on the machine a control other than Push & Wash was activated.

Switch the machine off and press the Push & Wash button. • The "Fast Forward" option was activated. Push & Wash does not activate. The programme lasts a lot less than expected. 27 Service GB Before contacting the Technical Assistance Service: • Check whether you can solve the problem alone (see "Troubleshooting").

□ Restart the wash cycle to check whether the problem has been solved. □ If this is not the case, contact an authorised Technical Assistance Centre. Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. .



[You're reading an excerpt. Click here to read official INDESIT XWE 101484X WSSS FR user guide](http://yourpdfguides.com/dref/5827731)  
<http://yourpdfguides.com/dref/5827731>