




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JBL 1500 GTI. You'll find the answers to all your questions on the JBL 1500 GTI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JBL 1500 GTI
User guide JBL 1500 GTI
Operating instructions JBL 1500 GTI
Instructions for use JBL 1500 GTI
Instruction manual JBL 1500 GTI

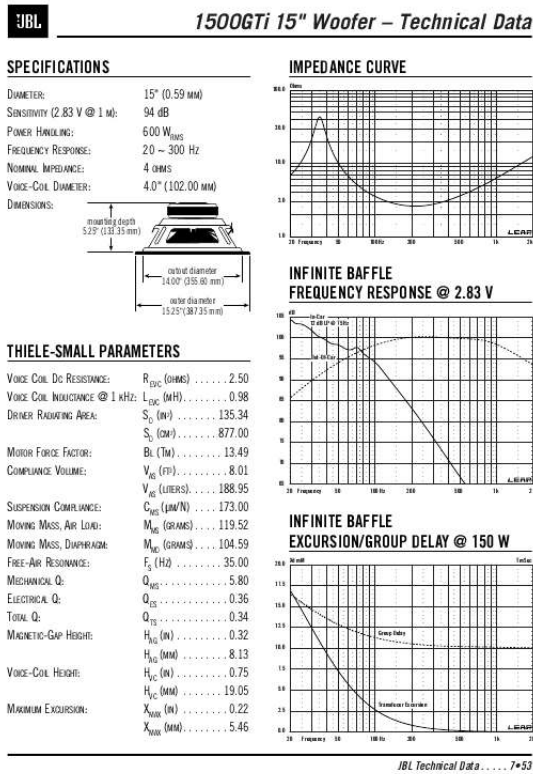

[You're reading an excerpt. Click here to read official JBL 1500 GTI user guide](#)

<http://yourpdfguides.com/dref/3930776>

Manual abstract:

... 2.50 VOICE COIL INDUCTANCE @ 1 KHZ: L EVC (MH)
... 0.98 S D (IN 2) .
.....
. 135.34 DRIVER RADIATING AREA: S D (CM2) 877.
00 BL (TM) 13.49 MOTOR FORCE FACTOR: VAS (FT3).
.....
... 8.01 COMPLIANCE VOLUME: VAS (LITERS).
... 188.95 C MS (μ M/N) 173.
00 SUSPENSION COMPLIANCE: MMS (GRAMS) 119.52 MOVING MASS, AIR LOAD: MMD (GRAMS) 104.
59 MOVING MASS, DIAPHRAGM: FS (HZ)
... 35.00 FREE-AIR RESONANCE: Q MS .
.....
. 5.80 MECHANICAL Q: Q ES
... 0.
36 ELECTRICAL Q: Q TS
... 0.34 TOTAL Q: HAG (IN) . .
..... 0.32 MAGNETIC-GAP HEIGHT: HAG (MM) . .
.....
. 8.13 HVC (IN)
... 0.75 VOICE-COIL HEIGHT: HVC (MM)
..... 19.05 X MAX (IN)
... 0.22 MAXIMUM EXCURSION: X MAX (MM).
.....
.. @@ @@
.....
@@@@ 7:55 .



[You're reading an excerpt. Click here to read official JBL 1500 GTI user guide](http://yourpdfguides.com/dref/3930776)
<http://yourpdfguides.com/dref/3930776>