




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JBL GT5-A402. You'll find the answers to all your questions on the JBL GT5-A402 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JBL GT5-A402
User guide JBL GT5-A402
Operating instructions JBL GT5-A402
Instructions for use JBL GT5-A402
Instruction manual JBL GT5-A402

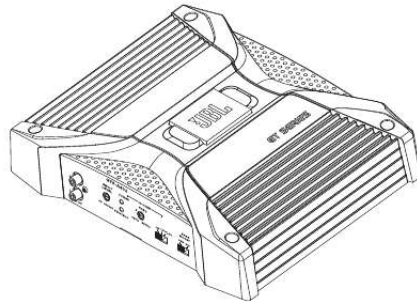

[You're reading an excerpt. Click here to read official JBL GT5-A402 user guide](http://yourpdfguides.com/dref/3930723)
<http://yourpdfguides.com/dref/3930723>

Manual abstract:

@@ · Choose a safe mounting location away from moisture. · Make sure there is sufficient air circulation at the mounting location for the amplifier to cool itself. · Mount the amplifier, using the supplied hardware. Specifications · 40W RMS x 2 @ 4 ohms and 1% THD + N* · 60W RMS x 2 @ 2 ohms, 14.4V supply and 1% THD + N* · 120W RMS x 1 @ 4 ohms, 14.4V supply and 1% THD + N* · Total peak power: 240 watts · Frequency response: 10Hz - 100kHz (3dB)* · Maximum input signal: 6V* · Maximum sensitivity: 200mV* · THD + N: 0.05% · Signal-to-noise ratio: 85dBA (reference 1W into 4 ohms)* · Signal-to-noise ratio: 101dBA (reference rated power into 4 ohms) * CEA-2006A-compliant 0 Speaker Output Connectors · Connect the speakers to these terminals, observing proper polarity. · Two-channel operation: Connect the left speaker to the L+ and L terminals and the right speaker to the R+ and R terminals. · One-channel (bridged) operation: Connect the single speaker to the R+ and L terminals. · Minimum speaker impedance for 2-channel operation is 2 ohms. @@1 Fuse · Replace only with the same type and rating. @@10 AWG wire is recommended. @@Make sure the wire is not damaged or pinched during installation. Install protective grommets when routing wires through the firewall or other sheet metal. · GND: Connect to the vehicle's chassis. Refer to the picture below. Factory Bolt Ring Connector Ground Wire 5 Power On LED · Illuminated when the amplifier is on. @@@@ · See B for the adjustment procedure. 8 Crossover-Filter Selector · LP: Select for subwoofer(s). @@@@9 Bass-Boost Control · Provides 6dB of boost at 50Hz. @@@@D Turn Input-Level control counterclockwise gradually, just until the music sounds clear, once again. E Input level is now adjusted correctly. B Setting the Crossover A Crossover setting for 5" or larger full-range speakers when no subwoofer is included in the system. @@C Crossover setting for subwoofers. @@@@4 Input-Level Control · Used to match the input level of the amplifier to the output level of the source unit. · See A for the adjustment procedure. This product is designed for mobile applications and is not intended for connection to the mains. A valid serial number is required for warranty coverage. Features, specifications and appearance are subject to change without notice. Declaration of Conformity Harman Consumer Group, Inc.

@@All rights reserved. JBL is a trademark of Harman International Industries, Incorporated, registered in the United States and/or other countries. Part No. GT5A402OM 3/08 We, Harman Consumer Group, Inc. @@Château du Loir, France 3/08 www.jbl.com .



[You're reading an excerpt. Click here to read official JBL GT5-A402 user guide](#)

<http://yourpdfguides.com/dref/3930723>