




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JBL GTO 6000. You'll find the answers to all your questions on the JBL GTO 6000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JBL GTO 6000
User guide JBL GTO 6000
Operating instructions JBL GTO 6000
Instructions for use JBL GTO 6000
Instruction manual JBL GTO 6000

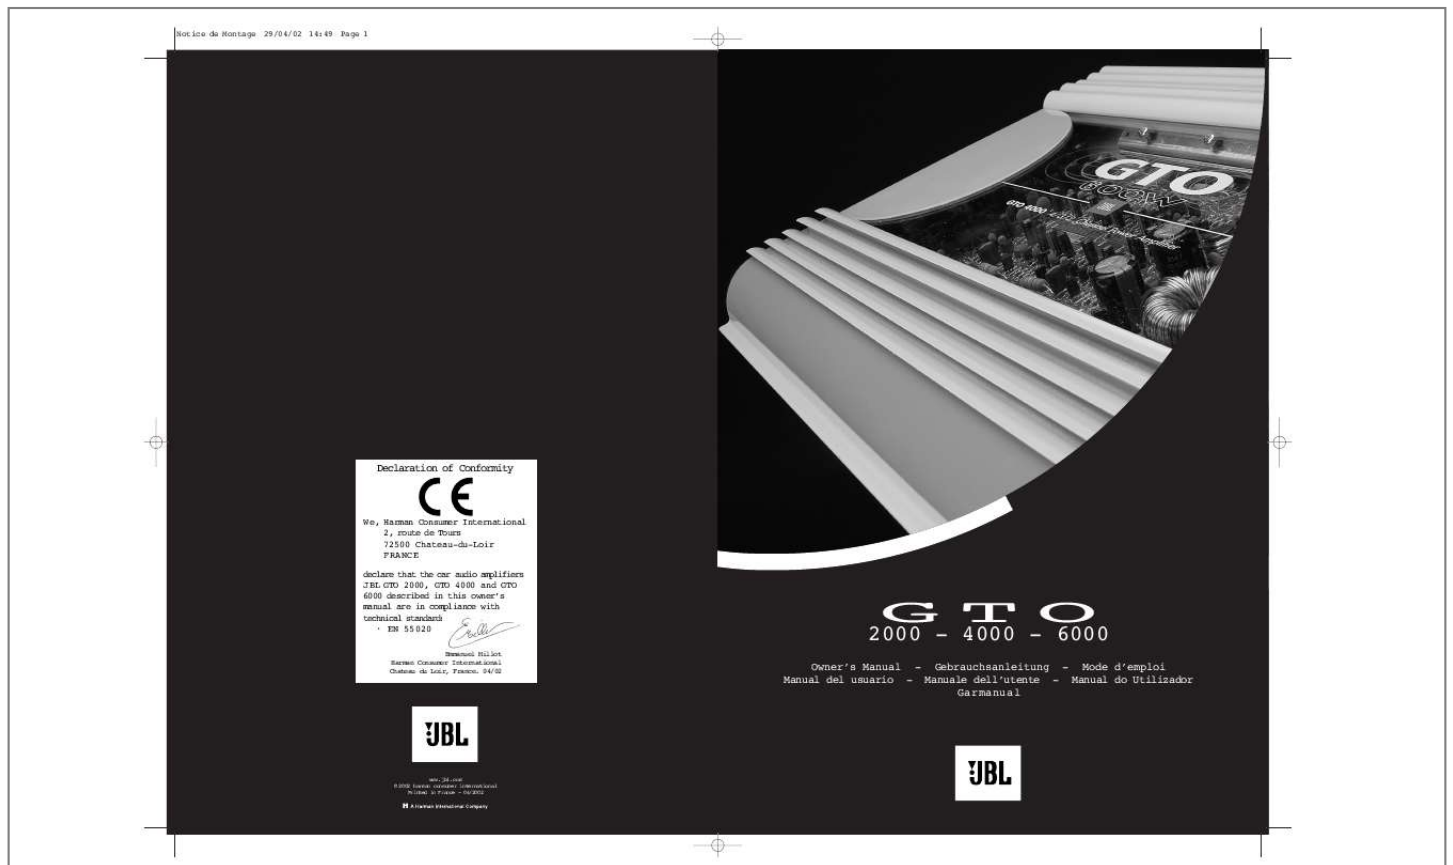

[You're reading an excerpt. Click here to read official JBL GTO 6000 user guide](http://yourpdfguides.com/dref/2168000)
<http://yourpdfguides.com/dref/2168000>

Manual abstract:

Turn off all audio systems and other electrical devices before you start. Disconnect the negative (-) lead from your vehicle's battery. Check clearances on both sides of a planned mounting surface before drilling any holes or installing any screws. Remember that the screws can extend behind the surface. All fuel lines, hydraulic brake lines, vacuum lines and electrical wiring. Use extreme caution when cutting or drilling in and around these areas. Do not substitute another kind. Warning: Playing loud music in an automobile can permanently damage your hearing as well as hinder your ability to hear traffic. We recommend listening at low levels while in your car. JBL accepts no liability for hearing loss, bodily injury or property damage resulting from use or misuse of this

Wiring the Input-Signal Connections Connect a pair of signal cables with RCA-type ends between the connectors on the amplifier and the RCA-type signal connectors on the source unit.

If your radio has only speaker-level outputs, you must purchase a speaker-level-to-line-level adapter, commonly sold as an accessory.

Level of your system. It will also increase the amount of extraneous noise in your system. Mount the amplifier so that it remains dry never mount an amplifier outside the car or in the engine compartment. Using the amplifier as a template, mark the location of the mounting holes on the mounting surface, drill pilot holes and attach the amplifier to the mounting surface with screws.

Use at least 6 mm² wire for power and ground connections. For power, remote and ground connections strip off one end of each jacket to reveal bare wire for insertion into the barrier-strip connectors. Connect a wire Note: Bridging of GTO 6000 between the REM terminal of the + amplifier and the Front R+ L "remote out" or power-antenna lead Rear R+ L on the vehicle's radio. sub R+ L

Wiring the Speaker-Output Connections Connect the speakers, observing proper polarity, to the speaker-output barrier strip. If you are bridging the amplifier, connect the speaker wires to the terminals marked "bridged", observing proper polarity.

HP (4 ohm) If you are running the amp in Tri-Mode (stereo and 75Hz 8.



[You're reading an excerpt. Click here to read official JBL GTO 6000 user guide](http://yourpdfguides.com/dref/2168000)
<http://yourpdfguides.com/dref/2168000>