




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JBL GTO 752. You'll find the answers to all your questions on the JBL GTO 752 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JBL GTO 752
User guide JBL GTO 752
Operating instructions JBL GTO 752
Instructions for use JBL GTO 752
Instruction manual JBL GTO 752

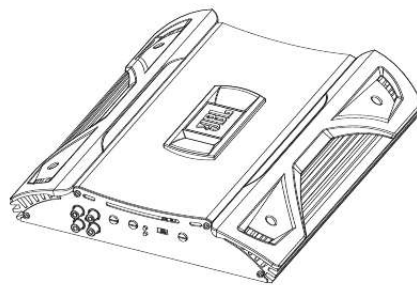

[You're reading an excerpt. Click here to read official JBL GTO 752 user guide](http://yourpdfguides.com/dref/3930688)
<http://yourpdfguides.com/dref/3930688>

Manual abstract:

· Choose a safe mounting location away from moisture. · Mount the amplifier, using the supplied hardware. Specifications · 75W RMS x 2 channels @ 4 ohms and 1% THD + N* · 110W RMS x 2 channels @ 2 ohms and 1% THD + N* · THD + N: 0.07% (rated power @ 4 ohms) · Signal-to-noise ratio: 90dBA (reference 1W into 4 ohms)* · Signal-to-noise ratio: 108dBA (reference rated power into 4 ohms) · Frequency response: 10Hz 100kHz (3dB) · Max power: 220 watts * CEA-2006A-compliant 0 Speaker Output Connectors · Connect the speakers to these terminals, observing proper polarity. · Two-channel operation: Connect the left speaker to the L+ and L terminals and the right speaker to the R+ and R terminals. · One-channel (bridged) operation: Connect the single speaker to the R+ and L terminals. · Minimum speaker impedance for 2-channel operation is 2 ohms. · Fuses · Replace only with the same type and rating. · 10 AWG wire is recommended. · Make sure the wire is not damaged or pinched during installation. Install protective grommets when routing wires through the firewall or other sheet metal. · GND: Connect to the vehicle's chassis. Refer to the picture below. Factory Bolt Ring Connector Ground Wire 7 Crossover-Filter Selector · LPF: Select for subwoofer(s). · Power On LED · Illuminated when the amplifier is on. Input level is now adjusted correctly. C Crossover setting for subwoofers. Note: Acceptable frequency ranges are indicated in gray. Note: Remove any paint below ring connector. Star Washer · REM: Connect to the "Remote Out" lead from the source unit or to a source of switched 12V+ (ACC). 3 Aux Output Connectors (RCA) · Nonfiltered pass-through output. Connect to the input of an additional amplifier. · See B for the adjustment procedure. · See C for the adjustment procedure. This product is designed for mobile applications and is not intended for connection to the mains. A valid serial number is required for warranty coverage. · 250 Crossways Park Drive, Woodbury, NY 11797 www.jbl.com © 2007 Harman International Industries, Incorporated. All rights reserved.

Part No. GTO7520M 8/07 We, Harman Consumer Group, Inc. · Château du Loir, France 8/07 www.jbl.com .



[You're reading an excerpt. Click here to read official JBL GTO 752 user guide](#)

<http://yourpdfguides.com/dref/3930688>