




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-AVX44. You'll find the answers to all your questions on the JVC KD-AVX44 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-AVX44
User guide JVC KD-AVX44
Operating instructions JVC KD-AVX44
Instructions for use JVC KD-AVX44
Instruction manual JVC KD-AVX44

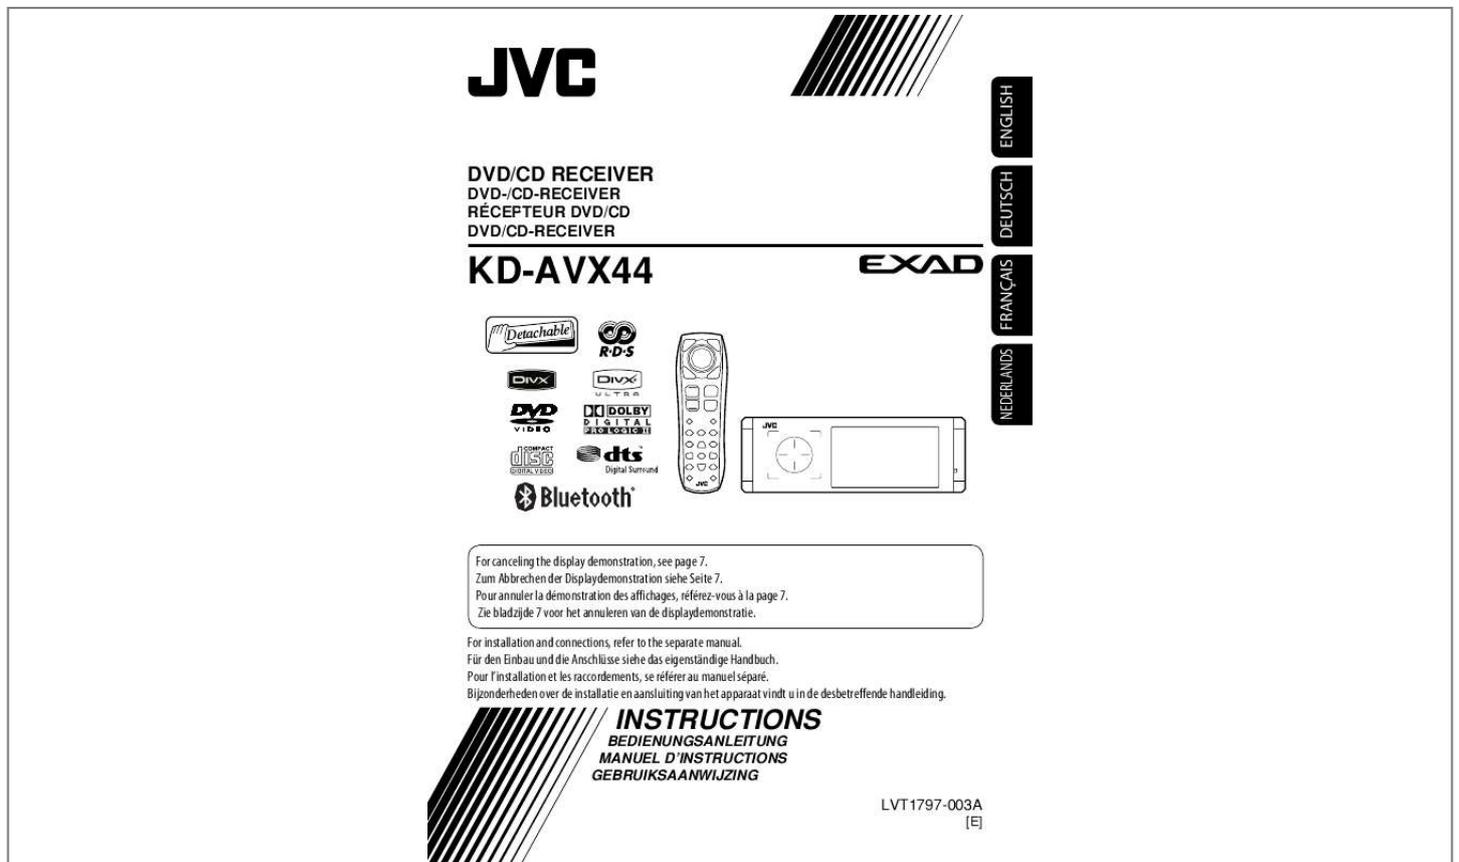

JVC

DVD/CD RECEIVER
DVD-/CD-RECEIVER
RÉCEPTEUR DVD/CD
DVD/CD-RECEIVER

KD-AVX44 **EXAD**

Detachable RDS
DIX ULTRA
DVD VIDEO
DOLBY DIGITAL
DTS Digital Surround
Bluetooth

For canceling the display demonstration, see page 7.
Zum Abbrechen der Displaydemonstration siehe Seite 7.
Pour annuler la démonstration des affichages, référez-vous à la page 7.
Zie bladzijde 7 voor het annuleren van de displaydemonstratie.

For installation and connections, refer to the separate manual.
Für den Einbau und die Anschlüsse siehe das eigenständige Handbuch.
Pour l'installation et les raccordements, se référer au manuel séparé.
Bijzonderheden over de installatie en aansluiting van het apparaat vindt u in de desbetreffende handleiding.

INSTRUCTIONS
BEDIENUNGSANLEITUNG
MANUEL D'INSTRUCTIONS
GEBRUIKSAANWIJZING

LVT1797-003A
[E]

ENGLISH
DEUTSCH
FRANÇAIS
NEDERLANDS



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)
<http://yourpdfguides.com/dref/3663683>

Manual abstract:

CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. This symbol is only valid in the European Union. @@If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. DO NOT install any unit or wire any cable in a location where; it may obstruct the steering wheel and gearshift lever operations. it may obstruct the operation of safety devices such as air bags. If you need to operate the unit while driving, be sure to look around carefully.

The driver must not watch the monitor while driving. The driver must not put on the headphones while driving.

When the temperature is very cold or very hot. Chemical changes occur inside, causing malfunction. Pictures may not appear clearly or may move slowly. Pictures may not be synchronized with the sound or picture quality may decline in such environments. The monitor built in this unit has been produced with high precision, but it may have some ineffective dots.

This is inevitable and is not malfunction. For security reasons, a numbered ID card is provided with this unit, and the same ID number is imprinted on the unit's chassis. Keep the card in a safe place, as it will help the authorities to identify your unit if stolen. How to reset your unit If this does not work, reset the unit. Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.

Stop the car before performing any complicated operations. temperature inside the car. If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit. Patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision.

DivX/MPEG1/MPEG2/JPEG/MP3/WMA/WAV/ MP3/WMA/WAV/AAC*4 AAC: Compliant to ISO 9660 level 1, level 2, MPEG4 Romeo, Joliet DVD+VR DVD-RAM DualDisc DVD side Non-DVD side CD/VCD Audio CD/CD Text (CD-DA)/DTS-CD VCD (Video CD) SVCD (Super Video CD) CD-ROM CD-I (CD-I Ready) CD-DA CD Recordable/Rewritable (CD-R/-RW) MP3/WMA/WAV/AAC*4 · Compliant to ISO 9660 level 1, level 2, Romeo, JPEG Joliet DivX/MPEG1/MPEG2 MPEG4 *1 If you insert a DVD Video disc of an incorrect Region Code, "Region code error" appears on the monitor. *4 This unit can play back AAC files encoded using iTunes. Caution for DualDisc playback The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended. Touch pad controls The lights of the touch pad controls and monitor are turned off when no operation is done for about 10 seconds.

The lights are turned on in the following cases: When you move your hand close to the touch pad controls. * When your finger touches the touch pad controls. When the signal from the rear view camera comes in. The lights are always turned on in the following cases: While <AV Menu> is displayed. How to operate the unit by the touch pad controls You can operate the unit by touching the appropriate part of the touch pad controls. To adjust the volume, move your finger on the touch pad knob as illustrated below to display the animation on the monitor, then press 5 or repeatedly. You can also adjust the volume by just continuing to move your finger on the touch pad knobs as illustrated below. When you slide your finger on the touch pad knob as illustrated below, it functions in the same way as touching 5 / 4 / 6. Operations are explained mainly using the touch pad controls and buttons of the unit; however, the buttons on the remote controller can work in the same way if they have the same names or marks. You can use the menus to set up various settings from <AV Menu>. The lights of the touch pad controls and monitor are turned on. In this manual, English indications are used for purpose of explanation. You can select the indication language on the monitor. You can also select sources by touching 5 / 4 / 6 after holding SRC for entering <Source Menu>. Turns off the power [Hold].

Attenuates the sound (when the power is on). Use only when the internal system malfunctions. r Detaches the control panel (page 9). *1 You cannot select these sources if they are not ready. *2 By holding 5 / , you can display the list accessible for the selected source.

Each time you touch DISP, the display changes to show the various information. This screen is displayed when <Navigation> is selected for <AV Input>. Back to the beginning 9 To tilt the control panel Hold 0 until "Tilt" appears on the monitor then press the button repeatedly. Battery shall not be exposed to excessive heat such as sunshine, fire or the like. The unit is equipped with the steering wheel remote control function. Turns off the power [Hold]. Attenuates the sound (when the power is on). Adjusts the volume level through the 2nd AUDIO OUT plug (while holding SHIFT). You can enter <Dial Menu> by pressing the button then touching 6 on the unit. Enters numbers (while holding SHIFT).

4 / 6: Reverse skip/forward skip Reverse search/forward search [Hold] "Disc," "USB," and "USB iPod": Forward search Selects the source. @ / #: Skips back or forward by 5 minutes for DivX/MPEG1/MPEG2. "Disc" and "USB": Switches the number entry mode (while holding SHIFT). Erases the misentry after entering a wrong number (while holding SHIFT). *1 When Dual Zone is activated, these buttons cannot be used. *2 Functions as a number button only (see 6). Manual Search: Hold either or until "Manual Search" appears on the monitor, then touch it repeatedly. The ST indicator lights up when receiving an FM stereo broadcast with sufficient signal strength. This function works only for FM bands. You can preset six stations for each band.

Local FM stations with the strongest signals are searched and stored automatically in the FM band. 5 MHz into preset number 4 of the FM1 band. For FM: Each time you hold 5 / , you can change the bands. The station selected in step 2 is now stored in preset number 4. The Preset List can also be accessed through <AV Menu> = <List>.

For FM: Each time you hold 5 / , you can change the bands. The Preset List can also be accessed through <AV Menu> = <List>. You can search for your favorite programmes being broadcast by selecting the PTY code for your favorite programmes. Follow steps 1 and 2 in the left column to select a PTY code you want to store.



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)

<http://yourpdfguides.com/dref/3663683>

The frequency changes as search goes on.

If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. Now the selected PTY code is replaced with the new one. The following features are available only for FM RDS stations. You can store your favorite PTY codes into the PTY Preset List. The unit will temporarily switch Lights up to Traffic Announcement (TA), if available, from any source other than AM. The volume changes to the preset TA volume level if the current level is lower than the preset level (page 58). The unit will temporarily switch to your favorite PTY programme from any source other than AM. To deactivate, select <Off> in step 4, then touch 6 once (right column). When a DAB tuner is connected, TA Standby/PTY Standby Reception also works for the DAB tuner. When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM RDS station of the same network, possibly broadcasting the same programme with stronger signals.

Usually when you select preset stations, the preset station is tuned in. If the signals from the FM RDS preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency broadcasting the same programme as the original preset station is broadcasting. (page 58) · The unit takes some time to tune in to another station using Programme Search. When shipped from the factory, Network-Tracking Reception is activated. The disc type is automatically detected, and playback starts automatically (for some discs: automatic start depends on its internal program). If a disc does not have any disc menu, all tracks in it will be played repeatedly until you change the source or eject the disc. If " " appears on the monitor, the unit cannot accept the operation you have tried to do. In some cases, without showing " , " operations will not be accepted. Do not place your finger behind the control panel. Discs and connected USB devices produce very little noise compared with other sources.

Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level. Touch if necessary (page 9). Touch if necessary (page 9). Touch if necessary (page 9). A PBC indicator lights up when PBC is in use.

*3 Tag data will be shown instead of folder/file names when they are recorded and <Tag Display> is set to <On>. You can use Repeat or Random playback mode. When one of the playback modes is selected, the corresponding indicator lights up on the source information screen. Track: Repeats current track (for VCD: PBC not Disc (All): Randomly plays all tracks (for in use). Randomly plays all tracks of current folder, then tracks of next folders.

Folder: Randomly plays all tracks of current folder, then tracks of next folders. If a disc includes folders, you can display the Folder/ Track (File) Lists, then start playback. The Folder List can also be accessed through <AV Menu> = <List>. You can lock a disc in the loading slot. Reverse/forward search (No sound can be heard.) · Slow motion*2 during pause. Forward slow motion*2 during pause. Reverse slow motion does not work. (Slide show: each file is shown for a few seconds.) Shows the current file until you change it if pressed during Slide show.

Forward slow motion*4 during pause. Reverse slow motion does not work. You can enjoy multi-channel surround playback through the front, center, surround speakers. After connecting the center speaker, make sure to activate the center speaker; otherwise, no sound comes out of the center speaker (page 57). You cannot activate this function in the following cases: When "USB iPod" is selected as the source. In step 4 in the left column. Enter each sub-screen then select the desired setting. Center Width: Adjust the center image so it may be heard only from the center speaker, only from the left/right front speaker as a "phantom" center image, or various combination of these speakers. You cannot change the <Dolby PL II Music> settings using the remote controller. These operations are possible on the monitor using the remote controller.

Chapter repeat Title repeat Chapter repeat Program repeat Track repeat Folder repeat Folder random All (disc) random Folder repeat Track repeat All (Disc) random) Title Search (by its number) Chapter Search (by its number) Track Search (by its number) Repeat play*1 Random play*1 Change the audio language, audio channel or audio stream Change the subtitle language Change the view angle You can enjoy disc playback on the external monitor connected to the VIDEO OUT and 2nd AUDIO OUT plugs, while listening to any source other than "USB" through the speakers. When Dual Zone is in use, you can only operate the DVD/CD player using the remote controller. This surround will also work for the main source "Disc" if "On/Surround On" is selected as the sub-source. This surround does not work for DivX/MPEG1/MPEG2 discs. For discs except DVD and VCD: While Dual Zone is on, these operations are possible on the external monitor using the remote controller.

When Dual Zone is activated, the main source five devices can be registered in total. Only one device for Bluetooth phone and one for Bluetooth audio can be connected at a time. To use the Bluetooth function, you need to turn on Bluetooth function of the device. Preparation: Operate the device to turn on its Bluetooth function. This unit supports the following Bluetooth profiles; HFP (Hands-Free Profile) 1.

You can operate Bluetooth devices through the unit as follows: · receiving a call · Making a call--from phone book, from call history (Redial and Received Call), by dialing number, by preset numbers, by voice command · receiving the SMS (Short Message Service) · Playing back a Bluetooth audio player Refer also to the instructions supplied with the Bluetooth device. Other trademarks and trade names are those of their respective owners. Use <Phone Connect> (or activate <Auto Connect>) to connect the same device from next time on. You can enter any number you like (1-digit to 16-digit number). For connecting: Select<Phone Connect>/ <Audio Connect> then go to the next step. Now connection is established and you can use the device through the unit. Turns blue and the following icon appears when the connection is established. Appears when the Bluetooth phone is connected. Appears when the Bluetooth audio player is connected. Appears when the Bluetooth phone and the Bluetooth audio player are connected.

You can set the unit to connect a Bluetooth device automatically when the unit is turned on. (page 62) * When a device has already connected to the unit, <Phone Connect> and <Audio Connect> do not appear and vice versa. Making a call eNGLISH You can make hands-free calls using the unit. The built-in microphone is behind the upper left hand corner of the unit.



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)

<http://yourpdfguides.com/dref/3663683>

The sound comes out from the connected speakers. Displays only when the dialed or received number is made through the unit. **Redial*1** Shows the list of phone numbers you have dialed. = Go to the following step. **Received Calls*1** Shows the list of the received calls. = Go to the following step. **Phonebook*2** Shows the phone book copied from a cellular phone. **Phone Number** Shows the phone number entry screen. = "How to enter a phone number" page 39 **Voice Dialling** (Only when the connected cellular phone has the voice recognition system): Speak the name you want to call. You can also enter <Dial Menu> by pressing on the remote controller then touching 6 on the unit. When a call comes in. The unit answers the incoming calls automatically. (page 62) · When <Auto Answer> is deactivated, press SRC or touch any control to answer the incoming call. To end the call or reject an incoming call Hold SRC or any control. Answering a waiting call If your cellular phone is equipped with the call waiting function, you can put the current call on hold and answer the waiting call. To restore the on-hold call, press SRC or touch any control again. When you end one call, you can connect to the other. When an SMS comes in. If the cellular phone is compatible with SMS (Short Message Service) and <SMS Notify> is set to <On> (page 62), the unit rings and "Receiving Message" appears on the monitor to inform you of the arrival of the message. When the sound is stopped or interrupted during the use of a Bluetooth device, turn off, then turn on the unit. If the sound is not yet restored, connect the device again. ("Connecting/disconnecting a registered device" on page 36) · While talking, you can enter <MIC Setting> to adjust the built-in microphone volume level by touching MENU. How to enter a phone number To copy the phone book You can copy the phone book memory of a cellular phone into the unit. How to delete the phone numbers/names Make sure that the Bluetooth phone is connected. Display the list of phone numbers/names using <Redial>, <Received Calls>, or <Phonebook> in <Dial Menu>. Select the phone number/name you want to delete.

You can enter any number you like (1-digit to 16-digit number). All: Deletes the phone numbers/names listed in step 1. To call a preset number Enter the same PIN code (as entered in the above step) on the cellular phone then transfer the phone book memory to the unit. If you try to copy a 51st phone book entry, "Phonebook Full" appears on the monitor. You can preset up to six phone numbers. Display the phone number you want to preset by using <Redial>, <Received Calls>, <Phonebook>, or <Phone Number>. During a phone call conversation. Then, continue your conversation using the other media. You can use the following buttons on the remote controller for the Bluetooth phone operations. The phone number selected in step 1 is now stored in preset number 5. Using the Bluetooth audio player You can use Repeat or Random playback mode. Group: Randomly plays all tracks of current group/folder, then tracks of next groups/folders. all: Randomly plays all tracks. When one of the playback modes is selected, the corresponding indicator lights up on the source information screen. It may be different from the operation status.

* Appears only when the information comes from the device. When the sound is stopped or interrupted during the use of a Bluetooth device, turn off, then turn on the unit. If the sound is not yet restored, connect the device again. You can use the following buttons on the remote controller for the Bluetooth audio operations. Bluetooth Information: If you wish to receive more information about Bluetooth, visit the following JVC web site: <http://www>. You can connect the iPod using the following cable or adapter: Cable/adaptor To listen to the music USB 2. 0 cable (supplied for the iPod) Interface Adapter for iPod-- KS-PD100 (not supplied) To watch the video USB Audio and Video cable for iPod--KS-U20K (not supplied) To operate "When connected with the USB cable" below. When connected with the USB cable Hold: Reverse/forward search *2 You cannot resume playback for video sources. (page 9) *1 5 / may not function depending on how you select the current track/video. When you connect the iPod to the USB terminal, "USB iPod" is selected as the source and playback starts automatically. When playback modes are selected, the corresponding indicators light up on the source information screen. to cancel , select <Off> in step 4. * You can also activate the playback mode through <Search Mode>. To activate, select <Shuffle Songs> then touch 6 in step 2 on page 42. <Search Mode> can also be accessed through <AV Menu> = <List>.

You can use Repeat or Random playback mode. You can change the play speed of the audiobooks. Follow steps 1 to 3 in the left column. When connected with the interface adapter This mode will be canceled if no operations are done for about 5 seconds. When operating through the CD changer jack, make sure <iPod> is selected for the external input setting. When a track is selected finally, playback starts. To return to the previous menu, touch 5. * * "AudioBooks" is not displayed in step 3. While playing an MP3 disc, you can select and start playing a track in the disc using the Lists: <Disc List> (select the current disc) = <Folder List> = <File List> then start playing a track you want. It is recommended to use a JVC MP3-compatible CD changer with your unit. You can play only CDs (CD-DA) and MP3 discs. Each time you hold the button, you can display the other list of the remaining discs. Each List can also be accessed through <AV Menu> = <List> = <Disc List> = <Folder List> = <File List>. You can use Repeat or Random playback mode. When one of the playback modes is selected, the corresponding indicator lights up on the source information screen.

Randomly plays all tracks of current folder, then tracks of next folders. You can use the following buttons on the remote controller to operate the CD changer. Manual Search: Hold either or until "Manual Search" appears on the display, then touch it repeatedly. * The TEXT indicator lights up while tuning in to an ensemble that supports Dynamic Label Segment (DLS). When surrounding sounds are noisy Some services provide Dynamic Range Control (DRC) signals together with their regular programme signals.

DRC will reinforce the low level sounds to improve your listening. The DRC indicator will light up while tuning in a service with the DRC signals. Search for the service you want to preset. Each time you hold 5 / , you can change the bands. Preset List can also be accessed through <AV Menu> = <List>. Preset List can also be accessed through <AV Menu> = <List>. @@@@To deactivate, select <Off> in step 4, then touch 6 (below).



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)
<http://yourpdfguides.com/dref/3663683>

@@@@@@@@@@ (page 58) To watch the navigation screen, touch DISP repeatedly. @@@@To change the character set, touch DISP. 2 Repeat step 1 until you finish entering the title.

@@You can select the background picture of the monitor. @@@@Tint: "Fixed" appears and you cannot adjust this setting. For other video sources: Aspect ratio is fixed at <Regular>. @@@@ " Not adjustable for audio sources. @@On: Displays the clock time while playing back a video source. off: Cancels. @@@@Refer to the illustrations on the left to see how the pictures are shown on the monitor. Select playback file type when a disc/USB contains different types of files. You can store this setting separately for each source --"Disc" and "USB. This unit has its own Registration Code.

Once you have played back a file with which the Registration Code recorded, this unit's Registration Code is overwritten for copyright protection. Front Lch/Center Ch/Front Rch/Rear Rch/Rear Lch: Adjust the speaker distance from the listening position in the range of 15 cm/6 inches to 600 cm/240 inches in 15 cm/6 inch step; Initial 120 cm/48 inch (for center speaker), 150 cm/60 inch (for other speakers). " (Playback stops when you select one of the items.) *2 This subwoofer level setting takes effect only when surround is activated. Selectable settings, [reference page] You can enjoy a powerful sound at a low volume level while playing Dolby Digital software.

auto: Select to apply the effect to multi-channel encoded software. On: Select to always use this function. You can adjust the speaker size setting. Front speakers and rear speakers cannot be adjusted separately the left and right. No sound comes out of the subwoofer while playing Dolby Pro Logic II Movie or Music if the front speaker is set to <Large>.

No sound comes out of the center speaker when surround is deactivated. You can adjust the output level of the activated speakers (<Speaker Size> above), monitoring the test tone. Front Lch/Center Ch/Front Rch/Rear Rch/Subwoofer*2/Rear Lch: Adjust the output level of each speaker in the range of 10dB to +10dB; Initial 0dB. Hold 6 to turn on and off the test tone. Selectable settings, [reference page] When the received signals from the current station become weak. The programme may differ from the one currently received (AF indicator lights up), [17]. 00 to 30 or 50*1 , Initial 15 , [16]. Off, On, [17] Auto: Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.) Wide: Subject to the interference from adjacent stations, but sound quality will not be degraded and the stereo effect will remain.

Off, On, [49] You can determine the use of LINE IN and VIDEO IN plugs. Off: Select when no component is connected ("AV Input" is skipped while selecting the source). iPod (Off): Select when connecting the iPod using the USB Audio and Video cable for iPod. Camera*4: Select when connecting the rear view camera. For connecting the DAB tuner, this setting is not required. Muting1, Muting2: Select either one which mutes the sounds while using the cellular phone. Proxi/Motion-LCD: Light up when your hand moves close to the controls. Touch Pad: Lights up when your finger Always lights. touches the controls. Touch Pad-LCD: Light up when your finger touches the controls.

Initialize Initialize all settings you have made in <AV Menu>. Not selectable when "AV Input" is selected as the source. the REVERSE GEAR SIGNAL lead connection is required "Installation/Connection Manual. " The rear view through the camera appears on the monitor in "Full" aspect ratio (regardless of the aspect ratio setting) when you shift the gear to the reverse (R) position. Selectable settings, [reference page] You can turn off the touch pad controls and monitor lights while turning on the unit.

Selectable settings, [reference page] Adjust fader--speaker output balance between the front and rear speakers. Downmost--rear only When using a two-speaker system, set the fader to the center (00). Adjust balance--speaker output balance between the left and right speakers. Rightmost--right only Adjust and store auto-adjustment volume level for each source, comparing to the FM volume level. The volume level will automatically increase or decrease when you change the source.

06 to +08; Initial 00 Through: Select when the subwoofer is not connected. 80Hz, 120Hz, 150Hz You can change the maximum volume level of this unit. off: Deactivates the built-in amplifier. Low Power: Select this if the maximum power of the speakers is less than 50 W. When you select <Dolby PLII Music>, you can adjust <Panorama> and <Center Width>. When you activate PTY Standby Reception, you can change the PTY code for PTY Standby Reception. When you activate Announcement Standby Reception, you can change the announcement type for Announcement Standby Reception. This setting takes effect only when surround is deactivated. (also pages 26 and 27) This setting takes effect only when Dual Zone is activated. (also page 30) Selectable only for "Disc" and "USB.

" This setting takes effect only when the center speaker is activated. Establish the connection with the registered device, [36] Phone Disconnect/ Only for the device being connected. Audio Disconnect Disconnect the current device before connecting another device, [36] Delete Pairing Only for the registered devices. delete the registered devices , [37] New Pairing Enter the PIN code to establish the connection , [36] Once the connection is established , it is registered in the unit. You can connect the unit and the device by using <Phone Connect>/ <Audio Connect> (above) from the next time on. Auto Connect When the unit is turned on, the connection is established automatically with. Auto Answer Off: The unit does not answer the calls automatically. Answer the calls manually. On: The unit answers the incoming calls automatically. reject: The unit refuses all incoming calls.

SMS Notify On: The unit informs you of the arrival of a message by ringing and displaying "Receiving Message. " Off: The unit does not inform you of the arrival of a message. Add Phonebook Copy the phone book memory of a cellular phone into the unit. You can register up to 50 phone numbers, [39] MIC Setting Adjust the built-in microphone volume. 01 , 02 , 03 Phone Volume Adjust the phone volume.

00 to 30 or 50*1, Initial 15 Initialize all settings you have made in <Bluetooth>. Information The following information is shown: Name: The unit name Address: The Mac address of the unit Version: The Bluetooth software/hardware versions*2 Phone Device/Audio Device: The connected device names (page 60) *2 If you wish to receive more information about Bluetooth, visit the following JVC web site: <http://www. When operating the Bluetooth device, refer also to the instructions supplied with the device. How to clean the connector frequent detachment will deteriorate the connectors.



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)
<http://yourpdfguides.com/dref/3663683>

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

To keep discs clean A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge. Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc. New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc. To remove these rough spots, rub the edges with a pencil or ball-point pen, etc. Do not use the following discs: Moisture may condense on the lens inside the unit in the following cases: · If it becomes very humid inside the car. Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates. Center holder When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

Do not touch its recording surface. When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up). Make sure to store discs into the cases after use. Transparent or semi-transparent parts on its recording area More about this unit eNGLISH General Turning on the power By pressing SRC (source) on the unit, you can also turn on the power. If you change the source, playback also stops without ejecting the disc. Next time you select "Disc" for the playback source, disc play starts from where it stopped previously. When SSM is over, received stations are preset in No. This unit can recognize a total of 5 000 files and 250 folders (a maximum of 999 files per folder). This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing. This unit can recognize a total 25 characters for file/ folder names.

Some discs or files may not be played back due to their characteristics or recording conditions. In this manual, words "track" and "file" are interchangeably used. This unit can only play back audio CD (CD-DA) files if different type of audio files (MP3/WMA/WAV/AAC) are recorded in the same disc. This unit can display only one-byte characters. No other characters can be correctly displayed.

For details about DVD-VR format and play list, refer to the instructions supplied with the recording equipment. When a disc is inserted upside down or has no playable files, "Cannot play this disc Check the disc" appears on the monitor. This unit can play back DivX files with the extension code <. This unit supports the DivX files whose resolution is 720 x 576 pixels or less. The file encoded in the interlaced scanning mode may not be played back correctly. If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. This unit can play back MPEG1/MPEG2 files with the extension code <. Mod> extension code cannot be played back when stored on a USB mass storage class device. This unit can play back JPEG files with the extension code <. This unit can play back baseline JPEG files. This unit can show ID3 Tag Version 1. This unit can also show WAV/WMA/AAC Tag. This unit can play back files recorded in VBR (variable bit rate). This unit cannot play back the following files: MP3 files encoded with MP3i and MP3 PRO format. MP3 files encoded with Layer 1/2.

WMA files encoded with lossless, professional, and voice format. WMA files which are not based upon Windows Media® Audio. WMA/AAC files copy-protected with DRM. AAC files copy-protected with FairPlay (except those stored on an iPod). If <Surround On> is selected, stereo sounds are emitted only through the front speakers. When "FIX" appears on the source information screen, no sound comes out of the subwoofer. This unit can play back files with the extension code <. This unit can play back the files meeting the conditions below: Bit rate: MP3/WMA: 32 kbps -- 320 kbps AAC: 16 kbps -- 320 kbps Sampling frequency: 48 kHz, 44. If "No USB device" appears after removing a device, reattach a device or select another playback source. When the USB device has no playable files, or has not been formatted correctly, "Cannot play this device Check the device" appears on the monitor.

The unit cannot recognize a USB device whose rating is other than 5 V and exceeds 500 mA. While playing from a USB device, the playback order may differ from other players. This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions. USB devices equipped with special functions such as data security functions cannot be used with the unit. Do not use a USB device with 2 or more partitions.

Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose. When connecting a USB device, refer also to its instructions. Connect only one USB device to the unit at a time. This unit may not recognize a USB device connected through a USB card reader. When connecting with a USB cable, use the USB 2.

This unit may not play back files in a USB device properly when using a USB extension cord. This unit cannot assure proper functions or supply power to all types of the devices. This unit can recognize a total of 5 000 files and 250 folders (a maximum of 999 files per folder). This unit can recognize a total of 25 characters for file/folder names. While driving, do not perform complicated operation such as dialing the numbers, using phone book, etc. When you perform these operations, stop your car in a safe place. Some Bluetooth devices may not be connected to this unit depending on the Bluetooth version of the device. This unit may not work for some Bluetooth devices. Connecting condition may vary depending on circumstances around you. When the unit is turned off, the device is disconnected.

If "Error" appears again, check if the device supports the function you have tried. please Wait. : The unit is preparing to use the Bluetooth function. If the message does not disappear, turn off and turn on the unit, then connect the device again (or reset the unit). These icons indicate the phone type set on the device. Cellular phone Household phone Office General Other than above Notice: When operating an iPod, some operations may not be performed correctly or as intended. In this case, visit the following JVC web site: For the USB connection: <http://www. Html> For the USB connection: When <iPod Artwork> is set to <On>: Do not press any keys during the first 30 seconds or more of playing back any track containing artwork*. It takes 30 seconds or more to display artwork and no operations are available while loading it.



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)
<http://yourpdfguides.com/dref/3663683>

** The picture displayed on the iPod's screen while playing back a track.*

*You can control the following types of iPods: Through the USB 2. iPod video (5th Generation) * To watch the video, connect the iPod using USB Audio and Video cable (not supplied). If the iPod does not play correctly, update your iPod software to the latest version. For details about updating your iPod, visit http://www. When you turn on this unit, the iPod is charged through the unit.*

While the iPod is connected, all operations from the iPod are disable. This unit can display up to 40 characters when using the interface adapter and up to 128 characters when using the USB 2. Only the primary DAB service can be preset even when you store a secondary service. If you change the <Amplifier Gain> setting from <High Power> to <Low Power> while the volume level is set higher than "30," the unit automatically changes the volume level to "VOL 30." · After you change any of <Menu Language/Audio Language/Subtitle> settings, turn off then on the power, and re-insert the disc (or insert another disc) so that your setting takes effect.

When you select <16:9> for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width. Even if <4:3 Pan Scan> is selected, the screen size may become <4:3 Letterbox> for some discs. About sounds reproduced through the rear terminals · speaker out/analog discrete output--LINE OUT (FRONT/REAR)/CENTER OUT/SUBWOOFER OUT: Multi-channel signals are emitted for a multichannel encoded software. (When Dual Zone is activated, the same signal emitted through 2nd AUDIO OUT plugs are emitted for the main source "Disc. When playing a multichannel encoded disc, multi-channel signals are downmixed. Characters you can enter for titles In addition to the roman alphabet (A Z, a z), you can use the following characters to assign titles. @@@@ Check the following points before calling a service center. symptoms · No sound comes out of the center speaker. remedies/Causes · Center speaker is not activated. @@ Center speaker is used only for surround playback.

No sound comes out for stereo playback. Sunshine from the windscreen may cause this symptom. The unit does not work at all. The touch pad controls do not respond properly. Disc can be neither recognized nor played. Recordable/Rewritable discs cannot be played back. Keep your hands and controls clean and dry. Eliminate static electricity and do not place magnetic items near the unit. Leave the unit until the temperature becomes stable in the car. A rubber mat on the floor may cause this symptom.

In this case, do not use the rubber mat. Finalize the discs with the component which you used for recording. The playback picture is not clear and legible. Sound and pictures are sometimes interrupted or distorted. Disc cannot be played back.

Stop playback while driving on rough roads. Parking brake lead is not connected properly. Record the tracks using a compliant application in the appropriate discs. The track played back is not a playable file format. skip to another file.

Playback order may differ from the one played back using other players. This sometimes occurs during playback. This is caused by how the tracks are recorded. Tracks are not played back as you have intended them to play. Elapsed playing time is not correct. The track played back is not a playable file format (MP3/WMA/WAV/AAC). Tracks cannot play back as you have intended Playback order may differ from the one played back using them to play. Correct characters are not displayed (e. While playing a track, sound is sometimes interrupted. Do not use too many hierarchy, folders and empty folders.

*** Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA/WAV/AAC track. Turn off the power then on again. Do not pull out or connect the USB device repeatedly while "Now Reading. The tracks have not been properly copied into the USB device. Copy tracks again into the USB device, and try again. The unit does not make pairing with the · Enter the same PIN code for both the unit and target Bluetooth device. device. If the PIN code of the device is not indicated on its manuals, try "0000" or "1234. Reduce the distance between the unit and the Bluetooth cellular phone. Move the car to place where you can get a better signal reception.*

The sound is interrupted or skipped while · Reduce the distance between the unit and the Bluetooth using a Bluetooth audio player. Turn off, then turn on the unit. (When the sound is not yet restored,) connect the device again. The connected audio player cannot be Check whether the connected audio player supports AVRCP controlled. (Audio/Video Remote Control Profile).

The unit does not response when you tried to You may have tried to copy the same entries (as stored) to copy the phone book to the unit. Connect this unit and the Bluetooth audio player correctly. "No Voice Device" appears on the monitor. The connected cellular phone does not have the voice recognition system. The iPod does not turn on or does not work.

The iPod's controls do not work after disconnecting from this unit. No operations are available while playing back a track containing artwork. Deactivate the equalizer either on this unit or the iPod. check the connecting cable and its connection. The headphones are disconnected during playback. Disconnect the adapter from both this unit and iPod. Then, connect them again. Check the connection between the adapter and this unit. reset the iPod. Check whether the connected iPod is compatible with this unit.

Connect this unit and the DAB tuner correctly, then reset the unit. (page 3) The DAB tuner does not work at all. Connect this unit and the DAB tuner correctly, then reset the unit. Turn on the video component if it is not on. This unit is not connected to the video component correctly. connect it correctly. The playback picture is not clear and legible. Maximum Power Output: Front/Rear: Continuous Power Output Front/Rear: (RMS): Load Impedance: Equalizer Control Range: 50 W per channel 20 W per channel into 4 , 40 Hz to 20 000 Hz at no more than 0. Design and specifications are subject to change without notice. Track : 6 / 14 Cloudy Fair Fog Hail Indian summer Rain Shower Snow Thunder Typhoon Wind Winter sky Title JVC DVD World 2008 Music Festival children 001 children 002 Track : 6 / 14 Cloudy Fair Fog Hail Indian summer Rain Shower Snow Thunder Typhoon Wind Winter sky Title JVC DVD World 2008 Music Festival children 001 children 002 Front Lch/Center Ch/Front Rch/Rear Rch/Rear Lch: Ajustez la distance de l'enceinte à la position d'écoute dans une plage de 15 cm/6 pouces à 600 cm/240 pouces par pas de 15-cm/6 pouces; réglage initial 120 cm/48 inch (pour l'enceinte centrale), 150 cm/ 60 inch (pour les autres enceintes).



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](http://yourpdfguides.com/dref/3663683)
<http://yourpdfguides.com/dref/3663683>

DivX/MPEG1/MPEG2/JPEG/MP3/WMA/WAV/ 4 AAC: In overeenstemming met ISO 9660 level MP3/WMA/WAV/AAC MPEG4 1, level 2, Romeo, Joliet DVD+VR DVD-RAM Dual-disc DVD-kant Niet-DVD-kant CD/VCD Audio-CD/CD-tekst (CD-DA)/DTS-CD VCD (Video-CD) SVCD (Super Video CD) CD-ROM CD-I (CD-I Ready) CD-DA MP3/WMA/WAV/AAC*4 JPEG DivX/MPEG1/MPEG2 MPEG4 In overeenstemming met ISO 9660 level 1, level 2, Romeo, Joliet Herhalen van hoofdstuk Herhalen van titel Herhalen van hoofdstuk Herhalen van programma Herhalen van fragment Herhalen van map Map willekeurig Alles (Disc) willekeurig Herhalen van map Herhalen van fragment Alles (Disc) willekeurig Track : 6 / 14 Cloudy Fair Fog Hail Indian summer Rain Shower Snow Thunder Typhoon Wind Winter sky ORIGINAL PROGRAM No 1 2 3 4 5 6 Date 25/04/08 17/05/08 22/05/08 26/05/08 20/06/08 25/06/08 Ch 4ch 8ch 8ch L-1 4ch L-1 Time 19:00 10:30 17:00 13:19 22:00 8:23 Title JVC DVD World 2008 Music Festival children 001 children 002 Having TROUBLE with operation? Dear Customer, This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety. .*



[You're reading an excerpt. Click here to read official JVC KD-AVX44 user guide](#)
<http://yourpdfguides.com/dref/3663683>