



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-DB42. You'll find the answers to all your questions on the JVC KD-DB42 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-DB42  
User guide JVC KD-DB42  
Operating instructions JVC KD-DB42  
Instructions for use JVC KD-DB42  
Instruction manual JVC KD-DB42

# JVC



ENGLISH

FRANÇAIS

DEUTSCH

## KD-DB52/KD-DB42

CD RECEIVER / RÉCEPTEUR CD / CD-RECEIVER



For canceling the display demonstration, see page 4. /  
Pour annuler la démonstration des affichages, référez-vous à la page 4. /  
Zum Abbrechen der Displaydemonstration siehe Seite 4.

For installation and connections, refer to the separate manual.  
Pour l'installation et les raccordements, se référer au manuel séparé.  
Für den Einbau und die Anschlüsse siehe das eigenständige Handbuch.



LVT2221-001B  
(E)



[You're reading an excerpt. Click here to read official JVC KD-DB42 user guide](http://yourpdfguides.com/dref/4539203)  
<http://yourpdfguides.com/dref/4539203>

**Manual abstract:**

@@CAUTION: Do not open the top cover. @@ 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. Warning: Stop the car before operating the unit. . @@If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead. Adjust the volume so that you can hear sounds outside the car.

Driving with the volume too high may cause an accident. Avoid using the USB device or iPod/iPhone if it might hinder driving safety. Caution on volume setting: Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by the sudden increase of the output level. Temperature inside the car: If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Condensation: When the car is air-conditioned, moisture may collect on the laser lens. This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate. JVC bears no responsibility for any loss of data in iPod/iPhone and/or USB mass storage class device while using this system.

How to reset your unit Your preset adjustments will also be erased.

how to forcibly eject a disc (Hold) . 0 0 Be careful not to drop the disc when it ejects. If this does not work, reset your unit. Maintenance Cleaning the unit Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the unit. How to read this manual: This manual mainly explains operations using the buttons on the control panel. 0 < > indicates the displays on the control panel. 0 Cleaning the connector Wipe off dirt on the connector of the unit and panel. use a cotton swab or cloth. ENGLISH 3 Preparation Preparation Canceling the display demonstration The display demonstration is always turned on unless you cancel it.

1 . Turn on the power. Setting the clock 1 5 (Hold) (Initial setting) Adjust the minute. Basic operations Control panel Control dial Display window Loading slot Ejects the disc Basic operations Remote controller (KD-DB52 only) Detaches the panel Remote sensor DO NOT expose to bright sunlight. . @@0 Press the button again to cancel attenuating or resume playback. 0 Selects the preset sound mode. @@@@ (Hold) "M" flashes, then press the button repeatedly. @@ Storing stations in memory Manual presetting (FM/AM) You can preset up to 18 stations for FM and 6 stations for AM. Auto presetting (FM only) SSM (Strong-station Sequential Memory) You can preset up to 18 stations for FM.

b<TUNER> B<MONO> B<MONO ON> 0 Reception improves , but stereo effect will be lost. To restore the stereo effect, repeat the same procedure to select <MONO OFF>. When all the stations are stored, "SSM" stops flashing. to preset <SSM 07 – 12>/<SSM 13 – 18> , repeat steps 1 and 2. (for non-Radio Data System station) Frequency 1 Clock (for FM Radio Data System station) Station name (PS) B Frequency B Programme type (PTY) B Clock B (back to the beginning) 6 1 ENGLISH .

. Listening to the radio The following features are available only for FM Radio Data System stations. It will be applied the next time the unit switches to Traffic Announcement or News. If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station PTY codes of the same network, possibly broadcasting the 1 1 AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, 1 NEWS, same programme with stronger signals. Activating TA/News Standby Reception Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) or NEWS programme from any source other than AM. b<TUNER> B<AF-REG> Switches to another station. The programme may differ from the one currently received (the AF indicator lights up). Switches to another station broadcasting the same programme (the AF and REG indicators light up). Tune in to another station providing the Radio Data System signals. Automatic station selection— Programme Search When the signal of a preset station you have selected is weak, this unit searches for another station possibly broadcasting the same programme as the original preset station is broadcasting. @@@@ a Select <DAB>. \* Usable only when switching from other sources. (Hold) "M" flashes, then press the button repeatedly. The preset number flashes and "MEMORY" appears.

1 or 2 0 Skip this step if not many services are available. @@ changing the display information 2 . @@ cancels. @@@@The unit is on standby for the target PTY. @@ 0 To deactivate , select <OFF> in step 2. @@@@If the ejected disc is not removed within 15 seconds, it will automatically reload into the loading slot. 0 If the disc cannot be ejected, A page 3. Randomly plays all tracks of current folder, then tracks of next folders. 0 For MP3/WMA/AAC If the disc contains many folders or tracks, you can fast search for desired folder or track by turning the control dial quickly. /Clock time B Album title/Artist\* B Track title\* B (back to the beginning) \* "NO NAME" appears for conventional CDs or if not recorded.

0 cable (accessory of the iPod/iPhone) The source changes to "USB" and playback starts. This unit can play MP3/WMA/AAC files stored in a USB mass storage device (such as a USB memory, Digital Audio Player, etc. ). You can operate the USB device in the same way you operate the files on a disc. (A page 10) Cautions 0 0 0 0 0 Make sure all important data has been backed up.

Do not pull out and attach the USB device repeatedly while "READING" is shown on the display. Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then reset this unit and the USB device. Do not leave a USB device in the car, expose to direct sunlight, or high temperature. Failure to do so may result in deformation or cause damages to the device.

For more details about USB operation, A page 21. iPod/iPhone that can be connected to this unit: - iPod touch (4th generation) - iPod touch (3rd generation) - iPod touch (2nd generation) - iPod touch (1st generation) - iPod classic - iPod with video (5th generation)\* - iPod nano (6th generation) - iPod nano (5th generation) - iPod nano (4th generation) - iPod nano (3rd generation) - iPod nano (2nd generation) - iPod nano (1st generation)\* - iPhone 4 - iPhone 3GS - iPhone 3G - iPhone \*<IPOD MODE/EXT MODE> are not applicable.



**You're reading an excerpt. Click here to read official JVC KD-DB42 user guide**  
<http://yourpdfguides.com/dref/4539203>

0 It is not possible to browse video files on the "Videos" menu in <HEAD MODE>. 0 The song order displayed on the selection menu of this unit may differ from that of the iPod. 0 When operating an iPod/iPhone, some operations may not be performed correctly or as intended. In this case, visit the following JVC website: <<http://www.english.jvc.com>> 11 Listening to an iPod/iPhone (KD-DB52 only) Selecting the control terminal —IPOD SWITCH (Hold) h<HEAD MODE/IPOD MODE/EXT MODE> HEAD MODE Controls iPod playback through this unit. IPOD MODE EXT MODE Controls iPod playback from the iPod/iPhone. Allows any audio signals from iPod/iPhone. The display always shows "EXT MODE".

. @@@@ Functions the same as "Repeat One" of the iPod. Functions the same as "Repeat All" of the iPod. Functions the same as "Shuffle Songs" of the iPod. Functions the same as "Shuffle Albums" of the iPod. Cancels random playback. @@ ALBUM RND" is not applicable for some iPod/iPhone. @@@@ @@@@ . @@@@ 3 Turn on the connected component and start playing the source. 4 Turn on the connected component and start playing the source.

. @@ . @@ all zone . @@@@ @@@@ @@@@ DISP ZONE 0 Your adjustment is automatically stored to &ldw 120Hz: Audio signals with frequencies lower than 55 Hz/85 Hz/120 Hz are sent to the subwoofer. Low frequency signals are cut off from the front/rear speakers.

[OFF]: Deactivates. (All signals are sent to the front/rear speakers. ) [ON]/OFF: Activates or deactivates the keypress tone. @@ [OFF]: Cancels.

@@@@ This adjustment will not affect the subwoofer output.

@@@@ (Displayed only when the source is "FM"). (Displayed only when the source is "FM"). (Displayed only when the source is "FM". ) [AUTO]: Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost. @@ (Displayed only when the source is "DAB"). @@ Select when using the DAB aerial with the booster. OFF: Select when using the DAB aerial without the booster. [OFF]: Cancels. PTY codes: Activates PTY Standby Reception with one of the PTY codes.

(Displayed only when the source is "DAB". ) (A page 9) Displays the version number of DAB software. (Displayed only when the source is "DAB". ) [HEAD MODE]/IPOD MODE/EXT MODE: For settings , A page 12. (Displayed only when the source is "USB-IPOD". @@ The source name will be changed to "BT AUDIO". SRC SELECT TUNER \*9 Only for FM Radio Data System stations. @@@@ @@@@ warning: 0 0 Insulation sheet . @@@@ @@@@ Store the battery in places out of reach of children. @@ Do not place the battery with other metallic materials.

Do not poke the battery with tweezers or similar tools. Insulate the batterPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. @@ Please note that the use of this accessory with iPod, or iPhone may affect wireless performance. ENGLISH 21 Troubleshooting Troubleshooting General Symptom Sound cannot be heard from the speakers. MISWIRING CHK WIRING THEN RESET UNIT" appears on the display and no operations can be done.

The unit does not work at all. "F-AUX" or "R-AUX" cannot be selected. Sound is sometimes interrupted while listening to an external component connected to the auxiliary input jack. The correct characters are not displayed (e. Remedy/Cause Adjust the volume to the optimum level.

check the cords and connections. Check to be sure the terminals of the speaker leads are covered with insulating tape properly, then reset the unit. (A page 3)

If the message does not disappear, consult your JVC car audio dealer or a company supplying kits. @@@@ Static noise while listening to the radio. Disc playback Symptom Remedy/Cause Disc cannot be played back. insert the disc correctly. @@ Which you used for recording). 0 Stop playback while driving on rough roads. Disc sound is sometimes interrupted. The disc cannot be ejected properly.

Make sure nothing is blocking the loading slot. @@ READING" keeps flashing on the display. Tracks do not play back in the order you have intended them to play. The elapsed playing time is not correct. Remedy/Cause Record the tracks using a compliant application on the appropriate discs. (A page 20) 0 Add appropriate file extensions to the file names. A longer readout time is required. Do not use too many hierarchical levels and folders. The playback order is determined when the files are recorded. 0 This sometimes occurs during playback.

This is caused by how the tracks are recorded on the disc. Remedy/Cause A longer readout time is required. Do not use too many hierarchical levels and folders. 0 Turn off the power then on again. 0 USB device playback Symptom "READING" keeps flashing on the display.

NOT SUPPORT" appears on the display and track skips. Tracks/folders are not played back The playback order is determined by the file name. Folders with in the order you have intended. Names beginning with numbers are sorted in numerical order. Folders with names not beginning with numbers are sorted according to the file system of the USB device.

0 "CANNOT PLAY" flashes or "NO 0 Check whether the connected USB device is compatible with USB" appears on the display. this unit. 0 The unit cannot detect the USB 0 Reattach the USB device again. device. While playing a track, sound is The tracks have not been properly copied into the USB device. sometimes interrupted. Copy tracks again into the USB device, and try again. iPod/iPhone playback (KD-DB52 only) Symptom Remedy/Cause The iPod does not turn on or does 0 Check the connecting cable and its connection. If this does not work. Not solve the problem, reset the iPod/iPhone.

0 Turn off the power and then turn it on again. @@@@ 0 Charge the battery of the iPod/iPhone. Deactivate the equalizer either on this unit or the iPod/iPhone. noise is generated. Turn off (uncheck) the "VoiceOver" feature of the iPod. For details, visit <[Remplacez-la uniquement avec le même type de pile ou un type équivalent. Uniquement pour KD-DB52 : 0 "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.](http://www. The headphones are disconnected during playback. restart the playback operation. @@ this unit. @@ iPod/iPhone qui peuvent être raccordés à cet appareil : - iPod touch (4e Génération) - iPod touch (3e Génération) - iPod touch (2e Génération) - iPod touch (1e Génération) - iPod classic - iPod avec vidéo (5e Génération)* - iPod nano (6e Génération) - iPod nano (5e Génération) - iPod nano (4e Génération) - iPod nano (3e Génération) - iPod nano (2e Génération) - iPod nano (1e Génération)* - iPhone 4 - iPhone 3GS - iPhone 3G - iPhone *<IPOD MODE/EXT MODE> ne sont pas applicables.</p></div><div data-bbox=)



[You're reading an excerpt. Click here to read official JVC KD-DB42 user guide](http://yourpdfguides.com/dref/4539203)

<http://yourpdfguides.com/dref/4539203>

*@@Please note that the use of this accessory with iPod, or iPhone may affect wireless performance. Nur für KD-DB52: 0 "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. @@Please note that the use of this accessory with iPod, or iPhone may affect wireless performance. Having TROUBLE with operation? Please reset your unit Refer to page of How to reset your unit Vous avez des PROBLÈMES de fonctionnement? .*



[You're reading an excerpt. Click here to read official JVC KD-DB42 user guide](#)

<http://yourpdfguides.com/dref/4539203>