



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R321. You'll find the answers to all your questions on the JVC KD-R321 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R321  
User guide JVC KD-R321  
Operating instructions JVC KD-R321  
Instructions for use JVC KD-R321  
Instruction manual JVC KD-R321

**Having TROUBLE with operation?**  
Please reset your unit  
Refer to page of How to reset your unit

**Vous avez des PROBLÈMES de fonctionnement?**  
Réinitialisez votre appareil  
Référez-vous à la page intitulée Comment réinitialiser votre appareil

---

Dear Customer,  
This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:  
JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Germany

Cher(e) client(e),  
Cet appareil est conforme aux directives et normes européennes en vigueur concernant la compatibilité électromagnétique et à la sécurité électrique.

Représentant européen de la société Victor Company of Japan, Limited:  
JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Allemagne

ENGLISH  
FRANÇAIS

---

**KD-R322/KD-R321**  
CD RECEIVER / RÉCEPTEUR CD

---

**Detachable** **COMPACT DISC DIGITAL AUDIO TEXT** **WMA MP3 Radio Data System**

For canceling the display demonstration, see page 4. / Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual. / Pour l'installation et les raccordements, se référer au manuel séparé.

---

**JVC**

EN, FR  
© 2010 Victor Company of Japan, Limited

0910DTSMDTJEIN

**INSTRUCTIONS**  
MANUEL D'INSTRUCTIONS

GET0678-003A  
[E/EU]



[You're reading an excerpt. Click here to read official JVC KD-R321 user guide](http://yourpdfguides.com/dref/3940773)  
<http://yourpdfguides.com/dref/3940773>

**Manual abstract:**

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel. 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident. [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health.

@@Discs produce very little noise compared with other sources. @@@@Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended. @@ â· If this does not work, reset your unit. @@This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate.

@@@About discs Canceling the display demonstration Setting the clock Basic operations Listening to the radio Listening to a disc Connecting the other external components Listening to the other external components Selecting a preset sound mode Menu operations Troubleshooting Using Bluetooth ® devices Specifications This unit can only play the CDs with: Discs that cannot be used: Â· Discs with coloring on the recording surface or discs that are dirty. â· You cannot play a Recordable/ReWritable disc that has not been finalized. (For the finalization process refer to your disc writing software, and your disc recorder instruction manual. Attempt to insert using an adapter can cause malfunction. On the disc, or use a disc with tape stuck on it.

â· Do not use any accessories for the disc. â· Clean from the center of the disc and move outward. â· Clean the disc with a dry silicon or soft cloth. Do not use any solvents. â· When removing discs from this unit, pull them out horizontally. â· Remove the rims from the center hole and disc edge before inserting a disc. Display demonstration will be activated automatically if no operation is done for about 20 seconds. Detaches the panel When you press or hold the following button(s). Stores the current station into the selected number button [Hold]. number buttons (1 Â 6) Â· Press number button 1 (RPT) or 2 (RND) to enter REPEAT/RANDOM setting directly.

@@@@@ NEWS Standby Reception allows the unit to switch temporarily to your NEWS programme from any source other than AM. Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals. If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. Programme Search Usually when you select a preset number, the station preset in that number is tuned in. If the signals from the FM Radio Data System preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency possibly broadcasting the same programme as the original preset station is broadcasting. TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM. All tracks will be played repeatedly until you change the source or eject the disc. If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot. @@ You can use only one of the following playback modes at a time. @@ Then, perform step 3.

@@@@@\* "BT PHONE" appears when a Bluetooth phone is in use. @@@@ You can select a preset sound mode suitable for the music genre. @@@@@@ / OFF : Cancels. @@The volume level will automatically increase or decrease when you change the source. Before adjustment, select the source you want to adjust.

LOW 55Hz / LOW 85Hz / LOW 120Hz : Frequencies lower than 55 Hz/85 Hz/120 Hz are sent to the subwoofer. ON : Mutes the sounds while using the cellular phone (not connected through KS-BTA100). ") This setting may not work correctly on some vehicles (particularly on those having a control dial for dimming). @@@@@@ ) / HIGH POWER : VOLUME 00 Â VOLUME 50 See page 6. @@ (The AF indicator lights up.

@@@@@\*8 The volume level automatically changes to "VOLUME 30" if you change to <LOW POWER> with the volume level set higher than "VOLUME 30. \*11 Displayed only when any source other than "AM/ F-AUX/ R-AUX/ BT AUDIO" is selected separately. \*12 When <BT ADAPTER> is selected, source name is changed to "BT AUDIO" from "R-AUX. This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing. â· This unit can play back files with the extension code <. This unit can play back the files meeting the conditions below: Â Bit rate: MP3/WMA: 8 kbps -- 320 kbps Â Sampling frequency: MP3: 48 kHz, 44. This unit can show WMA Tag and ID3 Tag Version 1. The search function works but search speed is not constant. 12 ENGLISH Â· The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters--<. This unit can play back files recorded in VBR (variable bit rate).

@@@@@ Symptom Sound cannot be heard from the speakers. Make sure the unit is not muted/paused. @@@@@@ Stop playback while driving on rough roads. Make sure nothing is blocking the loading slot. â· Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet. Do not use too many hierarchical levels and folders. The playback order is determined when the files are recorded. This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. This unit can only display letters (upper case), numbers, and a limited number of symbols.

The unit does not work at all. "F-AUX" or "R-AUX" cannot be selected. Sound is sometimes interrupted while listening to an external component connected to the auxiliary input jack. Disc cannot be played back. CD-R/CD-RW cannot be played back and track cannot be skipped.

Disc sound is sometimes interrupted. Disc cannot be played back. Tracks do not play back in the order you have intended them to play. The elapsed playing time is not correct. The correct characters are not displayed (e. Operations may be different according to the connected device.



[You're reading an excerpt. Click here to read official JVC KD-R321 user guide](http://yourpdfguides.com/dref/3940773)  
<http://yourpdfguides.com/dref/3940773>

*Using the Bluetooth mobile phone (Low) (High) Adjusting the microphone volume Volume level: High/ Normal (initial)/ Low Â· Receiving a call When a call comes in. â· Making a call Making a call to the last connected number f.*



[You're reading an excerpt. Click here to read official JVC KD-R321 user guide](#)

<http://yourpdfguides.com/dref/3940773>