





# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R331. You'll find the answers to all your questions on the JVC KD-R331 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R331  
User guide JVC KD-R331  
Operating instructions JVC KD-R331  
Instructions for use JVC KD-R331  
Instruction manual JVC KD-R331





## KD-R332/KD-R331

 
CD RECEIVER / RÉCEPTEUR CD

**Having TROUBLE with operation?**  
Please reset your unit  
Refer to page of How to reset your unit

**Vous avez des PROBLÈMES de fonctionnement?**  
Réinitialisez votre appareil  
Référez-vous à la page intitulée Comment réinitialiser votre appareil




**WMA MP3 Radio Data System**



For canceling the display demonstration, see page 4. / Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual. / Pour l'installation et les raccordements, se référer au manuel séparé.



## INSTRUCTIONS

MANUEL D'INSTRUCTIONS

EN, FR  
© 2011 JVC KENWOOD Corporation

0811DTSMJTJEIN

GET0758-003A  
[E/EU]



[You're reading an excerpt. Click here to read official JVC KD-R331 user guide](http://yourpdfguides.com/dref/4539199)  
<http://yourpdfguides.com/dref/4539199>

**Manual abstract:**

/ Pour annuler la démonstration des affichages , référez-vous à la page 4. For installation and connections, refer to the separate manual. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel. 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. WARNING: Stop the car before operating the unit. Battery

Products Caution: Adjust the volume so that you can hear sounds outside the car.

Driving with the volume too high may cause an accident. Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health.

Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

@@@ 2 ENGLISH EN02-15\_KD-R332\_003A\_f. Indd 2 9/7/11 10:40:02 AM How to attach/detach the control panel CONTENTS 3 How to attach/detach the control panel 3 How to reset your unit 3 How to forcibly eject a disc How to reset your unit Your preset adjustments will also be erased. 3 4 4 5 6 8 9 9 How to forcibly eject a disc [Hold] • Be careful not to drop the disc when it ejects. □ If this does not work, reset your unit. Condensation : When the car is airconditioned, moisture may collect on the laser lens.

This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate. @@@@ □ You cannot play a Recordable/ReWritable disc that has not been finalized. (For the finalization process refer to your disc writing software, and your disc recorder instruction manual. ) • 8 cm CD cannot be used. Attempt to insert using an adapter can cause malfunction. Handling discs: • Do not touch the recording surface of the disc. • Do not stick tape etc. On the disc, or use a disc with tape stuck on it. □ Do not use any accessories for the disc.

□ Clean from the center of the disc and move outward. □ Clean the disc with a dry silicon or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove the rims from the center hole and disc edge before inserting a disc. eNGLISH 3 EN02-15\_KD-R332\_003A\_f. Indd 3 9/7/11 10:40:03 AM Canceling the display demonstration 1 Turn on the power. (Initial setting) Setting the clock 1 Turn on the power. Indd 4 9/7/11 10:40:03 AM Basic operations Loading slot Control dial Display window Ejects the disc Detaches the panel When you press or hold the following button(s). □ Mutes the sound while listening to a source.

if the source is "CD," playback pauses. Press the control dial again to cancel muting or resume playback. □ Stores the current station into the selected number button [Hold]. Number buttons (1 – 6) • Press number button 1 ( ) or 2 ( ) to enter REPEAT/RANDOM setting directly. Indd 5 9/7/11 10:40:04 AM Listening to the radio • [Press] Searches for stations automatically.

• [Hold] Searches for stations manually. @@@@ "PRESET MODE" flashes. @@@@/1 or 2 To preset another 6 stations, repeat the above procedure by selecting one of the other SSM setting ranges. Changing the display information (for nonRadio Data System station) Frequency j Clock 6 ENGLISH • Pressing the number buttons (1 – 6) can also select the preset stations (1 – 6). eN02-15\_KD-R332\_003A\_f.

Indd 6 9/7/11 10:40:04 AM The following features are available only for FM Radio Data System stations. Searching for your favourite FM Radio Data System programme—PTY Search You can tune in to a station broadcasting your favourite programme by searching for a PTY code. □ To activate the reception, tune in to another station providing Radio Data System signals required for TA Standby Reception. • To deactivate the reception, press T/P again. NEWS Standby Reception NEWS Standby Reception allows the unit to switch temporarily to your NEWS programme from any source other than AM. Tracing the same programme— Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals. To change the Network-Tracking Reception setting, see <AF-REG>. @@@@ to activate Programme Search, see <P-SEARCH>. @@@@ □ To return to the previous menu, press T/P. • @@@@ Then, perform step 3.

@@@ " 8 ENGLISH EN02-15\_KD-R332\_003A\_f. @@@@ eNGLISH 9 EN02-15\_KD-R332\_003A\_f. Indd 9 9/7/11 10:40:05 AM Selecting a preset sound mode You can select a preset sound mode suitable for the music genre. FLAT = NATURAL = DYNAMIC = VOCAL BOOST = BASS BOOST = USER = (back to the beginning) While listening, you can adjust the subwoofer level and tone level of the selected sound mode. 2 ] <PRO EQ> j <BASS/ MIDDLE/ TREBLE> 3 Adjust the sound elements of the selected tone. The adjustments made is automatically stored and changed to "USER." 1 2 [Hold] Adjust the level: SUB. W \*: 00 to 08 BASS/ MID/ TRE: -06 to +06 The sound mode is automatically stored and changed to "USER. @ @ w>.

@@@@ □ To return to the previous menu, press T/P .

For settings, see page 4. @@@@ □ The search function works but search speed is not constant. 12 ENGLISH • The maximum number of characters for file/folder names vary depending on the disc format used (includes 4 extension characters—<. ISO 9660 Level 1 and 2, Romeo: 64 characters, Joliet: 32 characters, Windows long file name: 64 characters • This unit can play back files recorded in VBR (variable bit rate). (Files recorded in VBR have a discrepancy in elapsed time indication.

) • This unit cannot play back the following files: – MP3 files: encoded in MP3i and MP3 PRO format; an inappropriate format; layer 1/2. □ WMA files: encoded in lossless, professional, and voice format; not based upon Windows Media® Audio; copy-protected with DRM. Indd 12 9/7/11 10:40:06 AM Troubleshooting Symptom Sound cannot be heard from the speakers. Remedy/Cause • Adjust the volume to the optimum level. □ Make sure the unit is not muted/paused.

(page 5) • Check the cords and connections. □ MISWIRING CHK WIRING THEN RESET Check to be sure the terminals of the speaker leads are covered UNIT" / "WARNING CHK WIRING THEN with insulating tape properly, then reset the unit.



[You're reading an excerpt. Click here to read official JVC KD-R331 user guide](http://yourpdfguides.com/dref/4539199)

<http://yourpdfguides.com/dref/4539199>

@@ eNTERTAINMENT dealer or a company supplying kits. The unit does not work at all. @@Static noise while listening to the radio. (page 12) Disc cannot be played back. insert the disc correctly. @@Which you used for recording). Disc sound is sometimes interrupted. Stop playback while driving on rough roads.

The disc cannot be ejected properly. Make sure nothing is blocking the loading slot. Disc cannot be played back. □ Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet. Skip to another track or change the disc. □READING” keeps flashing on the display. A longer readout time is required. Do not use too many hierarchical levels and folders. Tracks do not play back in the order you The playback order is determined when the files are recorded. Have intended them to play.

The elapsed playing time is not correct. This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. The correct characters are not displayed This unit can only display letters (upper case), numbers, and a (e. Indd 13 MP3/WMA playback Disc playback FM/AM General 9/7/11 10:40:06 AM Using Bluetooth ® devices For Bluetooth operations, it is required to connect the Bluetooth adapter, KS-BTA100 (not supplied) to the auxiliary input jack (R-AUX/BT ADAPTER) on the rear of the unit.

(page 9) •For details, refer also to the instructions supplied with the Bluetooth adapter and the Bluetooth device. □ Operations may be different according to the connected device. preparation 1 Register (pair) a Bluetooth device with KS-BTA100. Refer to the instructions manual supplied with KS-BTA100. 2 Change the <SRC SELECT> settings of this unit.

[Hold] ] <SRC SELECT> ] <R-AUX> ] <BT ADAPTER> Using the Bluetooth mobile phone (Low) (High) Adjusting the microphone volume Volume level:

High/ Normal (initial)/ Low •Receiving a call When a call comes in. □ Making a call Making a call to the last connected number from your phone. □ Switching between handsfree and phone While talking. @@@@ 14 ENGLISH EN02-15\_KD-R332\_003A\_f. @@ load Impedance : 4 Ω (4 Ω to 8 Ω allowance) Frequency Response : 40 Hz to 20 000 Hz Signal-to-Noise Ratio : 70 dB Line-Out or Subwoofer-Out Level/ Impedance : 2. 5 V/20 kΩ load (full scale) Output Impedance : ≤ 600 Ω Other Terminal : Front auxiliary input jack, Rear auxiliary/Bluetooth adapter input jack, Aerial input CD PLAYER SECTION Type : Compact disc player .



[You're reading an excerpt. Click here to read official JVC KD-R331 user guide](#)

<http://yourpdfguides.com/dref/4539199>