



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R411. You'll find the answers to all your questions on the JVC KD-R411 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R411  
User guide JVC KD-R411  
Operating instructions JVC KD-R411  
Instructions for use JVC KD-R411  
Instruction manual JVC KD-R411

**Having TROUBLE with operation?**  
Please reset your unit  
Refer to page of How to reset your unit

**Vous avez des PROBLÈMES de fonctionnement?**  
Réinitialisez votre appareil  
Référez-vous à la page intitulée Comment réinitialiser votre appareil

---

Dear Customer,  
This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.

European representative of Victor Company of Japan, Limited is:  
JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Germany

Cher(e) client(e),  
Cet appareil est conforme aux directives et normes européennes en vigueur concernant la compatibilité électromagnétique et à la sécurité électrique.

Représentant européen de la société Victor Company of Japan, Limited:  
JVC Technical Services Europe GmbH  
Postfach 10 05 04  
61145 Friedberg  
Allemagne

ENGLISH  
FRANÇAIS

**KD-R412 / KD-R411 /  
KD-R35 / KD-R312 / KD-R311**

CD RECEIVER / RÉCEPTEUR CD

Detachable

KD-R412/KD-R411/KD-R35

COMPACT  
disc  
DIGITAL AUDIO  
TRACK

**MP3  
WMA**

**Radio Data System**

KD-R312/KD-R311

For canceling the display demonstration, see page 4. / Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual. / Pour l'installation et les raccordements, se référer au manuel séparé.

EN, FR  
© 2009 Victor Company of Japan, Limited

1009DTSMDTJEIN

**INSTRUCTIONS**  
MANUEL D'INSTRUCTIONS

GET0624-003A  
[E/EU]



[You're reading an excerpt. Click here to read official JVC KD-R411 user guide](http://yourpdfguides.com/dref/2821551)  
<http://yourpdfguides.com/dref/2821551>

**Manual abstract:**

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel. 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident. [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

Do not raise the volume level too much, as this will block outside sounds, making driving dangerous. • Stop the car before performing any complicated operations. @@@@Reference page number Menu setting item Continued on the next page Listening to the other external components Using the remote controller Selecting a preset sound mode Menu operations More about this unit Maintenance Troubleshooting Specifications How to reset your unit Be careful not to drop the disc when it ejects. • If this does not work, reset your unit. Detaches the panel Remote sensor (for KD-R412/KD-R411) You can control this unit with an optionally purchased remote control, 12).

USB (Universal Serial Bus) input jack When you press or hold the following button(s). Selects the available sources (if the power is turned on). "ST" lights up when receiving an FM stereo broadcast with sufficient signal strength. ] <TUNER> ] <SSM> ] <SSM 01 & 06> / <SSM 07 & 12> / <SSM 13 & 18> "SSM" flashes and local stations with the strongest signals are searched and stored automatically. To preset another 6 stations, repeat the above procedure by selecting one of the other 6 SSM setting ranges.

50 MHz into preset number "04. The following features are available only for FM Radio Data System stations. You can tune in to a station broadcasting your favourite programme by searching for a PTY code. If there is a station broadcasting a programme of the same PTY code as you have selected, that station is tuned in. TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM. • The volume changes to the preset TA volume level if the current level is lower than the preset level ( 15). PTY Standby Reception allows the unit to switch temporarily to your favourite PTY programme from any source other than AM. To activate the reception, tune in to another station providing these signals. Programme Search Usually when you select a preset number, the station preset in that number is tuned in. If the signals from the FM Radio Data System preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency possibly broadcasting the same programme as the original preset station is broadcasting.

Network-Tracking Reception When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals. All tracks will be played repeatedly until you change the source or eject the disc. Selects folder of the MP3/WMA You can use only one of the following playback modes at a time. Selects track Fast-forwards or reverses the track For MP3/WMA discs, select the desired folder, then the desired track by repeating step 2. REPEAT TRACK RPT : Repeats current track FOLDER RPT : Repeats current folder RANDOM FOLDER RND : Randomly plays all tracks of current folder, then tracks of next folders ALL RND : Randomly plays all tracks To cancel repeat play or random play, select "RPT OFF" or "RND OFF. Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level. Disc title/Album name/performer (folder name)\* = Track title (file name)\* = Current track number with the elapsed playing time = Current track number with the clock time = (back to the beginning) \* If the current disc is an audio CD, "NO NAME" appears. This unit can play MP3/WMA tracks stored in a USB device. All tracks will be played repeatedly until you change the source or detach the USB device.

if a USB device has been attached. Pressing / SOURCE turns on the power and playback starts from where it has been stopped previously. • If a different USB device is currently attached, playback starts from the beginning. Avoid using the USB device if it might hinder your safety driving. • Do not pull out and attach the USB device repeatedly while "READING" is shown on the display.

• Do not start the car engine if a USB device is connected. • This unit may not be able to play the files depending on the type of USB device. • Operation and power supply may not work as intended for some USB devices. Make sure all important data has been backed up to avoid losing the data. Some USB devices may not work immediately after attaching USB device or turn on the power.

• For more details about USB operations, see page 19. Straightly pull it out from the unit. You can operate the USB device in the same way you operate the files on a disc. USB devices produce very little noise compared with other sources. Lower the volume before playing a USB to avoid damaging the speakers by sudden increase of the output level. Listening to the other external components Adjust the sound as you want. KD-R412/KD-R411 can be remotely controlled as instructed here (with an optionally purchased remote controller). We recommend that you use remote controller RM-RK50 with your unit. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like. Turns the power on if pressed briefly.

@@ Turns the power off if pressed and held. Do not install any battery other than CR2025 or its equivalent. Store the battery in a place where children cannot reach. @@@@ You can select a preset sound mode suitable for the music genre. @@@@ The sound mode is automatically stored and changed to "USER. The current sound mode changes to "USER" automatically. @[ 0:00 ] 4) : Adjust the hour, then the minute. @@@@ (The AF indicator lights up. @@ Takes effect only when CT (clock time) data is received.



[You're reading an excerpt. Click here to read official JVC KD-R411 user guide](http://yourpdfguides.com/dref/2821551)

<http://yourpdfguides.com/dref/2821551>

@@@@@ : Cancels.

@@@@@LOW : Frequencies lower than 72 Hz are sent to the subwoofer. @@@@\*13 The volume level automatically changes to "VOLUME 30" if you change to <LOW POWER> with the volume level is set higher than "VOLUME 30. " \*14 Displayed only when any source other than "AM" is selected. \*15 Displayed only when any source other than "AUX IN" is selected. More about this unit If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power.

â· If no operation is done for about 60 seconds after pressing MENU button, the operation will be canceled. The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended. If you change the source while listening to a disc, playback stops. Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.

â· When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust. â· MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders. " â· While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds. â· All previously stored stations are erased and the stations are stored anew. When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number. Network-Tracking Reception requires two types of Radio Data System signals--PI (Programme Identification) and AF (Alternative Frequency) to work correctly. â· If a Traffic Announcement is received by TA Standby Reception, the volume level automatically changes to the preset level (TA VOLUME) if the current level is lower than the preset level. This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files. â· This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.

Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons: â· Discs are dirty or scratched. â· Moisture condensation has occurred on the lens inside the unit. â· The pickup lens inside the unit is dirty. â· The files on the CD-R/CD-RW are written using the "Packet Write" method. s (for example, conventional record cleaner, spray, thinner, benzine, etc. New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc. To remove these rough spots, rub the edges with a pencil or ball-point pen, etc. Do not use the following discs: Single CD (8 cm disc) Warped disc Moisture may condense on the lens inside the unit in the following cases: â· If it becomes very humid inside the car. Should this occur, the unit may malfunction.

In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated. Center holder When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges. Do not touch its recording surface. When storing a disc in its case, gently insert the disc around the center holder (with the printed surface facing up). â· Make sure to store discs in cases after use.

Transparent or semitransparent parts on its recording area Sound cannot be heard from the speakers. Make sure the unit is not muted/paused ( â· Check to be sure the terminals of the speaker leads are covered with insulating tape properly, then reset the unit ( 3). If "PROTECT" does not disappear, consult your JVC IN-CAR ENTERTAINMENT dealer or a company supplying kits. The unit does not work at all. Disc cannot be played back.

â· CD-R/CD-RW cannot be played back. Disc playback Disc can neither be played back nor ejected. Disc sound is sometimes interrupted. Finalize the CD-R/CD-RW with the component which you used for recording. Stop playback while driving on rough roads. Disc cannot be played back. Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet. ) Do not use too many hierarchical levels and folders. A longer readout time is required ("READING" keeps flashing on the display). Tracks do not play back in the order you have intended them to play.

The playback order is determined when the files are recorded. @@ "NOT SUPPORT" appears on the display and track skips. The elapsed playing time is not correct. The correct characters are not displayed (e. Skip to the next track encoded in an appropriate format or to the next non-copy-protected WMA track. This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. @@The track played back is not an MP3/WMA track. Do not use too many hierarchy or folders. â· Turn off the power then on again.

@@@@ or to the next non-copy-protected WMA track. Tracks/folders are not played back in the order you have intended. The correct characters are not displayed (e. While playing a track, sound is sometimes interrupted. the playback order is determined by the write-in time stamp.

@@@@The MP3/WMA tracks have not been properly copied into the USB device. Copy MP3/WMA tracks again into the USB device, and try again. JVC bears no responsibility for any loss of the data in the USB mass storage class device while using this System. Maximum Power Output: Continuous Power Output (RMS): Front/ Rear: Front/ Rear: 50 W per channel 19 W per channel into 4 , 40 Hz to 20 000 Hz at no more than 0. Compact disc player Non-contact optical pickup (semiconductor laser) Number of Channels: 2 channels (stereo) Frequency Response: 5 Hz to 20 000 Hz Dynamic Range: 93 dB Signal-to-Noise Ratio: 98 dB Wow and Flutter: Less than measurable limit MP3 Decoding Format: (MPEG1/2 Audio Layer 3) Max.

Design and specifications are subject to change without notice. Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. .



[You're reading an excerpt. Click here to read official JVC KD-R411 user guide](http://yourpdfguides.com/dref/2821551)  
<http://yourpdfguides.com/dref/2821551>