



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R431. You'll find the answers to all your questions on the JVC KD-R431 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R431
User guide JVC KD-R431
Operating instructions JVC KD-R431
Instructions for use JVC KD-R431
Instruction manual JVC KD-R431

JVC





ENGLISH

FRANÇAIS

■ KD-R531/KD-R432/KD-R431

CD RECEIVER / RÉCEPTEUR CD

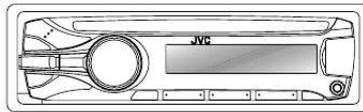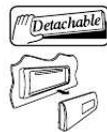

WMA

MP3 Radio Data System

Made for

iPod iPhone

For canceling the display demonstration, see page 4.
Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual.
Pour l'installation et les raccordements, se référer au manuel séparé.



INSTRUCTIONS
MANUEL D'INSTRUCTIONS

GET0767-003B
[E/EN/EU]



[You're reading an excerpt. Click here to read official JVC KD-R431 user guide](#)

<http://yourpdfguides.com/dref/4539201>

Manual abstract:

@@CAUTION: Do not open the top cover. @@ 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. Warning: Stop the car before operating the unit. Caution: Battery Products Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident. Avoid using the USB device or iPod/iPhone if it might hinder driving safety. Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead. Caution on volume setting: Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by the sudden increase of the output level. Temperature inside the car: If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Condensation: When the car is air-conditioned, moisture may collect on the laser lens. This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate. 4 Canceling the display demonstration Setting the clock Basic operations . How to forcibly eject a disc (Hold) Be careful not to drop the disc when it ejects.

If this does not work, reset your unit. 19 Maintenance Cleaning the unit Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the unit. @@< > indicates the displays on the control panel. [XX] indicates the initial setting of a menu item. @@ use a cotton swab or cloth. @@(Hold) Source Radio Display Non-Radio Data System station: Frequency Clock FM Radio Data System station: Station name (PS) Frequency Programme type (PTY) Clock (back to the beginning) Album title/Artist* Track title* Track no. /Playing time Track no. /Clock (back to the beginning) * "NO NAME" appears for conventional CDs or if not recorded. eXT MODE BT AUDIO Clock Clock Clock F-AUX or R-AUX CD/USB iPod/iPhone (HEAD MODE/ IPOD MODE) *1 iPod/iPhone (EXT MODE) *1 External Components (AUX) Bluetooth Audio *1 For KD-R531 only.

ENGLISH 4 \ KD-R531_E_EN 2011/10/3 19:21:12 Basic operations Control panel Control dial Loading slot Display window Ejects the disc Detaches the panel Front AUX input jack USB input terminal Remote sensor You can control this unit with an optionally purchased remote control, RM-RK52 (A page 15). When you press or hold the following button(s). (Hold) Press the /SOURCE button on the control panel and turn the control dial within 2 seconds to select the source. Press the button again to cancel muting or resume playback. Stores the current station into the selected number button. (Hold) (page 6) Selects the preset sound mode. (Hold) "M" flashes, then press the button repeatedly. □ST" lights up when receiving an FM stereo broadcast with sufficient signal strength. Storing stations in memory Manual presetting You can preset up to 18 stations for FM and 6 stations for AM. The current station is stored to the selected number button (1 - 6).

----- or ----- You can also select a preset station using / . Setting the Radio Timer You can tune in to a preset station at a specific time regardless of the current source. @@When all the stations are stored, "SSM" stops flashing. Lights up after the Radio Timer has been set. Only one timer can be set. Setting a new timer will override the previous setting. @@@@ pTY Search starts. @@@@ (music) , LIGHT M (music) , CLASSICS , OTHER M (music) , WEATHER , FINANCE , CHILDREN , SOCIAL , RELIGION , PHONE IN , TRAVEL , LEISURE , JAZZ , COUNTRY , NATION M (music) , OLDIES , FOLK M (music) , DOCUMENT 1 (Hold) <TUNER> <AF-REG> Switches to another station. The programme may differ from the one currently received (the AF indicator lights up). Switches to another station broadcasting the same programme (the AF indicator lights up).

2 Activating TA/News Standby Reception Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) or NEWS programme from any source other than AM. Tune in to another station providing the Radio Data System signals. again. Automatic station selection— Programme Search When the signal of a preset station you have selected is weak, this unit searches for another station possibly broadcasting the same programme as the original preset station is broadcasting. The source changes to "USB" and playback starts. This unit can play MP3/WMA files stored in CD-R, CD-RW, and USB mass storage device (such as a USB memory and Digital Audio Player). make sure all important data has been backed up. We shall bear no responsibility for any loss of data in USB mass storage class device while using this system. Ejected disc not removed within 15 seconds will reload automatically.

If the disc cannot be ejected, page 3. selecting a folder/track Selects folder. (For MP3/WMA) Selecting the playback modes You can select one of the following playback modes at a time. Randomly plays all tracks of current folder, then tracks of next folders. For MP3/WMA If the disc contains many folders or tracks, you can fast search for desired folder or track by turning the control dial quickly. aLL RND * For MP3/WMA 8 \ ENGLISH 2011/10/3 19:21:12 KD-R531_E_EN iPod/iPhone KD-R531 only Playing an iPod/iPhone USB input terminal USB 2. 0 cable (accessory of the iPod/iPhone) The source changes to "USB" "USB-IPOD" and playback starts. @@ iPOD Controls iPod playback from the MODE iPod/iPhone. EXT Allows any audio signals from iPod/ MODE iPhone. @@ 3 Select the desired track.

Repeat this step until the desired track is selected. @@@@You can select one of the following playback modes at a time. @@@@Functions the same as "Repeat All" of the iPod. Functions the same as "Shuffle Songs" of the iPod. @@ □ALBUM RND" is not applicable for some iPod/ iPhone. @@Playing an external component from Front/Rear AUX 3. @@4 Turn on the connected component and start playing the source. @@@@ Please contact your dealer where you purchased this unit. @@For details, refer also to the instructions supplied with the device. @@ 1 Register (pair) a Bluetooth device with KS-BTA100.

2 Change the <SRC SELECT> settings of this unit. (Hold) 3 Press MENU to exit. @@Brightness button is only available for KD-R432/ KD-R431.



[You're reading an excerpt. Click here to read official JVC KD-R431 user guide](http://yourpdfguides.com/dref/4539201)
<http://yourpdfguides.com/dref/4539201>

@@@The adjustments are stored and <USER> is activated. 5 Press MENU to exit. The adjustments are stored and <USER> is activated. To return to the previous menu, press . to exit from the menu , press DISP or MENU. @@@@oFF: Cancels. @@@@[ON]: Shows the TAG information while playing MP3/WMA tracks.

The illumination control lead connection is required. (See "Installation/Connection Manual". @@In this case, change the setting to other than <DIMMER AUTO>. @@Do not poke the battery with tweezers or similar tools. @@Selects the preset sound mode. (Hold) This unit is equipped with the steering wheel remote control function. For details, refer also to the instructions supplied with the remote adapter. ENGLISH \ 15 KD-R531_E_EN 2011/10/3 19:21:12 Additional information Additional information About discs This unit can only play the following CDs: Sampling frequency: MP3: 48 kHz, 44. (The elapsed time for VBR files will not be displayed correctly.) This unit can play back multi-session discs; however, unclosed sessions will be skipped during playback. Unplayable files MP3 files: - encoded in MP3i and MP3 PRO format - encoded in an inappropriate format - encoded with Layer 1/2 WMA files: - encoded in lossless, professional, and voice format - not based upon Windows Media® Audio - copy-protected with DRM Files which include data such as AIFF, ATRAC3, etc. unplayable discs Discs that are not round. Discs with coloring on the recording surface or discs that are dirty. Recordable/ReWritable disc that has not been finalized. (For details on disc finalization, refer to your disc writing software and your disc recorder instruction manual.) 8 cm CD. Attempting to insert using an adapter can cause malfunction. There may also be problems ejecting the disc if inserted. Maximum number of characters for file/folder name Varies depending on the disc format used (includes 4 extension characters—<. ISO 9660 Level 1 and 2: 64 characters Romeo: 64 characters Joliet: 32 characters Windows long file name: 64 characters Handling discs Do not touch the recording surface of the disc. do not stick tape etc. On the disc, or use a disc with tape stuck on it. Do not use any accessories for the disc. Clean from the center of the disc and move outwards. Clean the disc with a dry silicon or soft cloth. Do not use any solvents. When removing discs from this unit, pull them out horizontally. @@The search function works but search speed is not constant. @@@@About USB device When connecting a USB cable, use the USB 2. 0 cable.

You cannot connect a computer or portable HDD to the USB input terminal of the unit. Connect only one USB device to the unit at a time. do not use a USB hub. USB devices equipped with special functions such as data security functions cannot be used with the unit. Do not use a USB device with 2 or more partitions. This unit cannot recognize a USB device whose rating is other than 5 V and exceeds 1 A. Wma) Bit rate: MP3: 8 kbps - 320 kbps WMA: 32 kbps - 192 kbps 16 \ ENGLISH KD-R531_E_EN 2011/10/3 19:21:12 Additional information This unit may not recognize a memory card inserted into the USB card reader. This unit may not play back files in a USB device properly when using a USB extensiresetting the iPod/iPhone, refer to the instruction manual supplied with the iPod/iPhone. 18 \ ENGLISH KD-R531_E_EN 2011/10/3 19:21:12 Specifications AUDIO AMPLIFIER SECTION Maximum Power Output Continuous Power Output (RMS) Load Impedance Frequency Response Signal-to-Noise Ratio Line-Out, Subwoofer-Out Level/Impedance Output Impedance Specifications 50 W per channel 20 W per channel into 4Ω, 40 Hz to 20 000 Hz at less than 1% total harmonic distortion. Remplacez-la uniquement avec le même type de pile ou un type équivalent. - iPod touch (3e Génération) - iPod touch (2e Génération) - iPod touch (1e Génération) - iPod classic - iPod avec vidéo (5e Génération)* - iPod nano (6e Génération) - iPod nano (5e Génération) - iPod nano (4e Génération) - iPod nano (3e Génération) - iPod nano (2e Génération) - iPod nano (1e Génération)* - iPhone 4S - iPhone 4 - iPhone 3GS - iPhone 3G - iPhone *<IPOD MODE>/<EXT MODE> ne sont pas applicables. @@@@Please reset your unit Refer to page of How to reset your unit Vous avez des PROBLÈMES de fonctionnement? .



[You're reading an excerpt. Click here to read official JVC KD-R431 user guide](http://yourpdfguides.com/dref/4539201)
<http://yourpdfguides.com/dref/4539201>