



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R443E. You'll find the answers to all your questions on the JVC KD-R443E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R443E
User guide JVC KD-R443E
Operating instructions JVC KD-R443E
Instructions for use JVC KD-R443E
Instruction manual JVC KD-R443E

JVC

ENGLISH
FRANÇAIS

**KD-R647 / KD-R641 / KD-R547 / KD-R541 / KD-R449 /
KD-R447 / KD-R443 / KD-R442 / KD-R441**

CD RECEIVER
INSTRUCTION MANUAL
RÉCEPTEUR CD
MANUEL D'INSTRUCTIONS

JVC KENWOOD Corporation

Please read all instructions carefully before operation to obtain the best possible performance from the unit.

Veuillez lire les instructions attentivement avant d'utiliser l'appareil afin d'obtenir les meilleures performances possibles de l'appareil.



GET0425-001A [EEN/BU]



[You're reading an excerpt. Click here to read official JVC KD-R443E user guide](#)

<http://yourpdfguides.com/dref/5314063>

Manual abstract:

Indd 1 2/27/13 9:20:36 AM Information on Disposal of Old Electrical and Electronic Equipment and Batteries (applicable for EU countries that have adopted separate waste collection systems) Products and batteries with the symbol (crossed-out wheeled bin) cannot be disposed as household waste. Old electrical and electronic equipment and batteries should be recycled at a facility capable of handling these items and their waste byproducts. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment. Notice: The sign "Pb" below the symbol for batteries indicates that this battery contains lead. Indd i

2/27/13 9:21:14 AM The marking of products using lasers The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

Indd ii 2/27/13 9:21:14 AM CONTENTS BEFORE USE BASICS GETTING STARTED CD / USB / iPod RADIO AUX AUDIO SETTINGS ILLUMINATION MORE INFORMATION TROUBLESHOOTING SPECIFICATIONS INSTALLATION / CONNECTION 2 3 4 5 6 7 8 9 9 10 11 12 BEFORE USE Warning Do not operate any function that takes your attention away from safe driving. Caution Volume setting: •Adjust the volume so that you can hear sounds outside the car to prevent accident.

••••• •Make sure all important data has been backed up. We shall bear no responsibility for any loss of recorded data. •••••Remote control (RM-RK52): •Do not leave the remote control in hot places such as on the dashboard. •The Lithium battery is in danger of explosion if replaced incorrectly.

Replace it only with the same or equivalent type.

□ The battery pack or batteries shall not be exposed to excessive heat such as sunshine, fire or the like. •••••How to read this manual •Operations explained mainly using buttons on the faceplate of KD-R547 / KD-R541 / KD-R449 / KD-R447 / KD-R443 / KD-R442 / KD-R441. •[XX] indicates the selected items. □ (□ XX) indicates references are available on the stated page number. Handling discs: •Do not touch the recording surface of the disc.

•Do not stick tape etc. On the disc, or use a disc with tape stuck on it. □ Do not use any accessories for the disc. □ Clean from the center of the disc and move outward. □ Clean the disc with a dry silicon or soft cloth. Do not use any solvents. □ When removing discs from this unit, pull them out horizontally. □ Remove burrs from the center hole and disc edge before inserting a disc. 2 Connector (on the reverse side of the faceplate) EN_KD-R647[E_EE]001A.f. Remote sensor (Do not expose to bright sunlight.

) Detach KD-R547 KD-R449 KD-R443 KD-R541 KD-R447 KD-R442 KD-R441 How to reset Pull out the insulation sheet when using for the first time. How to replace the battery Detach button To Turn on the power Adjust the volume KD-R547 / KD-R541 Do this (on the faceplate) Press L SOURCE. □ Press and hold to turn off the power. Do this (on the remote control) (not available) Press VOL + or VOL -. Press the volume knob to mute the sound or pause playback. □ Press L SOURCE, then turn the volume knob within 2 seconds. •••••; OFF: Cancels. •••••; OFF: Cancels. •••••Sets the display and button brightness for day and night separately. 1 DAY/NIGHT: Select day or night.

2 BUTTON ZONE/ DISP ZONE: Select the zone for setting. 3 Set the brightness level (00 to 31). ON: Shows the TAG information while playing MP3/WMA files. Turn the volume knob to select [DEMO OFF], then press the knob. Turn the volume knob to select [CLOCK], then press the knob.

Turn the volume knob to select [CLOCK SET], then press the knob. Turn the volume knob to select the day, then press the knob. Turn the volume knob to adjust the hour, then press the knob. Turn the volume knob to adjust the minute, then press the knob. Turn the volume knob to select [24H/12H], then press the knob.

••••• 9 Press MENU to exit. •••••; EXT MODE: Controls music playback only from the iPod/iPhone. ; BT ADAPTER: Select when the KS-BTA100 Bluetooth adapter is connected to the AUX jack (□ 7). Displayed only when the source is USB-IPOD. Not displayed when the corresponding source is selected. 3 Set the basic settings 1 Press and hold MENU. 2 Turn the volume knob to make a selection, then press the knob. □ See the following table for selection. 3 Press MENU to exit. To return to the previous hierarchy, press G T/P.

0 cable*1 (commercially available) Select a track/file Select a folder (MP3/WMA) Reverse/Fast-forward Select a track/file from a list The source changes to USB and playback starts. CD USB iPod *2 — *2 1 Press MENU 2 Turn the volume knob to make a selection, then press the knob. □ MP3/WMA file: Select the desired folder, then a file. □ iPod or JVC Playlist Creator (JPC) / JVC Music Control (JMC) file*3: Select the desired file from the list (PLAYLISTS, ARTISTS, ALBUMS, SONGS, PODCASTS*4, GENRES, COMPOSERS*4). □ To return to the previous hierarchy, press G T/P. • To cancel , press MENU. Note: Turn the volume knob quickly to fast-search. *5 Repeat play USB 2. 0 cable*1 (accessory of the iPod/iPhone) The source changes to USB-IPOD and playback starts. □ You can also change the source from the other source to iPod by pressing iPod.

(□ 4) *1 Do not leave the cable inside the car when not using. (□ 4) *3 Only for files registered in the database created with JPC / JMC. (□ 10) 5 ENGLISH EN_KD-R647[E_EE]001A.f. Indd 5 2/27/13 9:20:38 AM RADIO "ST" lights up when receiving an FM stereo broadcast with sufficient signal strength.

Search for a station Activate TA Standby Reception Available only for FM Radio Data System stations.

press G T/P. The unit will temporarily switch to Traffic Announcement (TA) (if available) from any source other than AM. (or) Press and hold E / F (or 2 / 3 on RM-RK52) until "M" flashes, then press repeatedly to search for a station manually. Store a station You can store up to 18 stations for FM and 6 stations for AM. •••••The preset number flashes and "MEMORY" appears.

••••• 1 Press and hold G T/P. ••••• 6 1 Press and hold MENU. 2 Turn the volume knob to select [TUNER], then press the knob. •••••" stops flashing when first 6 stations are stored. •••••" stops flashing when first 6 stations are stored. Select SSM 07 – 12 to store the following 6 stations for FM. •••••; AF OFF: Cancels. Displayed only when the source is FM. •••••; MONO OFF: Cancels. ••••• (Stereo effect may be lost.

••••• 2 Select the band. •••••□ "M" lights up when complete. Radio Timer will not activate for the following cases. □ The unit is turned off. ••••• (□ 4) 3 Press L SOURCE to select AUX. 4 Turn on the portable audio player and start playback. Use a 3-core plug head stereo mini plug for optimum audio output.



[You're reading an excerpt. Click here to read official JVC KD-R443E user guide](http://yourpdfguides.com/dref/5314063)
<http://yourpdfguides.com/dref/5314063>

@@@ For details, refer to the instruction manual of KS-BTA100. 7 ENGLISH EN_KD-R647[E_EE]001A_f. @@@ ; OFF: Cancels.

@ Before adjustment, select the source you want to adjust. @ oN / OFF: Turns on or off the subwoofer output. THROUGH: All signals are sent to the subwoofer. @@@ ; OFF: Cancels. LOW POWER: Limits the maximum volume level to 30.

(Select if the maximum power of each speaker is less than 50 W to prevent damaging the speakers. 2 Turn the volume knob to make a selection, then press the knob. □ To return to the previous item, press G T/P. 2 Turn the volume knob to select [PRO EQ] or [AUDIO], then press the knob. 3 Turn the volume knob to make a selection (see the table below), then press the knob.

Repeat step 3 until the desilock FM Radio Data System station: Station name (PS) = Frequency = Program type (PTY) = Day/Clock = (back to the beginning) CD or USB Album title/Artist* = Track title* = Track no. /Playing time = Day/Clock = (back to the beginning) USB-IPOD [HEAD MODE] or [IPOD MODE]: Album title/ Artist* = Track title* = Track no. /Playing time = Day/Clock = (back to the beginning) [EXT MODE]: EXT MODE Day/Clock Day/Clock AUX AUX Day/Clock BT AUDIO BT AUDIO * "NO NAME" appears for conventional CDs or if not recorded. Available Cyrillic letters (for KD-R547 / KD-R449 / KD-R447) Available characters Display indications FM or AM TROUBLESHOOTING Symptom Sound cannot be heard. Remedy • Adjust the volume to the optimum level. • Check the cords and connections. @@@@ □ Pull the antenna out all the way. This unit can only display uppercase letters, numbers, and a limited number of symbols. For KD-R547 / KD-R449 / KD-R447: The unit can also display uppercase Cyrillic letters. (See left column.

) Press 0, then insert the disc correctly. Make sure nothing is blocking the loading slot when you eject the disc. press and hold 0 to forcibly eject the disc. Be careful not to drop the disc when it is ejected. The playback order is determined by the file name (USB) or the order in which files were recorded (disc). This depends on the recording process earlier. check whether the track is a playable format. (□ 9) • Check whether the connected device is compatible with this unit and ensure the files are in supported formats. (□ 9) • Reattach the device. □ Do not use too many hierarchical levels and folders.

□ Reload the disc or reattach the USB device. □ Check the connection between this unit and iPod/iPhone. □ Detach and reset the iPod/iPhone using hard reset. / Static noise while listening to the radio. Correct characters are not displayed.

Playback order is not as intended. Elapsed playing time is not correct. The iPod/iPhone does not turn on or does not work. If you still have troubles, reset the unit. (□ 3) 10 EN_KD-R647[E_EE]001A_f.

Indd 10 2/27/13 9:20:41 AM SPECIFICATIONS Power Output Continuous Power Output (RMS) Audio amplifier Load Impedance Frequency Response Signal-to-Noise Ratio Line-Out, Subwoofer-Out Level/ Impedance Output Impedance FM Frequency Range 50 W per channel CD player 20 W per channel into 4 Ω, 40 Hz to 20 000 Hz at less than 1% total harmonic distortion 4 Ω (4 Ω to 8 Ω allowance) 40 Hz to 20 000 Hz 70 dB For KD-R647 / KD-R641 / KD-R547 / KD-R541 / KD-R449: 2. Indd 11 2/27/13 9:20:41 AM INSTALLATION / CONNECTION Warning • The unit can only be used with a 12 V DC power supply, negative ground. □ Disconnect the battery's negative terminal before wiring and mounting. □ Do not connect Battery wire (yellow) and Ignition wire (.).



[You're reading an excerpt. Click here to read official JVC KD-R443E user guide](http://yourpdfguides.com/dref/5314063)

<http://yourpdfguides.com/dref/5314063>