



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R701. You'll find the answers to all your questions on the JVC KD-R701 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R701
User guide JVC KD-R701
Operating instructions JVC KD-R701
Instructions for use JVC KD-R701
Instruction manual JVC KD-R701

JVC

CD RECEIVER
RÉCEPTEUR CD
KD-R701

Radio Data System

Detachable MP3 WMA COMPACT disc DIGITAL AUDIO TEXT

Made for iPod Works with iPhone

For canceling the display demonstration, see page 8.
Pour annuler la démonstration des affichages, référez-vous à la page 8.

For installation and connections, refer to the separate manual.
Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS
MANUEL D'INSTRUCTIONS

GET0596-003A
[EX/EU]



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)
<http://yourpdfguides.com/dref/2361339>

Manual abstract:

CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel. 3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. 4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT. This mark is used to indicate...

Turn the control dial to make a selection, then press to confirm the selection. Battery Products Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

Warning: If you need to operate the unit while driving, be sure to look around carefully or you may be involved in a traffic accident. Caution on volume setting: Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level. For safety..

. Do not raise the volume level too much, as this will block outside sounds, making driving dangerous. Stop the car before performing any complicated operations. Temperature inside the car... If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit. 2 Detaching the control panel Avoid touching the connectors. CONTENTS Detaching the control panel ..

.....

.....

.....

... Attaching the control panel

.....

.....

... How to reset your unit ..

.....

.....

.....

.....

. How to forcibly eject a disc.....

.....

.....

... 3 3 3 3 OPERATIONS Basic operations ..

.....

.....

.....

.....

.....

. 4 Attaching the control panel · Using the control panel.....

.....

.....

.....

.. · Using the remote controller (RM-RK50)..... 4 6 Preparation ..

.....

.....

.....

.....

.....

.....

..... 8 Listening to the radio ..

.....

.....

.....

.....

... 9 Disc/USB operations

.....

.....

.....

.....
12 · Playing a disc

.....
.....

.....
.....
.....

..... 12 · Playing a file on a USB device

.....
.....

.. 12 · Disc/file operations

.....
.....
.....

.... 13 How to reset your unit EXTERNAL DEVICES Using the Bluetooth® devices.....

.....
.....

.. 14 · Using the Bluetooth cellular phone ...

..... 16 · Using the Bluetooth audio player .

.....
.....

.... 18 Listening to the CD changer .

.....
.....

..... 19 Listening to the iPod/iPhone .

.....
.....
.....

.. 20 · When connected with the USB cable

.. 20 · When connected with the interface adapter ...

.....
.....

.....
.....
.....

..... 22 · Your preset adjustments will also be erased (except the registered Bluetooth device, see pages 14 16). Listening to the DAB tuner ..

.....
.....
.....

..... 23 Listening to the other external components.....

.....
.....
.....

.....
.....
.....

. 24 SETTINGS Selecting a preset sound mode

.....
.....

. Bluetooth settings

.....
.....
.....
.....

.....
Menu operations

.....
.....
.....
.....

.. Color settings

.....
.....
.....

.....
.....

.... REFERENCES More about this unit .

.....
.....
.....
.....

..... Troubleshooting.....

.....
.....
.....
.....

..... Maintenance ..

.....
.....
.....

.....
.....
.....

..... Specifications

.....
.....
.....
.....

... 25 26 27 31 32 36 41 42 How to forcibly eject a disc · "PLEASE" and "EJECT" appear alternately on the display. · You can forcibly eject the loaded disc even if the disc is locked.

To lock/unlock the disc, see page 12. · Be careful not to drop the disc when it ejects. · If this does not work, reset your unit. 3 ENGLISH Basic operations ENGLISH Using the control panel 1 · FM/AM: Select preset station. 7 · Activate/deactivate TA Standby Reception.

2 3 4 5 6 · DAB: Select DAB service. · CD/USB/CD-CH: Select folder. · IPOD: Enter the main menu/Pause playback/ Confirm selection. · BT-PHONE/BT-AUDIO: Enter/go back to previous Bluetooth menu. Select the source. FM = DAB *2 = CD *2 = USB/USB-IPOD *2, *3 = CD-CH *2/IPOD *2 (or EXT INPUT) = BT-PHONE *2 = BT-AUDIO *2 = AUX IN *4 = AM *4 = (back to the beginning) · Enter list operations. · Enter Menu setting [Hold] . · USB-IPOD: Enter the main menu. · Control the volume *5 or select items [Turn]. · Confirm the selection [Press].

· FM: Enter SSM preset mode [Hold]. · CD/USB/USB-IPOD: Pause/resume playback *5 [Press]. · CD/USB/USB-IPOD/CD-CH/IPOD: Enter playback mode [Hold]. Display window USB (Universal Serial Bus) input jack · Enter PTY Searching mode [Hold]. 8 Change the display information. 9 Flip down the control panel. p q w e r t · To eject the disc, flip down the control panel then press 0 on the unit. · FM/AM: Search for station. · DAB: Search for DAB ensemble. · CD/USB/USB-IPOD/CD-CH: Select track.

· IPOD: Select category/track. · BT-PHONE/BT-AUDIO: Select setting item/ registered device. · Return to the previous menu. · USB-IPOD: Switch the setting between "HEAD MODE" and "IPOD MODE" *6 [Hold]. Select the display and button illumination color.

· Turn on the power. · Attenuate the sound (if the power is on). · Turn off the power [Hold]. Remote sensor AUX (auxiliary) input jack *1 -- *6: See page 5. 4 *1 Also known as "Control dial" in this manual.

*2 You cannot select these sources if they are not ready or not connected. *3 When connecting the iPod/iPhone to the USB input jack for the first time, "USB" appears on the display first, then "USB-IPOD." *4 You cannot select these sources if they were disabled in the Menu (see " SRC SELECT" in "Menu operations" on page 30). *5 You can still adjust the volume during pause when the selected source is CD/USB/USB-IPOD. Before resume playback, check to be sure that you have not raise the volume level too much. *6 You can use this function only when "IPOD MODE" is available for the connected iPod (see page 35). Display window 1 Bluetooth indicator 2 Tr (track) indicator 3 Source display / Disc number / Track number / p Status of Bluetooth device 4 5 6 7 8 9 Folder number / Time countdown indicator / Setting and list operation information USB indicator iPod indicator Playback mode / item indicators-- RND

(random), (disc), (folder), RPT (repeat) ST (stereo) indicator LOUD (loudness) indicator Radio Data System indicators--AF, REG, TP, PTY q w e r (Device number, [: 1 5]; signal strength, [: 0 3]*; battery reminder, [: 0 3]*) Main display TAG (Tag information) indicator Disc/device information indicators-- (track/file), (folder) Menu hierarchy position indicator-- (bottom), (top), (middle) * As the number increases, the signal/battery power becomes stronger. OPERATIONS 5 ENGLISH Using the remote controller (RM-RK50) ENGLISH Installing the lithium coin battery (CR2025) Caution: · Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)
<http://yourpdfguides.com/dref/2361339>

· Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

If the effectiveness of the remote controller decreases, replace the battery. Before using the remote controller: · Aim the remote controller directly at the remote sensor on the unit. · DO NOT expose the remote sensor to bright light (direct sunlight or artificial lighting). 1 · Turns the power on if pressed briefly or · 2 · · Remote sensor This unit is equipped with the steering wheel remote control function. · See the Installation/Connection Manual (separate volume) for connection. · Some of the operations might be different with the steering wheel remote control function. 3 4 5 6 attenuates the sound when the power is on.

Turns the power off if pressed and held. Changes the FM/AM/DAB preset stations. Changes the folder of the MP3/WMA.

While playing an MP3 disc on an MP3-compatible CD changer: Changes the disc if pressed briefly. Changes the folder if pressed and held. · While listening to an Apple iPod: Connected with the interface adapter: Pauses or resumes playback with D. Enters the main menu with 5 U. (Now 5 U/D /2 R/F 3 work as the menu selecting buttons.

) * 5 U : Returns to the previous menu. D : Confirms the selection. Adjusts the volume level. Selects the sound mode. Selects the source.

For Bluetooth cellular phone: Answers calls if pressed briefly. Rejects calls if pressed and held. 6 7 · Searches for stations (or DAB services) if pressed Warning (to prevent accidents and damage): · Do not install any battery other than CR2025 or its equivalent. · Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time. · Store the battery in a place where children cannot reach. · Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire. · Do not leave the battery with other metallic materials. · Do not poke the battery with tweezers or similar tools. · Wrap the battery with tape and insulate when throwing away or saving it. · · OPERATIONS 7 ENGLISH · · briefly.

Searches for DAB ensembles if pressed and held. Fast-forwards or reverses the track if pressed and held. Changes the tracks if pressed briefly. While listening to an iPod (in menu selecting mode): Connected with the interface adapter: Selects an item if pressed briefly. (Then, press D to confirm the selection.) Skips 10 items at a time if pressed and held. Reverse skip/forward skip for Bluetooth audio player. Preparation ENGLISH Canceling the display demonstration and setting the clock · See also page 27. 1 2 Press and hold until the main menu is called up. Turn on the power. Cancel the display demonstrations Select "DEMO," then "DEMO OFF." Set the clock Select "CLOCK" = "CLOCK SET." Adjust the hour, then press control dial once to proceed to adjust the minute. [Turn] = [Press] Select "24H/12H," then "24 HOUR" or "12 HOUR." · Repeat this procedure.

· To return to the previous menu, press BACK. Changing the display information When the power is turned off: The current clock time is displayed if "CLOCK DISP" is set to "CLOCK OFF," (see page 27). When the power is turned on: The display information of the current source changes as follows: FM/AM FM Radio Data System CD/CD-CH Station Frequency = Clock = (back to the beginning) Station name (PS) = Station Frequency = Programme type (PTY) = Clock = (back to the beginning) Audio CD/CD Text: Disc title/performer *1 = Track title *1 = Current track number with the elapsed playing time = Current track number with the clock time = (back to the beginning) MP3/WMA *4: Album name/performer (folder name) *2, *3 = Track title (file name) *2, *3 = Current track number with the elapsed playing time = Current track number with the clock time = (back to the beg Standby Reception, see page 28. The PTY indicator either lights up or flashes. · If the PTY indicator lights up, PTY Standby Reception is activated.

· If the PTY indicator flashes, PTY Standby Reception is not yet activated. To activate the reception, tune in to another station providing these signals. The PTY indicator will stop flashing and remain lit. To deactivate the PTY Standby Reception, select "PTY OFF" for the PTY code (see page 28). The PTY indicator goes off. · When a DAB tuner is connected, TA/PTY Standby Reception also searches for services. (See also page 23.) · The unit will not switch to Traffic Announcement or PTY programme when a call connection is established through "BT-PHONE." When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals (see the illustration below). When shipped from the factory, Network-Tracking Reception is activated.

To change the Network-Tracking Reception setting, see "AF-REG" on page 28. · When the DAB tuner is connected, refer to "Tracing the same programme--Alternative Frequency Reception (DAB AF)" on page 23. Programme A broadcasting on different frequency areas (01 05) Automatic station selection-- Programme Search Usually when you select a preset number, the station preset in that number is tuned in. If the signals from the FM Radio Data System preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency possibly broadcasting the same programme as the original preset station is broadcasting. · The unit takes some time to tune in to another station using programme search. · See also page 28.

OPERATIONS 11 ENGLISH To activate TA Standby Reception The TP (Traffic Programme) indicator either lights up or flashes. Tracing the same programme-- Network-Tracking Reception Disc/USB operations ENGLISH Playing a disc 1 2 Turn on the power. Insert a disc. All tracks will be played repeatedly until you change the source or eject the disc.

Stop playing and ejecting the disc Prohibiting disc ejection · "NO DISC" appears. Press SRC to listen to another playback source. To cancel the prohibition, repeat the same procedure. Playing a file on a USB device This unit can play MP3/WMA files stored on a USB mass storage class device. You can connect a USB mass storage class device such as a USB memory, Digital Audio Player, portable HDD, etc.

to the unit. · You can also connect an Apple iPod/iPhone to the USB input jack. For details of the operations, see pages 20 and 21. 1 2 USB memory Turn on the power. Connect a USB.

All tracks will be played repeatedly until you change the source or disconnect a device.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>

12 If a USB device has been attached... Disc/file operations [Press] Pause/resume playback. Playback starts from where it has been stopped previously. · If a different USB device is currently attached, playback starts from the beginning. Stop playing and detaching the USB device Straightly pull it out from the unit. · "NO USB" appears. Press SRC to listen to another playback source.

MP3/WMA: Select folder Cautions: · Avoid using the USB device if it might hinder your safety driving. · Do not pull out and attach the USB device repeatedly while "READING" is shown on the display. · Do not start the car engine if a USB device is connected. · This unit may not be able to play the files depending on the type of USB device. · Operation and power supply may not work as intended for some USB devices. · You cannot connect a computer to the USB input terminal of the unit. · Make sure all important data has been backed up to avoid losing the data. · Do not leave a USB device in the car, expose to direct sunlight, or high temperature to avoid deformation or cause damages to the device. · Some USB devices may not work immediately after you turn on the power. · For more details about USB operations, see page 34.

[Press] Select track [Hold] Reverse/fast-forward track Selecting a track/folder [Turn] = [Press] · For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures. · To return to the previous menu, press BACK. Continued on the next page OPERATIONS 13 ENGLISH Pressing (or holding) the following buttons allows you to...

Selecting the playback modes ENGLISH You can use only one of the following playback modes at a time. Using the Bluetooth ® devices For Bluetooth operations, it is required to connect the Bluetooth adapter (KS-BTA200) (not supplied) to the CD changer jack on the rear of this unit. · Refer also to the instructions supplied with the Bluetooth adapter and the Bluetooth device. · Refer to the list (included in the box) to check the countries where you may use the Bluetooth ® function. To use a Bluetooth device through the unit ("BT-PHONE" and "BT-AUDIO") for the first time, you need to establish Bluetooth wireless connection between the unit and the device.

· Once the connection is established, it is registered in the unit even if you reset your unit. Up to five devices can be registered in total. · Only one device can be connected at a time for each source ("BT-PHONE" and "BT-AUDIO"). See pages 34 and 35 about warning messages for Bluetooth operations. 1 2 [Turn] = [Press] REPEAT Ó RANDOM 3 [Turn] = [Press] REPEAT TRACK RPT : Repeats current track FOLDER RPT : MP3/WMA: Repeats current folder FOLDER RND : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders ALL RND : Randomly plays all tracks · To cancel repeat play or random play, select "RPT OFF" or "RND OFF." · To return to the previous menu, press BACK. RANDOM Registering a Bluetooth device Registration (Pairing) methods Use either of the following items in the Bluetooth menu to register and establish the connection with a device. · Select "BT-PHONE" or "BT-AUDIO" as the source to operate the Bluetooth menu. OPEN Make the unit ready to establish a new Bluetooth connection. Connection is established by operating the Bluetooth device.

Make the unit ready to establish a new Bluetooth connection. Connection is established by operating the unit. SEARCH 14 OPERATIONS & EXTERNAL DEVICES Registering using "OPEN" Preparation: Operate the device to turn on its Bluetooth function. 5 1 2 3 4 Select "BT-PHONE" or "BT-AUDIO." Select "NEW DEVICE." Use the Bluetooth device to search and connect. On the device to be connected, enter the same PIN code you have just entered for this unit. "CONNECTED" appears on the display. Now connection is established and you can use the device through the unit. Select "OPEN."

"The device remains registered even after you disconnect the device. Use "CONNECT" (or activate "AUTO CNNCT") to connect the same device from next time on. (See the following and page 26.) Connecting a device Enter a PIN (Personal Identification Number) code to the unit. · You can enter any number you like (1-digit to 16-digit number).

[Initial: 0000] Some devices have their own PIN code. Enter the specified PIN code to the unit. 1 Move to the next (or previous) number position. 1 2 3 Select "BT-PHONE" or "BT-AUDIO." Select "NEW DEVICE."

" 2 Select a number. To search for available devices: Select "SEARCH." The unit searches and displays the list of the available devices. If no available device is detected, "UNFOUND" appears. To connect a special device: Select "SPECIAL." The unit displays the list of the preset devices. 3 Repeat steps 1 and 2 until you finish entering a PIN code. 4 Confirm the entry. 4 Select a device you want to connect. "OPEN."

· flashes on the display. Continued on the next page EXTERNAL DEVICES 15 ENGLISH 5 ENGLISH For available devices... 1 Enter the specific PIN code of the device to the unit. Refer to the instructions supplied with the device to check the PIN code. 2 Use the Bluetooth device to connect. Now connection is established and you can use the device through the unit. For special device.

.. Use "OPEN" or "SEARCH" to connect. 2 Select a registered device you want to connect/disconnect/delete. 3 To connect/disconnect the selected device: Select "CONNECT" or "DISCONNECT."

" To delete the selected device: Select "DELETE," then "YES." Connecting/disconnecting/deleting a registered device 1 Select "BT-PHONE" or "BT-AUDIO." You can set the unit to connect the Bluetooth device automatically when the unit is turned on. (See "AUTO CNNCT" on page 26.) Using the Bluetooth cellular phone 1 2 3 -- Select "BT-PHONE."

" Enter the Bluetooth menu. Make a call or setting using the Bluetooth setting menu. (See the following and page 26.) When a call comes in.... The source is automatically changed to "BT-PHONE." · The display will flash in blue (see "RING COLOR" on page 29 for setting). When "AUTO ANSWER" is activated.

... The unit answers the incoming calls automatically, see page 26. · When "AUTO ANSWER" is deactivated, press any button (except /control dial/ OPEN) to answer the incoming call. · You can adjust the microphone volume level (see "MIC SETTING" on page 26).



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>

To end the call Hold any button (except When an SMS comes in....

If the cellular phone is compatible with SMS (Short Message Service) (notified through JVC Bluetooth adapter) and "MSG INFO" (message info) is set to "AUTOMATIC" (see page 26), the unit rings to inform you of the message arrival. · "RCV MESSAGE" (receiving message) appears on the display and the display illuminate in blue (see "RING COLOR" on page 29 for setting). /control dial/ OPEN). 16 Making a call You can make a call using the following methods. Select "BT-PHONE," then follow the following steps to make a call: · To return to the previous menu, press 5.

1 Enter the "DIAL" menu. Direct dialing: 1 Select "NUMBER." 2 Select a number. 2 Select a calling method. 3 Move to the next (or previous) number position.

Call history: 1 Select a call history (REDIAL*, RECEIVED*, MISSED*). 2 Then select a name (if it is acquired) or phone number. 4 Repeat steps 2 and 3 until you finish entering the phone number. 5 Phone book: 1 Select "PHONE BOOK*." The list of phone number appears. 2 Select a name from the list. Voice dialing: 1 Select "VOICE DIAL." "SAY NAME" appears on the display. 2 Speak the name you want to call. * Displays only when your cellular phone is equipped with these functions and is compatible with this unit.

· If your cellular phone does not support the voice recognition system, "ERROR" appears on the display. · Using "VOICE DIAL" may be difficult in a noisy environment or during an emergency. Continued on the next page EXTERNAL DEVICES 17 ENGLISH Using the Bluetooth audio player ENGLISH Select "BT-AUDIO." If playback does not start, operate the Bluetooth audio player to start playback. · Operate the Bluetooth audio player to pause (if playback does not pause when you change the source). Reverse skip/forward skip Pause/start playback* Enter the Bluetooth menu (see page 26) * Operation may be different according to the connected Bluetooth audio player. · Refer also to pages 15 and 16 for connecting/disconnecting/deleting a registered device. · If the sound is stopped or interrupted while using a Bluetooth device, turn off, and turn on the unit again to restore the sound. If this does not work, reconnect the device (see pages 15 and 16). Bluetooth Information: If you wish to receive more information about Bluetooth, visit the following JVC web site: <<http://www.jvc.co.jp/english/car/>> (English website only) 18 Listening to the CD changer It is recommended to use a JVC MP3-compatible CD changer (not supplied) with your unit. You can connect a CD changer to the CD changer jack on the rear of the unit. · You can only play conventional CDs (including CD Text) and MP3 discs.

Preparation: Make sure "CH/IPOD" is selected in the "SRC SELECT" = "EXT IN" setting, see page 30. 1 2 3 [Turn] = [Press] Select "CD-CH." Enter the list mode. Select a disc, folder, then the track. Playback starts automatically.

· If there is no disc on the selected tray, the unit beeps. · To select another folder/track while playing (for MP3 discs), repeat step 2 and 3 above until the desired folder/ track is selected. The selection always start from disc number first. · If another disc/folder is selected, playback starts from the 1st track of the selected disc/folder. Pressing (or holding) the following buttons allows you to... MP3: Select folders TRACK RPT : Repeats current track FOLDER RPT : MP3: Repeats all tracks of current folder DISC RPT : Repeats all tracks of the current disc FOLDER RND : MP3: Randomly plays all tracks of the current folder, then tracks of the next folder DISC RND : Randomly plays all tracks of current disc ALL RND : Randomly plays all tracks of the discs in the magazine Selecting the playback modes 1 2 [Turn] = [Press] REPEAT Ô RANDOM · To cancel repeat play or random play, select "RPT OFF" or "RND OFF." · To return to the previous menu, press BACK. 3 [Turn] = [Press] RANDOM [Press] Select track [Hold] Reverse/fast-forward track REPEAT EXTERNAL DEVICES 19 ENGLISH Listening to the iPod/iPhone ENGLISH You can connect the iPod/iPhone using the following cable or adapter: Cable/adapter USB 2.

0 cable (supplied with the iPod/iPhone) to the USB input jack on the control panel Interface adapter for iPod, KS-PD100 (not supplied) to the CD changer jack on the rear of the unit To operate See "When connected with the USB cable" below. See "When connected with the interface adapter" on page 22. · Disconnecting the iPod/iPhone will stop playback. Press SRC to listen to another playback source. · For details, refer also to the manual supplied with your iPod/iPhone. Caution: · Avoid using the iPod/iPhone if it might hinder your safety while driving. · Make sure all important data has been backed up to avoid losing the data. When connected with the USB cable There are 2 control terminals in "USB-IPOD" source. · "HEAD MODE": control by this unit. · "IPOD MODE": control by the connected iPod/iPhone.

Preparation: Select the controlling terminal, "HEAD MODE" or "IPOD MODE" for iPod playback: · Press and hold BACK button. · Make the selection from "IPOD SWITCH" setting, see page 30. The operations explained below are under "HEAD MODE." 1 2 Select "USB-IPOD." Playback starts automatically.

Select a song. Pressing (or holding) the following buttons allows you to... [Press] Pause/resume playback.

[Press] Select track [Hold] Reverse/fast-forward track 20 Selecting a track from the menu Selecting the playback modes ENGLISH [Turn] = [Press] REPEAT Ô RANDOM [Turn] = [Press] : Functions the same as "Repeat One" of the iPod. ALL RPT : Functions the same as "Repeat All" of the iPod. ALBUM : Functions the same as "Shuffle RND Albums" of the iPod. SONG RND : Functions the same as "Shuffle Songs" of the iPod. ONE RPT Continued on the next page 1 Enter the main menu. 1 2 2 Select the desired menu. [Turn] = [Press] 3 PLAYLISTS Ô ARTISTS Ô ALBUMS Ô SONGS Ô PODCASTS Ô GENRES Ô COMPOSERS Ô AUDIOBOOKS Select the desired track. [Turn] = [Press] · To return to the previous menu, press BACK. · To cancel repeat play or random play, select "RPT OFF" or "RND OFF." · "ALBUM RND" is not available for some iPod.

· To return to the previous menu, press BACK. RANDOM REPEAT 3 EXTERNAL DEVICES 21 When connected with the interface adapter ENGLISH

Preparation: Make sure "CH/IPOD" is selected in the "SRC SELECT" = "EXT IN" setting, see page 30.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>

1 2 Select "IPOD." Playback starts automatically. Select a song. Selecting a track from the menu 1 Enter the main menu. This mode will be canceled if no operations are done for about 5 seconds. Pressing (or holding) the following buttons allows you to...

Pause/resume playback [Press] Select track [Hold] Reverse/fast-forward track 2 Select the desired menu. Selecting the playback modes PLAYLISTS Ô ARTISTS Ô ALBUMS Ô SONGS Ô GENRES Ô COMPOSERS Ô (back to the beginning) See page 21 for operations. · "ALBUM RND" functions only if you select "ALL" for "ALBUMS" in the main menu. 3 Confirm the selection. · If a track is selected, playback starts automatically.

· Press 5 to return to the previous menu. · Pressing and holding 4 /ε skips 10 items at a time. 22 Listening to the DAB tuner Before operating, connect the JVC DAB tuner, KT-DB1000 (not supplied) to the CD changer jack on the rear of the unit. Preparation: Make sure "CH/IPOD" is selected in the "SRC SELECT" = "EXT IN" setting, see page 30. 1 2 Select "DAB.

" Searching for an ensemble. When an ensemble is tuned in, searching stops. To stop searching, press the same button again. · You can also search for an ensemble manually--Manual Search. Hold either one of the buttons until "MANUAL" flashes on the display, then press it repeatedly. 3 Select a service (either primary or secondary) to listen to. Storing DAB services in memory You can preset six DAB services (primary). Ex.: Storing an ensemble (primary service) into the preset number "04." Tracing the same programme-- Alternative Frequency Reception (DAB AF) You can keep listening to the same programme by activating the Alternative Frequency Reception.

· While receiving a DAB service: When driving in an area where a service cannot be received, this unit automatically tunes in to another ensemble or FM Radio Data System station, broadcasting the same programme. · While receiving an FM Radio Data System station: When driving in an area where a DAB service is broadcasting the same programme as the FM Radio Data System station is broadcasting, this unit automatically tunes in to the DAB service. When shipped from the factory, Alternative Frequency Reception is activated. To deactivate the Alternative Frequency Reception, see page 28. 1 2 Select a service you want (see steps 1 to 3 above). Select preset number "04." 3 Tuning in to a preset DAB service [Turn] = [Press] EXTERNAL DEVICES 23 ENGLISH

Listening to the other external components ENGLISH You can connect an external component to: · EXT INPUT: CD changer jack on the rear of this unit using the following adapters (not supplied): KS-U57: For connecting the component with pin jacks KS-U58: For connecting the component with stereo mini jack Preparation: Make sure "EXT INPUT" is selected in the "SRC SELECT" = "EXT IN" setting, see page 30. · AUX IN: AUX (auxiliary) input jack on the control panel. Preparation: Make sure "AUX ON" is selected in the "SRC SELECT" = "AUX IN" setting, see page 30. 1 2 3 Select "EXT INPUT" or "AUX IN.

" -- Turn on the connected component and start playing the source. Adjust the volume. 4 -- Adjust the sound as you want (see page 25). Connecting an external component to the AUX input jack Portable audio player, etc. 3.

5 mm stereo mini plug (not supplied) 24 EXTERNAL DEVICES Selecting a preset sound mode You can select a preset sound mode suitable to the music genre. · See also page 27. [Turn] = [Press] · See the following for "USER" settings. Storing your own sound mode You can store your own adjustments in memory. 1 Select "USER.

" 4 Adjust the sound elements of the selected tone. [Turn] = [Press] 1 Adjust the frequency. 2 Adjust the level. 3 Adjust the Q-slope. [Turn] = [Press] Sound elements Frequency Range/selectable items BASS 60 Hz 80 Hz 100 Hz 200 Hz 06 to +06 Q1.0 Q1.25 Q1.5 Q2.0 MIDDLE TREBLE 0.5 kHz 1.

0 kHz 1.5 kHz 2.5 kHz 06 to +06 Q0.75 Q1.0 Q1.25 10.0 kHz 12.5 kHz 15.0 kHz 17.5 kHz 06 to +06 Fix 2 While "USER" is shown on the display.

.. Level 3 Select a tone. Q [Turn] = [Press] 5 Repeat steps 3 and 4 to adjust other sound characteristics. The adjustment made will be stored automatically. SETTINGS 25 ENGLISH Bluetooth settings ENGLISH You can change the settings listed on the right column according to your preference. 1 2 Select "BT-PHONE" or "BT-AUDIO." Enter the Bluetooth menu. Setting menu (: Initial) AUTO CNNECT (connect) When the unit is turned on, the connection is established automatically with..

· OFF: No Bluetooth device. LAST: The last connected Bluetooth device. ORDER: The available registered Bluetooth device found at first. AUTO ANSWER Only for the device being connected for "BT-PHONE." OFF: The unit does not answer the calls automatically. Answer the calls manually. ON: The unit answers the incoming calls automatically. REJECT: The unit rejects all incoming calls. MSG INFO (message info) Only for the device being connected for "BT-PHONE.

" AUTOMATIC: The unit informs you of the arrival of a message by ringing and displaying "RCV MESSAGE" (receiving message). · The display illuminate in blue (see "RING COLOR" on page 29). MANUAL: The unit does not inform you of the arrival of a message. MIC SETTING (microphone setting) Only for the device being connected for "BT-PHONE." Adjust the volume of the microphone connected to the Bluetooth adapter. LEVEL 01/02/03 VERSION The Bluetooth software and hardware versions are shown. 3 Select "SETTINGS." 4 Select a setting item. *1 Appears only when a Bluetooth phone is connected. *2 Appears only when a Bluetooth phone is connected and it is compatible with text message (notified through JVC Bluetooth adapter).

*3 Bluetooth Audio: Shows only "Version." 5 Change the setting accordingly. 26 Menu operations 1 Call up the menu. 2 Select the desired item. [Turn] = [Press] 3 Repeat step 2 if necessary.

· To return to the previous menu, press BACK. · To exit from the menu, press DISP or MENU. Initial: Underlined Category Menu items DEMO Display demonstration CLOCK DISP *1 Clock display Selectable settings, [reference page] · DEMO ON · DEMO OFF · CLOCK ON · CLOCK OFF : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [8]. : Cancels. : Clock time is shown on the display at all times when the power is turned off.

: Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off. [8].



[You're reading an excerpt. Click here to read official JVC KD-R701](http://yourpdfguides.com/dref/2361339)

[user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>

DEMO CLOCK CLOCK SET Clock setting 24H/12H Time display mode CLOCK ADJ *2 Clock adjustment EQ Equalizer DIMMER Dimmer : Adjust the hour, then the minute, [8]. (Initial: 0:00) · 24 HOUR · 12 HOUR · AUTO · OFF : See also page 8 for setting. : The built-in clock is automatically adjusted using the CT (clock time) data in the Radio Data System signal. : Cancels. : Select a preset sound mode suitable to the music genre. USER, ROCK, CLASSIC, POPS, HIP HOP, JAZZ · DIMMER AUTO : Dims the display when you turn on the headlights. *3 · DIMMER ON : Dims the display and button illumination. DIMMER OFF : Cancels. · SCROLL ONCE · SCROLL AUTO · SCROLL OFF : Scrolls the displayed information once.

: Repeats scrolling (at 5-second intervals). : Cancels. DISPLAY EQ SCROLL *4 Scroll Pressing DISP for more than one second can scroll the display regardless of the setting. *1 If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select "CLOCK OFF" to save the car's battery. *2 Takes effect only when CT data is received. *3 The illumination control lead connection is required. (See "Installation/Connection Manual.") *4 Some characters or symbols will not be shown correctly (or will be blanked) on the display. Continued on the next page SETTINGS 27 ENGLISH Category Menu items DISPLAY Selectable settings, [reference page] · TAG ON · TAG OFF : Shows the Tag information while playing MP3/WMA tracks. : Cancels.

: When the currently received signals become weak, the unit switches to another station (the programme may differ from the one currently received), [11]. · The AF indicator lights up. : When the currently received signals become weak, the unit switches to another station broadcasting the same programme. · The AF and REG indicators light up. : Cancels (not selectable when "DAB AF" is set to "AF ON").

: Activates PTY Standby Reception with one of the PTY codes, [10]. ENGLISH TAG DISPLAY Tag display AF-REG *5 Alternative frequency/ regionalization reception · AF ON · AF-REG ON · OFF PTY-STANDBY *5 PTY standby TA VOLUME *5 Traffic announcement volume P-SEARCH *5 Programme search PTY OFF, PTY codes TUNER VOLUME 00 : (Initial: VOLUME 15) VOLUME 50 (or VOLUME 00 VOLUME 30)*6 · SEARCH ON · SEARCH OFF : Activates Programme Search, [11]. : Cancels. : Traces the programme among DAB services and FM Radio Data System stations, [23]. : Cancels.

: Activate monaural mode to improve FM reception, but stereo effect will be lost, [9]. : Restore the stereo effect. : Increases the tuner selectivity to reduce interference noises between adjacent stations. (Stereo effect may be lost.) : Subject to interference noises from adjacent stations, but sound quality will not be degraded and the stereo effect will remain. DAB AF *7 · AF ON Alternative frequency reception · AF OFF MONO *8 Monaural mode IF BAND Intermediate frequency band · MONO ON · MONO OFF · AUTO · WIDE COLOR 01 -- COLOR 29, USER : Select one of the preset or user color for display and button (except T/P/DISP/ OPEN/) illumination. (For customized color settings, "USER," see page 31.) *5 *6 *7 *8 Only for FM Radio Data System stations. Depends on the amplifier gain control. Displayed only when DAB tuner is connected.

Displayed only when the source is "FM." 28 COLOR Category Menu items MENU COLOR MENU COLOR Menu color Selectable settings, [reference page] · OFF RING COLOR RING COLOR * Ring color 9 · ON · OFF FADER *10, *11 Fader BALANCE *11 Balance LOUD Loudness VOL ADJUST Volume adjust R06 F06 L06 R06 · LOUD ON · LOUD OFF : When a call comes in, the display will flash in blue. · The display will change to the original color when you answer the call or the incoming call stops. When the unit receive a text message, the display only illuminate in blue. : Cancels. : Adjust the front and rear speaker output balance. (Initial: 00) : Adjust the left and right speaker output balance. (Initial: 00) : Boost low and high frequencies to produce a well-balanced sound at a low volume level. : Cancels. VOL ADJ 05 -- : Preset the volume adjustment level of each source VOL ADJ +05 (except FM), compared to the FM volume level.

The (Initial: VOL ADJ volume level will automatically increase or decrease 00) when you change the source. · Before making an adjustment, select the source you want to adjust. · "VOL ADJ FIX" appears on the display if "FM" is selected as the source. · SUB.W · REAR : Select if the REAR LINE OUT terminals are used for connecting a subwoofer (through an external amplifier).

: Select if the REAR LINE OUT terminals are used for connecting the speakers (through an external amplifier). : Frequencies lower than 72 Hz are sent to the subwoofer. : Frequencies lower than 111 Hz are sent to the subwoofer. : Frequencies lower than 157 Hz are sent to the subwoofer. : Adjust the subwoofer output level.

(Initial: SUB.W 04) AUDIO L/O MODE Line output mode SUB.W FREQ *12 Subwoofer cutoff frequency SUB.W LEVEL *12 Subwoofer level · LOW · MID · HIGH SUB.W 00 -- SUB.W 08 *9 Displayed only when Bluetooth adapter, KS-BTA200 is connected. *10 If you are using a two-speaker system, set the fader level to "00." *11 This adjustment will not affect the subwoofer output. *12 Displayed only when "L/O MODE" is set to "SUB.W.

" Continued on the next page SETTINGS 29 ENGLISH · ON : Changes the display and button (except T/P/DISP/ OPEN/) illumination during menu, list search and playback mode operations. : Cancels. Category Menu items Selectable settings, [reference page] · BEEP ON · BEEP OFF · MUTING 1/ MUTING 2 · MUTING OFF · LOW POWER : Activates the key touch tone. : Deactivates the key touch tone. : Select either one which mutes the sounds while using a cellular phone. : Cancels. : VOLUME 00 VOLUME 30 (Select if the maximum power of each speaker is less than 50 W to prevent damaging the speaker.) : VOLUME 00 VOLUME 50 : Enable "AM" in source selection, [4]. : Disable "AM" in source selection. : To use a JVC CD changer, [19], JVC DAB tuner, [23], or an Apple iPod/iPhone, [20].

: To listen to a portable audio player (connected to the CD changer jack), [24]. : Enable "AUX IN" in source selection, [4]. : Disable "AUX IN" in source selection. : You can select the playback speed of the "Audiobooks" sound file in your iPod/iPhone. · Initial selected item depends on your iPod/iPhone setting. ENGLISH BEEP Key touch tone AUDIO TEL MUTING Telephone muting AMP GAIN *13 Amplifier gain control AM *14 AM station · HIGH POWER · AM ON · AM OFF · CH/IPOD · EXT INPUT AUX IN *16 Auxiliary input · AUX ON · AUX OFF · NORMAL · FASTER · SLOWER SRC SELECT AUDIOBOOKS EXT IN *15 External input AUDIOBOOKS *17 Speed control of "Audiobooks" *13 The volume level automatically changes to "VOLUME 30" if you change to "LOW POWER" with the volume level set higher than "VOLUME 30.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)
<http://yourpdfguides.com/dref/2361339>

*14 Displayed only when any source other than "AM" is selected. *15 Displayed only when one of the following sources is selected--FM, DAB, CD, USB, USB-IPOD, BT-PHONE, BT-AUDIO, AUX IN, or AM. *16 Displayed only when any source other than "AUX IN" is selected. *17 Displayed only when an iPod/iPhone is connected to the USB cable and playback is controlled from the unit.

*18 Displayed only when "USB-IPOD" is selected as the source and "IPOD MODE" is available for the connected iPod/iPhone (see page 35). 30 IPOD SWITCH IPOD SWITCH *18 · HEAD MODE iPod/iPhone control · IPOD MODE : Controls iPod playback through the unit. : Controls iPod playback through the iPod/iPhone. Color settings Selecting a preset color You can select a preset color for the buttons and display. · See also page 28. 3 [Turn] = [Press] 4 Creating your own color --USER Color You can create your own colors--"DAY COLOR" or "NIGHT COLOR." DAY COLOR: Color for the display and buttons. NIGHT COLOR: Color for the display and buttons when the display is dimmed. To dim the display, see "DIMMER" on page 27. Select a primary color.

[Turn] = [Press] 5 Adjust the level (00 to 31) of the selected primary color. [Turn] = [Press] If "00" is selected for all the primary colors, nothing appear on the display. 1 Select "USER." 6 7 [Turn] = [Press] Repeat steps 4 and 5 to adjust other primary colors. Exit from the setting. or Select "USER" to show your own colors for the buttons and display. 2 While "USER" is shown on the display... SETTINGS 31 ENGLISH More about this unit ENGLISH Basic operations Turning on the power · By pressing SRC button on the unit, you can also turn on the power.

If the source is ready, playback also starts. FM Radio Data System operations · Network-Tracking Reception requires two types of Radio Data System signals--PI (Programme Identification) and AF (Alternative Frequency) to work correctly. Without receiving these data correctly, Network-Tracking Reception will not operate correctly. · If a Traffic Announcement is received by TA Standby Reception, the volume level automatically changes to the preset level (TA VOL) if the current level is lower than the preset level. · When Alternative Frequency Reception is activated (with AF selected), Network-Tracking Reception is also activated automatically.

On the other hand, Network-Tracking Reception cannot be deactivated without deactivating Alternative Frequency Reception. (See page 28.) Turning off the power · If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power. General · If you change the source while listening to a disc, playback stops. Next time you select "CD" as the playback source, playback will start from where it had been stopped previously.

· If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot again to protect it from dust. · After ejecting a disc or disconnect a USB device, "NO DISC" or "NO USB" appears and you cannot operate some of the buttons. Insert another disc, reconnect a USB device, or press SRC to select another playback source. · If no operation is done for about 30 seconds after pressing MENU button or control dial, the operation will be canceled. Disc operations Caution for DualDisc playback · The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended. General · This unit has been designed to reproduce CDs/CD Texts, and CD-Rs (Recordable)/CD-RWs (Rewritable) in audio CD (CD-DA), MP3/WMA formats. · When a disc is inserted upside down, "PLEASE" and "EJECT" appear alternately on the display. Press OPEN, then 0 to eject the disc. · MP3 and WMA "tracks" (words "file" and "track" are used interchangeably) are recorded in "folders."

· While fast-forwarding or reversing on an MP3 or WMA disc, you can only hear intermittent sounds. Tuner operations Storing stations in memory · During SSM search... All previously stored stations are erased and the stations are stored anew. When SSM is over, the station stored in the lowest preset number will be automatically tuned in. · When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number. 32 Playing a CD-R or CD-RW · Use only "finalized" CD-Rs or CD-RWs. · This unit can only play back files of the same type as those detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files. · This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.

· Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons: Discs are dirty or scratched. Moisture condensation has occurred on the lens inside the unit. The pickup lens inside the unit is dirty. The files on the CD-R/CD-RW are written using the "Packet Write" method. There are improper recording conditions (missing data, etc.

) or media conditions (stained, scratched, warped, etc.). · CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs. · Do not use the following CD-Rs or CD-RWs: Discs with stickers, labels, or a protective seal stuck to the surface. Discs on which labels can be directly printed by an ink jet printer.

Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit. Playing an MP3/WMA disc · This unit can play back MP3/WMA files with the extension code <.mp3> or <.wma> (regardless of the letter case--upper/lower). · This unit can show the names of albums, artists (performer), and Tag (Version 1.0, 1.1, 2.2, 2.3, or 2.4) for MP3 files and for WMA files.

· This unit can display only one-byte characters. No other characters can be correctly displayed. · This unit can play back MP3/WMA files meeting the conditions below: Bit rate of MP3/WMA: 32 kbps -- 320 kbps Sampling frequency of MP3: 32 kHz, 44.1 kHz, 48 kHz (for MPEG-1) 16 kHz, 22.05 kHz, 24 kHz (for MPEG-2) Sampling frequency of WMA: 22.05 kHz, 32 kHz, 44.1 kHz, 48 kHz Disc format: ISO 9660 Level 1/Level 2, Romeo, Joliet, Windows extension. @@@@ MP3 files encoded in an inappropriate format. MP3 files encoded with Layer 1/2. WMA files encoded in lossless, professional, and voice format.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>

WMA files which are not based upon Windows Media® Audio. WMA files copy-protected with DRM. Files which have data such as AIFF, ATRAC3, etc. · The search function works but search speed is not constant. Continued on the next page REFERENCES 33 ENGLISH Playing MP3/WMA tracks from a USB device · While playing from a USB device, the playback order may differ from other players.

@@@Do not use a USB hub. @@@@ · This unit does not support SD card reader. @@@ · Do not use a USB device with 2 or more partitions. · This unit may not recognize a USB device connected through a USB card reader. · When connecting with a USB cable, use the USB 2.0 cable. · This unit may not play back files in a USB device properly when using a USB extension cord. @@ MP3 files encoded in an inappropriate format. MP3 files encoded with Layer 1/2. WMA files encoded in lossless, professional, and voice format. WMA files not based on Windows Media® Audio.

ENGLISH Bluetooth operations General · While driving, do not perform complicated operation such as dialing the numbers, using phone book, etc. When you perform these operations, stop your car in a safe place. @@ · This unit may not work for some Bluetooth devices. @@ · When the unit is turned off, the device is disconnected.

Warning messages for Bluetooth operations · ERROR CNNECT (Error Connection): The device is registered but the connection has failed. Use "CONNECT" to connect the device again. (See pages 15 and 16.) · ERROR Try the operation again. If "ERROR" appears again, check if the device supports the function you have tried. · UNFOUND No available Bluetooth device is detected by "SEARCH." 34 · LOADING The unit is updating the phone book. · PLEASE WAIT The unit is preparing to use the Bluetooth function. If the message does not disappear, turn off and turn on the unit, then connect the device again (or reset the unit). · RESET 8 Check the connection between the adapter and this unit.

DAB · Only the primary DAB service can be preset even when you store a secondary service. · A previously preset DAB service is erased when a new DAB service is stored in the same preset number. · If the iPod does not play correctly, please update your iPod software to the latest version. For details about updating your iPod, visit <<http://www.apple.com>>.

· When you turn on this unit, the iPod is charged through this unit. · iPod shuffle cannot be used with this unit. · The song order displayed on the selection menu of this unit may differ from that of the iPod. · The text information may not be displayed correctly: Some characters such as accented letters cannot be shown correctly on the display.

Communication between the iPod and the unit is not stable. · If the text information includes more than 11 characters, it scrolls on the display. This unit can display up to 40 characters for "IPOD" and up to 64 characters for "USB-IPOD." Notice: When operating an iPod, some operations may not be performed correctly or as intended. In this case, visit the following JVC web site: <<http://www.jvc.co.jp/english/car/>> (English website only) iPod/iPhone operations · You can control the following types of iPods/iPhone: (A) Connected with the USB cable: iPod with video (5th Generation) *1 iPod classic *1, *2 iPod nano iPod nano (2nd Generation) iPod nano (3rd Generation) *1, *2 iPod nano (4th Generation) *1, *2 iPod Touch *1, *2 iPod Touch (2nd Generation) *1, *2 iPhone/iPhone 3G *1, *2 (B) Connected with the interface adapter: iPod with dock connector (3rd Generation) iPod with Click Wheel (4th Generation) iPod mini iPod photo iPod with video (5th Generation) *1 iPod classic *1 iPod nano iPod nano (2nd Generation) iPod nano (3rd Generation) *1 iPod nano (4th Generation) *1 *1 It is not possible to browse video files on the "Videos" menu. *2 "IPOD MODE" is available (see page 20). Menu operations · If you change the "AMP GAIN" setting from "HIGH POWER" to "LOW POWER" while the volume level is set higher than "VOLUME 30," the unit automatically changes the volume level to "VOLUME 30."

" Continued on the next page REFERENCES 35 ENGLISH Preset value setting for each sound mode ENGLISH Preset value Sound mode Freq. USER ROCK CLASSIC POPS HIP HOP JAZZ 60 Hz 100 Hz 80 Hz 100 Hz 60 Hz 80 Hz BASS Level 00 +03 +01 +02 +04 +03 Q Q1.25 Q1.0 Q1.25 Q1.25 Q1.0 Q1.25

Freq. 1.0 kHz 1.0 kHz 1.0 kHz 1.0 kHz 1.0 kHz MIDDLE Level 00 00 00 +01 02 00 Q Q1.0 Q1.25 Q1.25 Q1.25 Q1.0 Q1.

25 Freq. 10.0 kHz 10.0 kHz 10.0 kHz 10.0 kHz 10.0 kHz 10.0 kHz TREBLE Level 00 +02 +03 +02 +01 +03 Q - - - - - LOUD (loudness) OFF Freq.: Frequency Q: Q-slope JVC bears no responsibility for any loss of data in an iPod/iPhone and/or USB mass storage class device while using this System. Troubleshooting What appears to be trouble is not always serious.

Check the following points before calling a service center. Symptoms General · Sound cannot be heard from the speakers. · The unit does not work at all. · "AUX IN" cannot be selected. · · · Remedies/Causes · Adjust the volume to the optimum level. · Check the cords and connections. Reset the unit (see page 3). Check the "SRC SELECT" = "AUX IN" setting (see page 30). Nothing appear on the display. Check the "USER" color settings (see page 31).

SSM automatic presetting does not work. Store stations manually. Static noise while listening to the radio. Connect the aerial firmly. "AM" cannot be selected. Check the "SRC SELECT" = "AM" setting (see page 30). 36 FM/AM Symptoms · Disc cannot be played back. · CD-R/CD-RW cannot be played back. · Tracks on the CD-R/CD-RW cannot be skipped. · Disc can neither be played back nor ejected.

· Disc sound is sometimes interrupted. Remedies/Causes Insert the disc correctly. · Insert a finalized CD-R/CD-RW. · Finalize the CD-R/CD-RW with the component which you used for recording. · Unlock the disc (see page 12). · Eject the disc forcibly (see page 3). · Stop playback while driving on rough roads. Change the disc. · Check the cords and connections. Insert a playable disc into the loading slot.

Press OPEN, then 0 to eject the disc, then insert a disc correctly. · Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet. · Add the extension code <.mp3> or <.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>

wma> to the file names. Skip to another track or change the disc. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.) Do not use too many hierarchical levels and folders.

Discs in general · "NO DISC" appears on the display. · "PLEASE" and "EJECT" appear alternately on the display. · Disc cannot be played back. · Noise is generated. MP3/WMA playback · A longer readout time is required ("READING" keeps flashing on the display).
· Tracks do not play back in the order you have intended them to play. · The elapsed playing time is not correct. · "NO FILE" appears on the display. · "NOT SUPPORT" appears on the display and track skips. · The correct characters are not displayed (e.g. album name). The playback order is determined when the files are recorded. This sometimes occurs during playback. This is caused by how the tracks are recorded on the disc. Selected folder is an empty folder *1. Select another folder that contains MP3/WMA tracks. Check whether the track is a playable file format. This unit can only display letters (upper case), numbers, and a limited number of symbols. *1 Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track.

Continued on the next page REFERENCES 37 ENGLISH Symptoms Remedies/Causes ENGLISH · Noise is generated. · USB device playback Bluetooth *3 · · · · · The track played back is not an MP3/WMA track. Skip to another file. (Do not add the extension code <.mp3> or <.wma> to non-MP3 or WMA tracks.) "READING" keeps flashing on the display. · Readout time varies depending on the USB device. · Do not use too many hierarchy or folders. · Turn off the power then on again.

· Do not pull out or connect the USB device repeatedly while "READING" is displayed on the display. "NO FILE" appears on the display. Selected folder is an empty folder *2. Select another folder that contains MP3/WMA tracks. Tracks/folders are not played back in the The playback order is determined by the write-in time order you have intended.

stamp. The first track/folder written into the USB device will be the first track/folder for playback. "CANNOT PLAY" appears on the display. · Connect a USB device that contains tracks encoded in an "NO USB" appears on the display. appropriate format.

The unit cannot detect the USB device. · Connect the USB device again. "NOT SUPPORT" appears on the display Check whether the track is a playable file format. and track skips. Correct characters are not displayed (e.g. This unit can only display alphabets (upper case), album name). numbers, and a limited number of symbols. While playing a track, sound is The tracks have not been properly copied into the USB sometimes interrupted. device.

Copy tracks again into the USB device, and try again. Bluetooth device does not detect the The unit can be connected with one Bluetooth cellular unit. phone and one Bluetooth audio device at a time. While connecting a device, this unit cannot be detected from another device. Disconnect currently connected device and search again. The unit does not detect the Bluetooth · Check the Bluetooth setting of the device. device. · Search from the Bluetooth device. After the device detects the unit, select "OPEN" on the unit to connect the device. (See page 15.

) *2 Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track. *3 For Bluetooth operations, refer also to the instructions supplied with the Bluetooth Adapter. 38 Symptoms · The unit does not make pairing with the Bluetooth device. Remedies/Causes · Enter the same PIN code for both the unit and target device. · Select the device name from "SPECIAL," then try to connect again.

(See page 15.) · Try to pair/connect from the Bluetooth device. Adjust the microphone unit position. · Reduce the distance between the unit and the Bluetooth cellular phone. · Move the car to a place where you can get a better signal reception.

· Reduce the distance between the unit and the Bluetooth audio player. · Disconnect the device connected for "BT-PHONE." · Turn off, then turn on the unit. · Connect the player again, when the sound is not yet restored. Check whether the connected audio player supports AVRCP (Audio Video Remote Control Profile). (Operations depend on the connected audio player.) Insert a disc into the magazine. Insert the magazine. Connect this unit and the CD changer correctly and press the reset button of the CD changer. Press the reset button of the CD changer.

Reset the unit (see page 3). Move to an area with stronger signals. Connect this unit and the DAB tuner correctly and reset the unit (see page 3). Check the cords and connections. Reconnect this unit and the DAB tuner correctly and reset the unit (see page 3). · Echo or noise occurs. · Phone sound quality is poor. Bluetooth *3 · The sound is interrupted or skipped during playback of a Bluetooth audio player. · The connected audio player cannot be controlled. · "NO DISC" appears on the display.

· "NO MAGAZINE" appears on the display. · "RESET 8" appears on the display. · "RESET 1" "RESET 7" appears on the display. · The CD changer does not work at all. · "noSIGNAL" appears on the display.

· "RESET 8" appears on the display. DAB · "ANTENNA NG" appears on the display. · The DAB tuner does not work at all. CD changer Continued on the next page REFERENCES 39 ENGLISH Symptoms Remedies/Causes · Check the connecting cable and its connection. · Update the firmware version of the iPod/iPhone.

· Charge the battery of the iPod/iPhone. · Reset the iPod/iPhone. · Check whether "IPOD SWITCH" setting is appropriate (see page 30). Deactivate the equalizer either on this unit or the iPod/iPhone. Check whether "IPOD SWITCH" setting is appropriate (see page 30). The headphones are disconnected during playback. Restart the playback operation (see pages 20 and 21). No tracks are stored. Import tracks to the iPod/iPhone. Check whether the connected iPod/iPhone is compatible with this unit (see page 35).

No tracks are stored. Import tracks to the iPod. Reset the iPod. · Check the connecting cable and its connection. · Charge the battery. · Disconnect the headphones from the iPod nano. · Update the firmware version of the iPod nano. Disconnect the adapter from both this unit and iPod.



[You're reading an excerpt. Click here to read official JVC KD-R701 user guide](http://yourpdfguides.com/dref/2361339)

<http://yourpdfguides.com/dref/2361339>