



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for JVC KD-R801. You'll find the answers to all your questions on the JVC KD-R801 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual JVC KD-R801
User guide JVC KD-R801
Operating instructions JVC KD-R801
Instructions for use JVC KD-R801
Instruction manual JVC KD-R801

Having TROUBLE with operation?
Please reset your unit
Refer to page of How to reset your unit

Vous avez des PROBLÈMES de fonctionnement?
Réinitialisez votre appareil
Référez-vous à la page intitulée Comment réinitialiser votre appareil

ENGLISH

FRANÇAIS

CD RECEIVER
RÉCEPTEUR CD

KD-R801

Detachable

MP3
WMA

Bluetooth[®] Radio Data System

COMPACT
DIGITAL AUDIO
TEXT

Made for
iPod

Works with
iPhone

For canceling the display demonstration, see page 4.
Pour annuler la démonstration des affichages, référez-vous à la page 4.

For installation and connections, refer to the separate manual.
Pour l'installation et les raccordements, se référer au manuel séparé.

JVC

Dear Customer,
This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.
European representative of Victor Company of Japan, Limited is:
JVC Technical Services Europe GmbH
Postfach 10 05 04
61145 Friedberg
Germany

Cher(e) client(e),
Cet appareil est conforme aux directives et normes européennes en vigueur concernant la compatibilité électromagnétique et à la sécurité électrique.
Représentant européen de la société Victor Company of Japan, Limited:
JVC Technical Services Europe GmbH
Postfach 10 05 04
61145 Friedberg
Allemagne

INSTRUCTIONS
MANUEL D'INSTRUCTIONS

EN, FR
© 2009 Victor Company of Japan, Limited

0209DTSMDTJEIN

GET0600-003A
[EX/EU]



[You're reading an excerpt. Click here to read official JVC KD-R801 user guide](http://yourpdfguides.com/dref/2708250)
<http://yourpdfguides.com/dref/2708250>

Manual abstract:

CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments. @ @Battery Products Information for Users on Disposal of Old Equipment and Batteries [European Union only] These symbols indicate that the product and the battery with this symbol should not be disposed as general household waste at its end-of-life. If you wish to dispose of this product and the battery, please do so in accordance with applicable national legislation or other rules in your country and municipality. By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health. Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead. Do not raise the volume level too much, as this will block outside sounds, making driving dangerous. Stop the car before performing any complicated operations. If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit. How to read this manual: is used to indicate turn the control dial · To make a selection, then press to confirm the selection.

This unit is equipped with the steering wheel remote control function. Some of the operations might be different with the steering wheel remote control function. How to reset your unit If the temperature inside the car is below 0°C, the movement of animation and text scroll will be halted on the display to prevent the display from being blurred. appears on the display. When the temperature increases, and the operating temperature is resumed, these functions will start working again.

Digital devices (CD/USB) produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level. Be careful not to drop the disc when it ejects. If this does not work, reset your unit. Press and hold until the main menu is called up.

Adjust the hour, then press control dial once to proceed to adjust the minute. When the power is turned off: Check the current clock time How to reset your unit . Using the Bluetooth cellular phone . 17 · Using the Bluetooth audio player . When connected with the USB input terminal. 21 · When connected with the interface adapter . Attenuate the sound (if the power is on). Turn off the power [Hold]. BT FRONT/BT REAR (Phone): Switch the conversation media during a phone call conversation. *1 Also known as "Control dial" in this manual.

*2 You can still adjust the volume during pause when the selected source is CD/USB FRONT/USB REAR/iPod FRONT/iPod REAR/BT FRONT/ BT REAR/iPod. Before resume playback, check to be sure that you have not raise the volume level too much. *4 You cannot select these sources if they are not ready or not connected. *5 You cannot select these sources if they were disabled in the <SET UP> menu (see <Source Select> in "Menu operations" on page 31). *6 You can use this function only when <iPod Mode> is available for the connected iPod (see pages 21 and 38). Battery shall not be exposed to excessive heat such as sunshine, fire, or the like. Turns the power on if pressed briefly or Attenuates the sound when the power is on. Turns the power off if pressed and held. Switches the conversation media during a phone call conversation if pressed briefly. While listening to an Apple iPod: Connected with the interface adapter: Pauses or resumes playback with D .

While listening to an iPod (in menu selecting mode): Connected with the interface adapter: Selects an item if pressed briefly. Do not install any battery other than CR2025 or its equivalent. Store the battery in a place where children cannot reach. Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire. Do not leave the battery with other metallic materials.

Do not poke the battery with tweezers or similar tools. Wrap the battery with tape and insulate when throwing away or saving it. You can also search for a station manually--Manual Search. Hold either one of the buttons until "M" appears on the display, then press it repeatedly. When receiving an FM stereo broadcast with sufficient signal strength, the indicator lights up on the display.

When an FM stereo broadcast is hard to receive, activate monaural mode for better reception. While listening to a station, enter "SSM" screen. Select the preset number range you want to store. Local FM stations with the strongest signals are searched and stored automatically. To preset other 6 stations, repeat from step 1 again. 5 MHz into preset number "4. The following features are available only for FM Radio Data System stations. You can tune in to a station broadcasting your favorite programme by searching for a PTY code. TA Standby Reception allows the unit to switch temporarily to Traffic Announcement (TA) from any source other than AM. The volume changes to the preset TA volume level if the current level is lower than the preset level (see page 30).

(This occurs when you are listening to an FM station without the Radio Data System signals required for TA Standby Reception.) To activate the reception, tune in to another station providing these signals. When driving in an area where FM reception is not sufficient enough, this unit automatically tunes in to another FM Radio Data System station of the same network, possibly broadcasting the same programme with stronger signals (see the illustration below). When shipped from the factory, Network-Tracking Reception is activated. PTY Standby Reception allows the unit to switch temporarily to your favorite PTY programme from any source other than AM. To activate the reception, tune in to another station providing these signals. The unit will not switch to Traffic Announcement or PTY programme when a call connection is established through "BT FRONT/BT REAR. Usually when you select a preset number, the station preset in that number is tuned in. If the signals from the FM Radio Data System preset station are not sufficient for good reception, this unit, using the AF data, tunes in to another frequency possibly broadcasting the same programme as the original preset station is broadcasting. The unit takes some time to tune in to another station using programme search.

All tracks will be played repeatedly until you change the source or eject the disc. Pressing (or holding) the following buttons allows you to. For MP3/WMA discs, select the desired folder, then the desired track by repeating the control dial procedures. You can use only one of the following playback modes at a time. [Press] Select track [Hold] Reverse/fast-forward track : MP3/WMA: Repeats current folder : MP3/WMA: Randomly plays all tracks of current folder, then tracks of next folders : Randomly plays all tracks To cancel repeat play or random play, select "Off".



You're reading an excerpt. Click here to read official JVC KD-R801 user guide
<http://yourpdfguides.com/dref/2708250>

This unit is equipped with two USB input terminals (on the control panel and USB cable from the rear of the unit). You can use these two terminals at the same time. This unit can play MP3/WMA/WAV tracks stored in a USB mass storage class device (such as a USB memory, Digital Audio Player, portable HDD, etc. All tracks will be played repeatedly until you change the source or disconnect a device. USB cable from the rear of the unit Playback starts from where it has been stopped previously.

If a different USB device is currently attached, playback starts from the beginning. Straightly pull it out from the USB input terminal. You can operate the USB device in the same way you operate the files on a disc. You can listen to WAV files by following the MP3/ WMA file operations listed on pages 12 and 13.

Avoid using the USB device if it might hinder your safety driving. While "Reading" is shown on the display: Do not pull out and attach the USB device repeatedly. Do not pull out or attach another USB device. Do not start the car engine if a USB device is connected. This unit may not be able to play the files depending on the type of USB device. Operation and power supply may not work as intended for some USB devices.

Make sure all important data has been backed up to avoid losing the data. In this case, disconnect the USB device then reset this unit and the USB device. Some USB devices may not work immediately after you turn on the power. The detect time and response time may be very long for some USB devices (such as Digital Audio Player, HDD, etc. For more details about USB operations, see pages 36 and 37. This unit supports the following Bluetooth profiles; HFP (Hands-Free Profile) 1. The Bluetooth devices can be connected without cables and communicate with each other. Refer to the list (included in the box) to see the countries where you may use the Bluetooth® function. You can operate Bluetooth devices through the unit as follows: · receiving a call · Making a call--from phone book, from call history (dialed number/received call), by dialing number, by voice command · informing you of the arrival of a SMS (Short Message Service) · Play back a Bluetooth audio player Operate the device to turn on its Bluetooth function. Only one USB Bluetooth Adapter can be detected at a time.

USB cable from the rear of the unit You can perform the following operations from the <SET UP> menu. When you connect a Bluetooth device to the unit for the first time, make pairing between the unit and the device. pairing allows Bluetooth devices to communicate with each other. To make pairing, you may need to enter the PIN (Personal Identification Number) code of your Bluetooth device you want to connect. Once the connection is established, it is registered in the unit even if you reset the unit.

Up to five devices can be registered in total. Only one device for Bluetooth phone and one for Bluetooth audio can be connected at a time. Use the Bluetooth device to search and connect. On the device to be connected, enter the same PIN code you have just entered for this unit. "Wait Pair" appears, then "Pairing OK" or "Connected [Device Name]" appears on the display when the connection is established.

Now you can use the device through the unit. Use <Connect Phone> or <Connect Audio> (or activate <Auto Connect>) to connect the same device from next time on. You can enter any number you like (1-digit to 16-digit number). 1 Move to the next (or previous) number position. " appears, then "Connected [Device Name]" appears on the display when the device is connected. [Turn] = [Press] "Disconnecting" appears, then "Disconnected [Device Name]" appears on the display when the device is disconnected. Using the Bluetooth cellular phone Making a call When the sound is stopped or interrupted during the use of a Bluetooth device, turn off, then turn on the unit. If the sound is not yet restored, connect the device again. How to enter phone number "Dialed Calls" *: Shows the list of the phone numbers you have dialed. "Phonebook": Shows the name/phone number of the phone book of the unit.

go to the following step. To copy the phone book memory, see pages 33 and 34. "Voice Dial" (Only accessible when the connected cellular phone has the voice recognition system): Speak the name (registered words) you want to call. * Displays only when the dialed or received number is made through the unit. When a call comes in. How to delete phone number The unit answers the incoming calls automatically, see page 33. To answer the incoming call when <Auto Answer> is deactivated: or · To adjust the microphone volume during a phone call conversation: 2 Display the list of phone numbers using one Of the calling method (see step 2 of "Making a call" on page 17). To end the call or reject an incoming call or When <Auto Answer> is set to <Reject>, the unit rejects any incoming calls. During a phone call conversation. Then, continue your conversation using the other media.

Operations may be different according to the connected Bluetooth device. Select "Deu can keep listening to the same programme by activating the Alternative Frequency Reception. While receiving a DAB service: When driving in an area where a service cannot be received, this unit automatically tunes in to another ensemble or FM Radio Data System station, broadcasting the same programme. While receiving an FM Radio Data System station: When driving in an area where a DAB service is broadcasting the same programme as the FM Radio Data System station is broadcasting, this unit automatically tunes in to the DAB service. When shipped from the factory, Alternative Frequency Reception is activated.

Listening to the other external components you can connect an external component to: · EXT IN: CD changer jack on the rear of this unit using the following adapters (not supplied): KS-U57: For connecting the component with pin jacks KS-U58: For connecting the component with stereo mini jack Preparation: Make sure <Ext In> is selected in the <Source Select> = <Ext Input> setting, see page 31. Turn on the connected component and start playing the source. Adjust the sound as you want (see page 26). You can select a preset sound mode suitable to the music genre from the <SET UP> menu. Storing your own sound mode You can store your own adjustments in memory.

Repeat steps 3 and 4 to adjust other frequency ranges. Off : Display demonstration will be activated automatically if no operation is done for about 20 seconds, [4]. : Cancels. : Clock time is shown on the display at all times when the power is turned off. : Cancels; pressing DISP will show the clock time for about 5 seconds when the power is turned off. : Adjust the hour, then the minute, [4]. : Select a preset sound mode suitable to the music genre, [26].



[You're reading an excerpt. Click here to read official JVC KD-R801 user guide](http://yourpdfguides.com/dref/2708250)

<http://yourpdfguides.com/dref/2708250>

) : Changes the display and button (except T/P/ /0) illumination during menu, list search and playback mode operations. *1 If the power supply is not interrupted by turning off the ignition key of your car, it is recommended to select <Off> to save the car's battery. The display will change to the original color when you answer the call or the incoming call stops.

When the unit receive a SMS, the display only illuminate in blue. Loud1/Loud2/ : Boost low and high frequencies to produce a Loud3 well-balanced sound at a low volume level. Level 5 -- Level +5 (Initial: Level 0) : Preset the volume adjustment level of each source (except FM), compared to the FM volume level.

The volume level will automatically increase or decrease when you change the source. Before making an adjustment, select the source you want to adjust. LPF 55Hz/LPF 85Hz/LPF 120Hz: Frequencies higher than 55 Hz/85 Hz/120 Hz are cut off. 62Hz/95Hz/ : Frequencies lower than 62 Hz/95 Hz/135 Hz are cut off. 135Hz · Off : All signals are sent to the front/rear speakers. Off : Activates the key touch tone. *4 If you are using a two-speaker system, set the fader level to <0>.

Any hour Any hour (Initial: 187) : For track information: scrolls the track information only once. Off : For track information: cancels. for DAB text: shows only headline if any. Pressing DISP for more than one second can scroll the display regardless of the setting. Off : Shows the Tag information while playing MP3/WMA/ WAV tracks.

: Positive pattern will be selected during the day time *9; while negative pattern will be used during the night time *9. : Adjust the display contrast to make the display indications clear and legible. @@@@ Initial selected item depends on your iPod/iPhone setting. @@ *15 Not required for Bluetooth. @@@@ Appears only when a Bluetooth phone is connected.

diald Calls: Show the list of the numbers you have dialed. Received Calls: Show the list of the numbers you have received. Missed Calls: Show the list of the numbers you have missed. Voice Dial: Display the voice dialling screen. @@@@ " On: The unit answers the incoming calls automatically. Off: The unit does not answer the calls automatically. Answer the calls manually. @@@@ Off: The unit does not inform you of the arrival of a message. @@@@ You can preset the source of the phone book you want to synchronize. @@@@ AutoAccess Phone: Auto synchronize from the phone memory.

You can preset the ringing source when a call/SMS comes in. In Unit: Call: Select your preferred ring tone when a call comes in. @@@@ Shows the unit name. * Displayed only when a Bluetooth phone/audio player is connected. You can copy the phone book memory of a cellular phone into the unit. Enter the PIN code to the unit to transfer the phone book into the unit. More about this unit basic operations Turning on the power By pressing SRC on the unit, you can also turn on the power. If you change the source while listening to a disc, playback stops. Next time you select "CD" as the playback source, playback will start from where it had been stopped previously. If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust.

After ejecting a disc or removing a USB device, "No Disc" or "No USB" appears and you cannot operate some of the buttons. Insert another disc, reattach a USB device, or press SRC to select another playback source. Turning off the power If you turn off the power while listening to a track, playback will start from where it had been stopped previously next time you turn on the power. All previously stored stations are erased and the stations are stored anew. When storing a station manually, the previously preset station is erased when a new station is stored in the same preset number.

This unit can only play back files of the same type as those which are detected first if a disc includes both audio CD (CD-DA) files and MP3/WMA files. This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing. Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, or for the following reasons: Discs are dirty or scratched. Moisture condensation has occurred on the lens inside the unit. The pickup lens inside the unit is dirty.

The files on the CD-R/CD-RW are written using the "Packet Write" method. CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs. Network-Tracking Reception requires two types of Radio Data System signals--PI (Programme Identification) and AF (Alternative Frequency) to work correctly. Without receiving these data correctly, Network-Tracking Reception will not operate correctly. If a Traffic Announcement is received by TA Standby Reception, the volume level automatically changes to the preset level (TA Volume) if the current level is lower than the preset level. On the other hand, Network-Tracking Reception cannot be deactivated without deactivating Alternative Frequency Reception. The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended. If no operation is done for about 30 seconds after pressing MENU button or control dial, the operation will be canceled. When a disc is inserted upside down, "Please Eject" appears on the display.

In this manual, words "track" and "file" are interchangeably used. While fast-forwarding or reversing on an MP3/WMA/ WAV file, you can only hear intermittent sound. File/folder list may not appear correctly if too many hierarchies and folders are used. Do not use the following CD-Rs or CD-RWs: Discs with stickers, labels, or a protective seal stuck to the surface. Discs on which labels can be directly printed by an ink jet printer. Using these discs under high temperature or high humidity may cause malfunctions or damage to the unit. The search function works but search speed is not constant. Playing MP3/WMA/WAV tracks from a USB device While playing from a USB device, the playback order may differ from the one from other players. This unit may be unable to play back some USB devices or some files due to their characteristics or recording conditions. Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.

When connecting a USB mass storage class device, refer also to its instructions. This unit may not work properly with some USB hub or USB card reader. This unit is compatible with the USB Full-Speed. If the connected USB device does not have the correct files, "No File" appears. This unit can show ID3 Tag (Version 1).

This unit can play back MP3/WMA/WAV files meeting the conditions below: MP3: Bit rate: 32 kbps -- 320 kbps (MPEG-1) 8 kbps -- 160 kbps (MPEG-2) Sampling frequency: 48 kHz, 44.



[You're reading an excerpt. Click here to read official JVC KD-R801 user guide](http://yourpdfguides.com/dref/2708250)
<http://yourpdfguides.com/dref/2708250>

This unit can play back MP3/WMA files with the extension code <. This unit can show the names of albums, artists (performer), and Tag (Version 1. This unit can play back MP3/WMA files meeting the conditions below: Bit rate of MP3/WMA: 5 kbps -- 320 kbps Sampling frequency of MP3: 48 kHz, 44. The maximum number of characters for file/folder names is 25 characters (including <.

This unit can recognize a total of 20 000 files and 2 000 folders (999 files per folder). However, the display can show until 999 folders/files. This unit can play back files recorded in VBR (variable bit rate). files recorded in VBR have a discrepancy in the elapsed time display , and do not show the actual elapsed time. In particular, this difference becomes noticeable after performing the search function. This unit cannot play back the following files: MP3 files encoded in MP3i and MP3 PRO format. WMA files which are not based upon Windows Media ® Audio. 1 kHz Channel: 1 ch/2 ch This unit can play back MP3 files recorded in VBR (variable bit rate). The maximum number of characters for folder and file names is 25 characters (including <. This unit can recognize a total of 20 000 files and 2 000 folders (999 files per folder).

However, the display can shows until 999 folders/files. The unit cannot recognize a USB mass storage class device whose rating is other than 5 V and exceeds 500 mA. USB devices equipped with special functions such as data security functions cannot be used with the unit. Do not use a USB device with 2 or more partitions. When connecting with a USB cable, use the USB 2. 0 cable. This unit may not recognized some of the USB device connected through a USB card reader. This unit may not play back files in a USB device properly when using a USB extension cord. This unit cannot assure proper functions or supply power to all types of USB devices. If you turn off the unit, detach the control panel, or unplug the USB Bluetooth Adapter during a phone call conversation, the Bluetooth connection is disconnected.

When the unit is turned off, the device is disconnected. These icons indicate the phone type of number entries in the Phonebook : Cellular phone : Household phone : Office : General : Other than above : Unknown These icons indicate the type of connected phone/ audio devices : Phone only : Phone/Audio : Audio only If "Error" appears again, check if the device supports the function you have tried. The unit is preparing to use the Bluetooth function. If the message does not disappear, turn off and turn on the unit, then connect the device again (or reset the unit). Reset the unit and try the operation again.

if "Please Reset. " appears again, consult your nearest JVC car audio dealers. While driving, do not perform complicated operation such as dialing the numbers, using phone book, etc. When you perform these operations, stop your car in a safe place. Some Bluetooth devices may not be connected to this unit depending on the Bluetooth version of the device.

*If you connect a different USB Bluetooth Adapter, all the registered devices and information will be cleared. This unit may not work for some Bluetooth devices. Connecting condition may vary depending on the circumstances around you. You can control the following types of iPods/iPhone: (A) Connected with the USB cable: iPod with video (5th Generation) *1, *2 iPod classic *1, *2 iPod nano iPod nano (2nd Generation) iPod nano (3rd Generation) *1, *2 iPod nano (4th Generation) *1, *2 iPod Touch *1, *2 iPod Touch (2nd Generation) *1, *2 iPhone/iPhone 3G *1, *2 (B) Connected with the interface adapter: iPod with Click Wheel (4th Generation) iPod mini iPod photo iPod with video (5th Generation) iPod classic iPod nano iPod nano (2nd Generation) iPod nano (3rd Generation) iPod nano (4th Generation) *3 1 It is not possible to browse video files on the "Videos" * menu. *2 <iPod Mode> is available (see page 21). *3 It is not possible to charge the battery through this unit. If the iPod does not play correctly, please update your iPod software to the latest version. For details about updating your iPod, visit <<http://www>. When you turn on this unit, the iPod is charged through this unit. The song order displayed on the selection menu of this unit may differ from that of the iPod.*

The text information may not be displayed correctly: Some characters such as accented letters cannot be shown correctly on the display. Communication between the iPod and the unit is not stable. This unit can display up to 40 characters for "iPod" and up to 64 characters for "iPod FRONT/iPod REAR. " Notice: When operating an iPod, some operations may not be performed correctly or as intended. In this case, visit the following JVC web site: <<http://www>. Only the primary DAB service can be preset even when you store a secondary service. A previously preset DAB service is erased when a new DAB service is stored in the same preset number. <Auto> setting for <Dimmer> may not work correctly on some vehicles, particularly on those having a control dial for dimming. In this case, change the <Dimmer> setting to any other than <Auto>. If you change the <Amplifier Gain> setting from <High Power> to <Low Power> while the volume level is set higher than "Vol 30", the unit automatically changes the volume level to "Vol 30.

JVC bears no responsibility for any loss of data in an iPod/iPhone and/or USB mass storage class device while using this System. What appears to be trouble is not always serious. Check the following points before calling a service center. symptoms · Sound cannot be heard from the speakers. general · The unit does not work at all.

Disc cannot be played back. CD-R/CD-RW cannot be played back. Remove the control panel, wipe the connector, then attach it again (see page 3). Finalize the CD-R/CD-RW with the component which you used for recording. Disc can neither be played back nor ejected.

Disc sound is sometimes interrupted. Stop playback while driving on rough roads. This occurs sometimes due to over-heating. Disc cannot be played back. Use a disc with MP3/WMA tracks recorded in a format compliant with ISO 9660 Level 1, Level 2, Romeo, or Joliet.) Do not use too many hierarchical levels and folders. the playback order is determined by the file name. Folder with numbers on the initial as their names are sorted in numerical order. However, folder with no numbers on the initial of their names are sorted according to the file system of the CD. This sometimes occurs during playback.

This is caused by how the tracks are recorded on the disc (eg. Skip to the next track encoded in an appropriate format or to the next non-copy-protected WMA track. This unit can only display letters (capital: A Z, small: a z), numbers, and a limited number of symbols (see page 39).



[You're reading an excerpt. Click here to read official JVC KD-R801 user guide](http://yourpdfguides.com/dref/2708250)
<http://yourpdfguides.com/dref/2708250>

The track played back is not an MP3/WMA/WAV track. Do not use too many hierarchy or folders. Turn off the power then on again. Do not pull out or connect the USB device repeatedly while "Reading" is displayed on the display. A longer readout time is required ("Reading" keeps flashing on the display).

mP3/WMA playback · Tracks do not play back in the order you have intended them to play. The elapsed playing time is not correct.

*Correct characters are not displayed (e. * Folder that is physically empty or folder that contains data but does not contain valid MP3/WMA track. Folders with numbers on the initial of their names are sorted in numerical order. However, folders with no numbers on the initial of their names are sorted according to the file system of the USB device. Check whether the connected USB device or the iPod/ iPhone is compatible with this unit.*

Check whether the track is a playable file format. This unit can only display letters (capital: A Z, small: a z), numbers, and a limited number of symbols (see page 39). The tracks have not been properly copied into the USB device. Copy tracks again into the USB device, and try again. When "Wait Pair" appears on the display, search from the Bluetooth device again.

Enter the same PIN code for both the unit and target device. Reduce the distance between the unit and the Bluetooth cellular phone. Move the car to a place where you can get a better signal reception. Tracks/folders are not played back in the order you have intended. Correct characters are not displayed (e. While playing a track, sound is sometimes interrupted. The unit does not detect the Bluetooth device. The unit does not make pairing with the Bluetooth device.

@@Reduce the distance between the unit and the Bluetooth audio player. Turn off, then turn on the unit.

Connect the player again, when the sound is not yet restored. @@You may have tried to copy the same entries (as stored) to the unit. @@@@The headphones are disconnected during playback. Check whether the connected iPod/iPhone is compatible with this unit (see page 38). Disconnect the adapter from both this unit and iPod. then , connect it again. Check the connection between the adapter and this unit. Move to an area with stronger signals. Connect this unit and the DAB tuner correctly and reset the unit (see page 3). check the cords and connections.

Reconnect this unit and the DAB tuner correctly and reset the unit (see page 3). Only when connecting with the interface adapter The iPod's controls do not work after disconnecting from this unit. No sound can be heard when connecting an iPod nano. Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Other trademarks and trade names are those of their respective owners.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. "Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. How to clean the connectors frequent detachment will deteriorate the connectors. To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

To keep discs clean A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge. Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc. New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc. To remove these rough spots, rub the edges with a pencil or ball-point pen, etc. Moisture may condense on the lens inside the unit in the following cases: · If it becomes very humid inside the car. Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture has evaporated. Do not use the following discs: When removing a disc from its Center holder case, press down the center holder of the case and lift the disc out, holding it by the edges.

Do not touch its recording surface. When storing a disc in its case, gently insert the disc around the center holder (with the printed surface facing up). Make sure to store discs in cases after use. Transparent or semitransparent parts on its recording area Maximum Power Output: Continuous Power Output (RMS): Front/Rear: Load Impedance: Tone Control Range: AUDIO AMPLIFIER SECTION Low: Mid: High: Frequency Response: Signal-to-Noise Ratio: Line-Out Level/Impedance: Subwoofer-Out Level/Impedance: Output Impedance: Other Terminal: Front/Rear: Front/Rear: 50 W per channel 19 W per channel into 4 , 40 Hz to 20 000 Hz at no more than 0.) Mass: Design and specifications are subject to change without notice. .



[You're reading an excerpt. Click here to read official JVC KD-R801 user guide](http://yourpdfguides.com/dref/2708250)

<http://yourpdfguides.com/dref/2708250>